

[Manuals.plus](#) /

> [Innsky](#) /

> Innsky Replacement Air Fryer Basket Instruction Manual - Model IS-EE004 5.5L

Innsky IS-EE004

Innsky Replacement Air Fryer Basket

MODEL: IS-EE004 5.5L

1. PRODUCT OVERVIEW

This replacement basket is specifically designed for the Innsky IS-EE004 5.5L Air Fryer. It features a durable non-stick coating for easy food release and simplified cleaning. The basket assembly includes both an inner and an outer basket, designed for optimal air circulation during cooking.



Image: The Innsky replacement air fryer basket, showing the inner basket detached from the outer basket.

2. COMPATIBILITY

This accessory is exclusively compatible with the **Innsky Air Fryer model IS-EE004**, with a capacity of 5.5 liters. It is not suitable for air fryers of other brands or different Innsky models. Please verify your air fryer model number before use.

Passend für 5,5 l Innsky Heißluftfritteuse

Inklusive Innenkorb & Außenkorb



Image: A diagram illustrating the dimensions of the inner and outer baskets, confirming compatibility with the Innsky 5.5L air fryer.

3. SETUP AND INSTALLATION

The replacement basket is designed for easy insertion and removal from your Innsky Air Fryer. To separate the inner basket from the outer basket for cleaning or serving, follow these steps:

1. Locate the transparent safety button cover on the handle of the basket.
2. Slide the safety button cover forward to expose the release button underneath.
3. Press the exposed release button firmly and lift the inner basket straight up and out of the outer basket.

To reassemble, align the inner basket with the outer basket and gently lower it until it clicks securely into place. Ensure the safety button cover is returned to its original position.

Entfernen Sie den Korb in 3 Schritten



Image: A visual guide demonstrating the three steps to safely separate the inner basket from the outer basket using the release button.

4. OPERATING INSTRUCTIONS

The replacement basket functions identically to the original basket provided with your Innsky IS-EE004 Air Fryer. To use:

1. Ensure the inner basket is securely placed within the outer basket.
2. Place your food items into the inner basket. Avoid overfilling to allow for proper air circulation.
3. Slide the assembled basket into the main unit of your Innsky IS-EE004 Air Fryer.
4. Refer to your air fryer's main instruction manual for specific cooking times, temperatures, and operational procedures.

The design of the basket facilitates efficient hot air circulation, which is crucial for even cooking and crisp results.

Problemlose Reinigung

Komplett antihaftbeschichtet und
spülmaschinenfest für eine
schnelle Reinigung



Image: A diagram showing arrows indicating the path of hot air circulation through the perforated inner basket, enhancing cooking efficiency.



Image: A collage showcasing different types of food that can be prepared using an air fryer, such as crispy chicken, salmon, and pastries.

5. MAINTENANCE AND CLEANING

To ensure the longevity of your replacement basket and maintain its non-stick properties, follow these cleaning guidelines:

- **Cool Down First:** Do not clean the basket while it is still hot. Always allow it to cool down completely before washing to prevent damage to the non-stick coating.
- **Gentle Cleaning:** Wash with a non-abrasive sponge and mild dish soap. Avoid using stainless steel sponges, abrasive brushes, or harsh chemical cleaners, as these can scratch and damage the non-stick surface.
- **Dishwasher Safe:** Both the inner and outer baskets are dishwasher safe for convenient and thorough cleaning.

Erleichtert die Heißluftzirkulation

Macht das Kochen effizienter



Image: A hand washing the air fryer basket under a faucet, illustrating the ease of cleaning due to its non-stick coating and dishwasher-safe design.

6. SPECIFICATIONS

Feature	Detail
Brand	Innsky
Model	IS-EE004
Capacity	5.5 Liters
Package Dimensions	36.79 x 32.79 x 18.6 cm
Item Weight	1.89 Kilograms
Material	Non-stick coated
Dishwasher Safe	Yes

7. TROUBLESHOOTING

If you encounter issues with your replacement basket, consider the following:

- **Basket Not Fitting:** Ensure your air fryer is the Innsky IS-EE004 5.5L model. This basket is not universally compatible.
- **Food Sticking:** Ensure you are using a small amount of oil or cooking spray, especially for foods prone to sticking. Always clean the basket thoroughly after each use as per the cleaning instructions.
- **Difficulty Separating Baskets:** Ensure the safety button cover is fully slid forward and the release button is pressed firmly. Do not force the baskets apart.

8. WARRANTY AND SUPPORT

Innsky provides a **12-month warranty** for this replacement air fryer basket. For any questions, concerns, or support needs regarding your product, please contact Innsky customer service. Professional customer service is available 24 hours a day to assist you.



WIR KÜMMERN UNS UM SIE

		
Austausch/Rückgabe ohne Verrenkungen	12 Monate Garantie	24H Professioneller Kundendienst rund um die Uhr

Image: Innsky customer service team ready to provide support, highlighting 12-month warranty and 24-hour professional assistance.