

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

> [VGR](#) /

> [VGR V-212 Professional Hair Clipper User Manual](#)

VGR V-212

VGR V-212 Professional Hair Clipper User Manual

Model: V-212 | Brand: VGR

INTRODUCTION

Thank you for choosing the VGR V-212 Professional Hair Clipper. This manual provides essential information for the safe and effective use, maintenance, and care of your new hair clipper. Please read it thoroughly before first use and keep it for future reference.

SAFETY INFORMATION

- Always disconnect the trimmer from the power source before cleaning or performing any maintenance.
- Do not use this appliance on wet hair. Ensure hair is dry before use.
- Keep the appliance out of reach of children and pets to prevent accidents.
- Avoid direct contact of the blades with eyes and sensitive skin areas.
- Only use the appliance for its intended purpose as described in this manual.
- Do not immerse the appliance in water or other liquids.
- If the charging cable or appliance is damaged, do not use it. Contact customer support for assistance.

PACKAGE CONTENTS

Your VGR V-212 Professional Hair Clipper package should include:

- VGR V-212 Hair Clipper
- Zero T-blade (pre-installed)
- Multiple comb guides (e.g., 1mm, 2mm, 3mm)
- USB Charging Cable
- Cleaning Brush
- Blade Oil
- User Manual

SETUP

1. **Initial Charge:** Before first use, fully charge the hair clipper. Refer to the 'Charging' section for detailed

instructions.

2. **Blade Inspection:** Ensure the zero T-blade is securely attached and free from any damage.
3. **Attach Comb Guide:** Select the desired comb guide (e.g., 1mm, 2mm, or 3mm) and securely attach it to the clipper head. Ensure it clicks into place.



This image displays the VGR V-212 hair clipper blade and three detachable comb guides, indicating available cutting lengths of 1mm, 2mm, and 3mm for precise trimming.

CHARGING

The VGR V-212 hair clipper is equipped with two 600 mAh rechargeable batteries and supports USB charging.

1. **Connect:** Insert the USB charging cable into the charging port on the clipper.
2. **Power Source:** Connect the other end of the USB cable to a USB power adapter (not always included) or a compatible USB port (e.g., computer, power bank).
3. **Charging Indicator:** The charging indicator light will illuminate, typically red, to show that the device is charging.
4. **Full Charge:** A full charge usually takes approximately 8 hours. The indicator light may change color (e.g., green or off) when fully charged.
5. **Disconnect:** Once fully charged, disconnect the charging cable from the clipper and the power source.



Ergonomic body

Side of the fuselage
non-slip rhombic texture
feel comfortable

This image highlights the ergonomic design of the VGR V-212 hair clipper, featuring a non-slip rhombic texture on the side of the fuselage for a comfortable and secure grip during use. The charging specifications (DC3V=3W, Charge Time: 8H) are visible on the back.

OPERATING INSTRUCTIONS

The VGR V-212 is designed for precise trimming of edges and facial hair.

1. **Prepare Hair:** Ensure hair is clean and dry before trimming.
2. **Select Comb Guide:** Choose the appropriate comb guide for your desired hair length. For a closer trim, use a smaller guide or no guide for a zero-gap cut.
3. **Turn On:** Press the power button to turn on the clipper.
4. **Trimming:** Hold the clipper with the blade flat against the skin or at a slight angle, moving against the direction of hair growth. Use smooth, even strokes.
5. **Edges and Details:** For precise edging and detailing, remove the comb guide and carefully use the zero T-blade.
6. **Turn Off:** After use, press the power button to turn off the clipper.

MAINTENANCE AND CLEANING

Regular cleaning and maintenance ensure optimal performance and longevity of your clipper.

- 1. Disconnect Power:** Always ensure the clipper is turned off and disconnected from the charging cable before cleaning.
- 2. Remove Hair:** Use the provided cleaning brush to remove loose hair from the blades and the clipper body.
- 3. Clean Blades:** For a more thorough clean, you may carefully detach the blade assembly (refer to specific instructions if available in the physical manual). Rinse the blades under running water if they are designed to be washable, otherwise, wipe with a damp cloth. Ensure blades are completely dry before reattaching or storing.
- 4. Oil Blades:** Apply a few drops of the provided blade oil to the teeth of the blades after each cleaning or regularly. Turn on the clipper for a few seconds to distribute the oil evenly. This helps maintain blade sharpness and reduces friction.
- 5. Wipe Body:** Wipe the body of the clipper with a clean, dry cloth.
- 6. Storage:** Store the clipper in a cool, dry place, away from direct sunlight and moisture.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Clipper does not turn on.	Battery is depleted.	Charge the clipper fully.
Poor cutting performance.	Blades are dull, dirty, or not oiled.	Clean and oil the blades. If blades are dull, consider replacement (contact support).
Clipper pulls hair.	Blades are dirty, not oiled, or hair is wet.	Clean and oil blades. Ensure hair is dry. Trim at a slower pace.
Clipper gets hot.	Extended use or lack of lubrication.	Allow the clipper to cool down. Ensure blades are clean and oiled.

SPECIFICATIONS

Model Number	V-212
Brand	VGR
Blade Material	High Carbon Stainless Steel
Power Source	Rechargeable Battery (2 x 600 mAh)
Charging Method	USB Charging
Charging Time	Approx. 8 hours
Recommended Uses	Edges, Facial Hair
Color	Blue and Silver

Item Weight	350 grams
Country of Origin	China

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the warranty card included with your product or contact VGR customer service through their official website or the retailer where the product was purchased. Keep your proof of purchase for warranty claims.