

HEYSONG B18L

HEYSONG Waterproof Shower Bluetooth Speaker B18L User Manual

INTRODUCTION

This manual provides comprehensive instructions for the HEYSONG Waterproof Shower Bluetooth Speaker, model B18L. Please read this manual thoroughly before using the device to ensure proper operation and to maximize its lifespan. This speaker is designed for use in wet environments such as showers, pools, and beaches, offering portable audio with integrated lighting effects.

PRODUCT OVERVIEW

Key Features

- **IPX7 Waterproof Rating:** Fully submersible for use in showers, pools, and other wet environments.
- **Portable Design:** Compact and lightweight with an integrated carabiner for easy transport.
- **Dynamic LED Lights:** Multicolor LED lights enhance the listening experience.
- **Long Battery Life:** Provides extended playtime for continuous music enjoyment.
- **Stereo Pairing:** Connect two speakers for an enhanced audio experience.

What's in the Box

- 1 x HEYSONG Waterproof Shower Bluetooth Speaker B18L
- 1 x Charging Cable
- 1 x User Manual (this document)



Figure 1: HEYSONG B18L Waterproof Shower Bluetooth Speaker in Pink, demonstrating its water resistance with splashes.

SETUP

1. Charging the Speaker

1. Locate the charging port on the speaker, usually protected by a waterproof flap.
2. Connect the provided charging cable to the speaker and a compatible USB power source (e.g., wall adapter, computer USB port).
3. The charging indicator light will illuminate. A full charge takes approximately 12 hours.
4. Once fully charged, the indicator light will change or turn off. Disconnect the charging cable and ensure the waterproof flap is securely closed.



Figure 2: The speaker is designed for extended use, indicating its long battery life after a full charge.

2. Powering On/Off

- **To Power On:** Press and hold the Power button () for approximately 3 seconds until you hear an audible prompt and the LED lights activate.
- **To Power Off:** Press and hold the Power button () for approximately 3 seconds until you hear an audible prompt and the LED lights turn off.

3. Bluetooth Pairing

1. Ensure the speaker is powered on and within 10 meters (33 feet) of your Bluetooth-enabled device (smartphone, tablet, laptop).
2. The speaker will automatically enter pairing mode, indicated by a flashing LED light.
3. On your device, navigate to the Bluetooth settings and search for available devices.
4. Select "HEYSONG BUBBLE" (or similar name) from the list.
5. Once connected, you will hear a confirmation tone, and the LED light will stop flashing.
6. The speaker will automatically reconnect to the last paired device when powered on, if available.

Build For Shower

Relax with immersive music

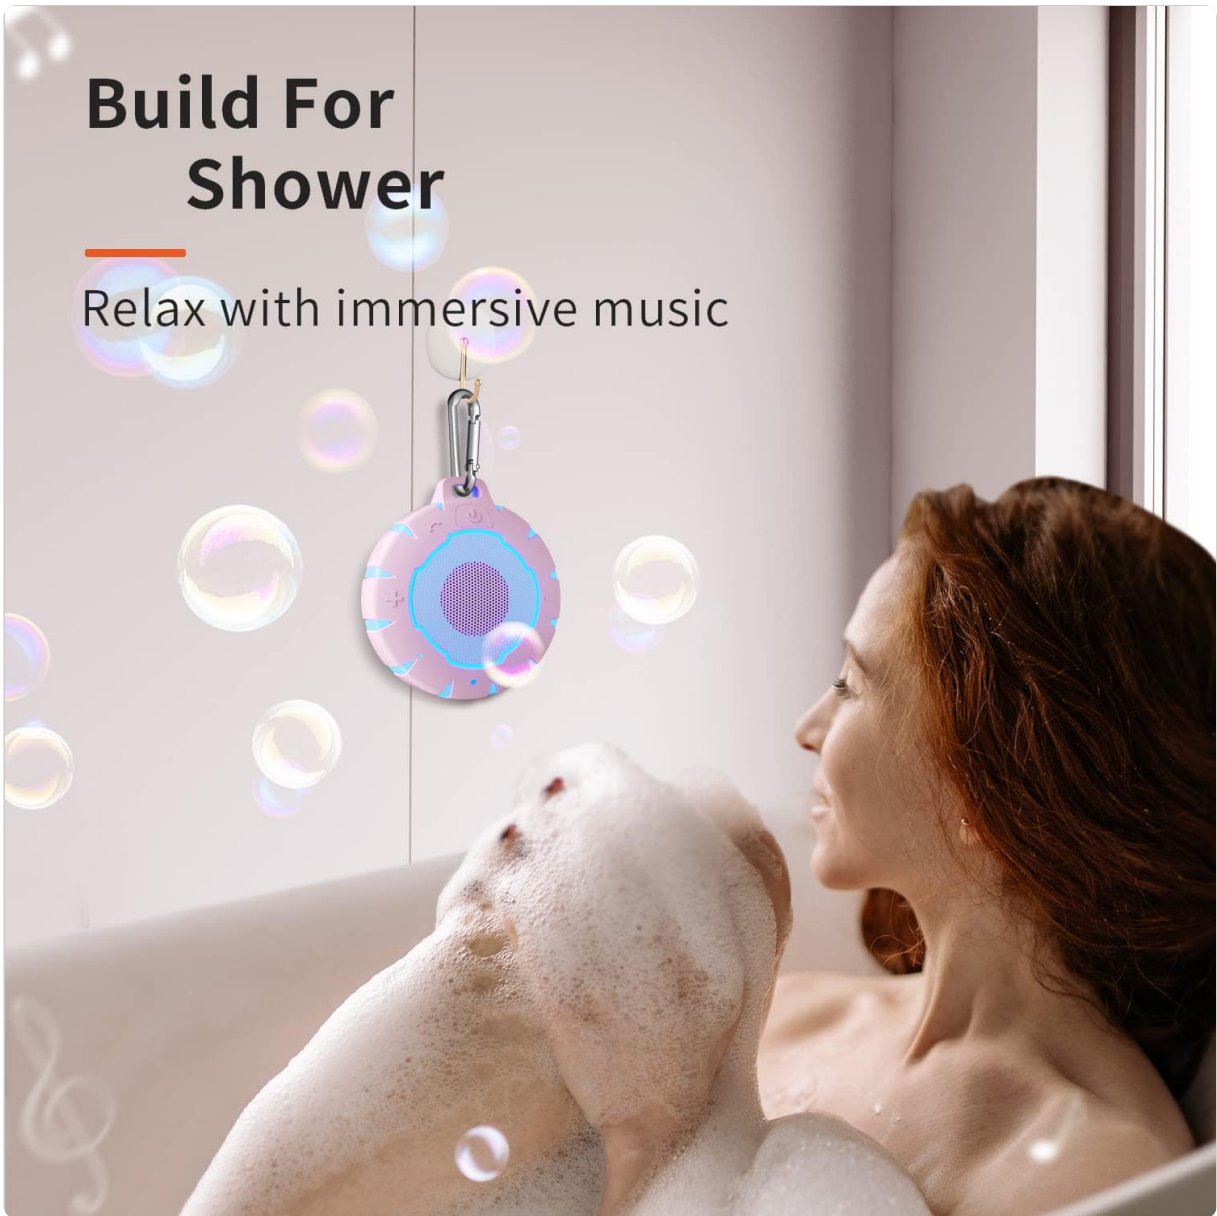


Figure 3: The speaker is designed to be hung in a shower environment, highlighting its waterproof capabilities.

OPERATING INSTRUCTIONS

Basic Controls

- **Power Button ():** Press and hold to power on/off. Short press to play/pause music.
- **Volume Up (+):** Short press to increase volume. Long press for next track.
- **Volume Down (-):** Short press to decrease volume. Long press for previous track.
- **Light Mode Button (*):** Short press to cycle through different LED light modes. Press and hold to turn lights off/on.

Stereo Pairing (TWS Function)

To achieve a true wireless stereo (TWS) experience, you can pair two HEYSONG B18L speakers together.

1. Ensure both speakers are powered off and not connected to any Bluetooth device.
2. Power on both speakers simultaneously. They will enter pairing mode.
3. On one of the speakers (this will become the primary speaker), double-press the Power button (). The speakers will attempt to pair with each other.

4. Once successfully paired, you will hear a confirmation tone, and the LED lights on both speakers will synchronize.
5. Now, connect your Bluetooth device to the primary speaker (the one you double-pressed the Power button on) as described in the "Bluetooth Pairing" section.
6. Both speakers will now play audio in stereo.

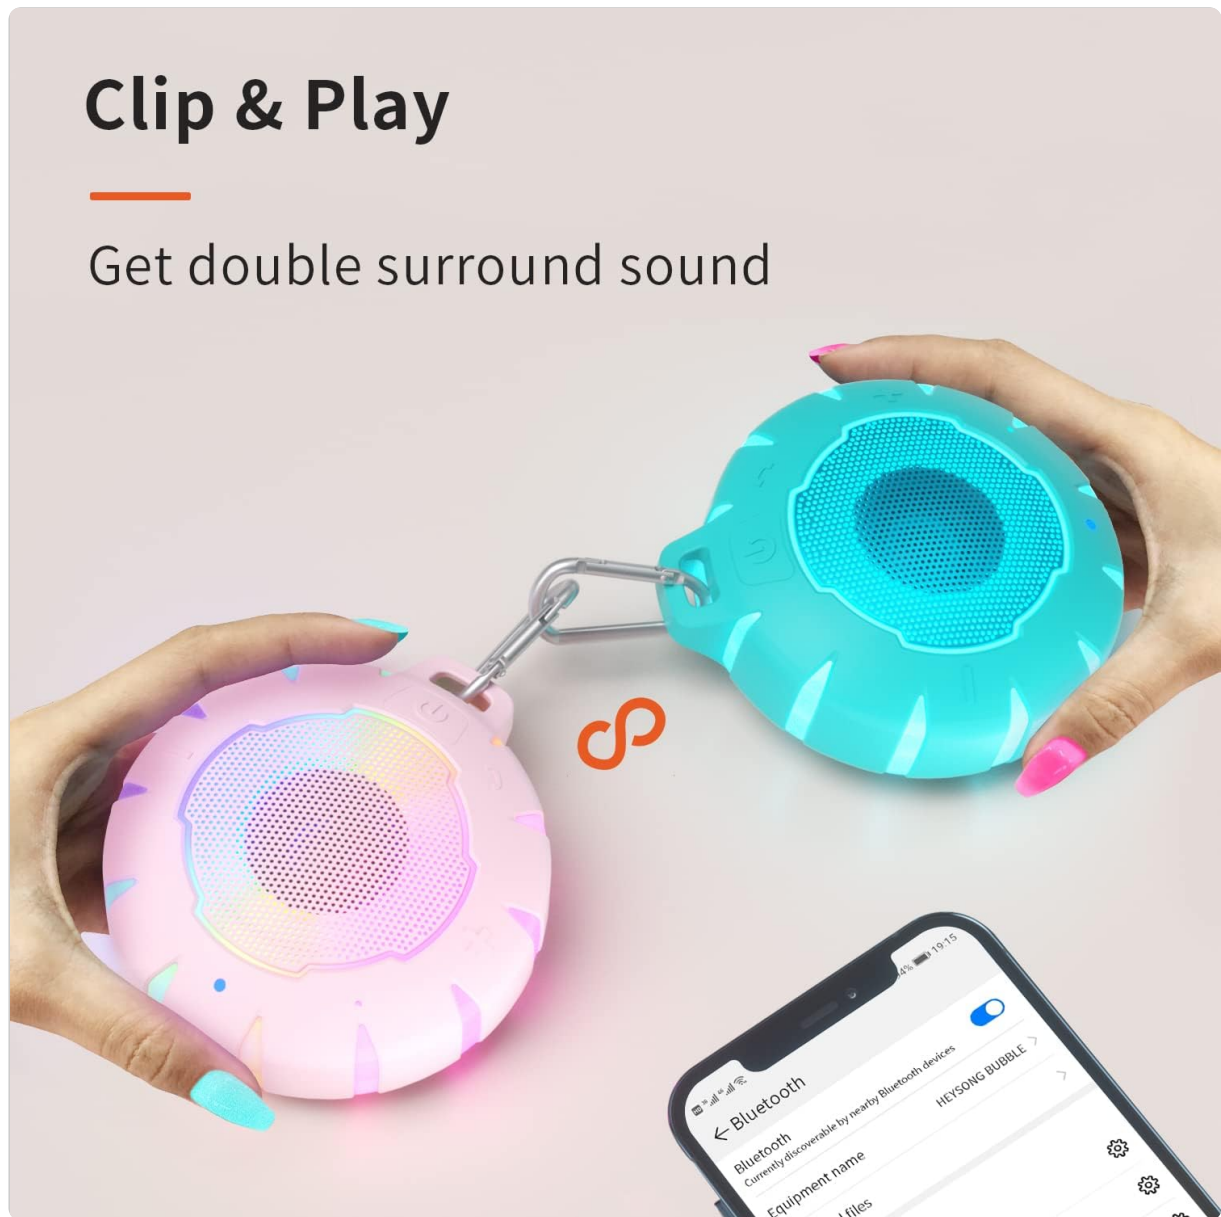


Figure 4: Two speakers demonstrating the stereo pairing function, allowing for a wider sound experience.

Using the Speaker with an App

The HEYSONG B18L speaker supports control via a dedicated application. Please refer to the app's instructions for specific features and functionalities, such as advanced light controls or equalizer settings. The app can be downloaded from your device's app store.

Compact & Portable

Share the music experience with friends, anywhere



Figure 5: The speaker's portable design makes it suitable for outdoor activities like beach trips.

MAINTENANCE

Cleaning

- Due to its waterproof design, the speaker can be rinsed with fresh water to remove dirt, sand, or soap residue.
- Use a soft, damp cloth to wipe the surface. Avoid abrasive cleaners or solvents.
- Ensure the charging port flap is securely closed before cleaning with water.
- Allow the speaker to air dry completely before charging or storing.

Storage

- Store the speaker in a cool, dry place away from direct sunlight and extreme temperatures.
- For long-term storage, charge the battery to approximately 50% every few months to maintain battery health.

Battery Care

- Avoid fully discharging the battery frequently.

- Do not expose the speaker to temperatures above 60°C (140°F) as this can damage the battery.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Speaker will not power on.	Low battery.	Charge the speaker fully.
Cannot pair via Bluetooth.	Speaker not in pairing mode; device Bluetooth off; too far from device.	Ensure speaker is on and flashing LED; enable Bluetooth on device; move device closer (within 10m).
No sound after pairing.	Volume too low on speaker or device; incorrect audio output selected on device.	Increase volume on both speaker and device; check device's audio output settings.
Stereo pairing not working.	Speakers not properly reset or paired.	Ensure both speakers are off, then follow the "Stereo Pairing" instructions carefully.
LED lights not working.	Lights turned off; speaker malfunction.	Short press the Light Mode button (*) to cycle modes, or long press to turn on. If issue persists, contact support.

SPECIFICATIONS

Model Name	Bubble
Model Number	B18L
Brand	HEYSONG
Material	Plastic and Durable Silicone
Color	Pink
Speaker Type	Outdoor
Special Features	Portable, Stereo Pairing, Dynamic LED Lights
Connectivity Technology	Bluetooth
Wireless Communication Technology	Bluetooth
Bluetooth Range	10 Meters (66 Feet Maximum Range)
Water Resistance Level	Waterproof (IPX7)

Power Source	Battery Powered (1 Lithium Ion battery included)
Charging Time	12 Hours
Speaker Maximum Output Power	5 Watts
Audio Output Mode	Stereo
Control Method	App
Product Dimensions	4.33"D x 4.13"W x 1.97"H
Item Weight	7.8 ounces
Mounting Type	Hanging

WARRANTY AND SUPPORT

The HEYSONG Waterproof Shower Bluetooth Speaker B18L comes with a **one-year limited warranty**. This warranty covers manufacturing defects and ensures your product functions as intended under normal use.

For technical support, warranty claims, or any questions regarding your speaker, please contact HEYSONG customer service. You can find contact information and additional resources on the official HEYSONG store page: [HEYSONG Store](#).