

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [ciciglow](#) /

› [ciciglow Mini Digital Audio Recorder User Manual](#)

**ciciglow 0r5kz1mcqs5228**

# ciciglow Mini Digital Audio Recorder User Manual

Model: 0r5kz1mcqs5228

## INTRODUCTION

---

Thank you for choosing the ciciglow Mini Digital Audio Recorder. This device is designed for high-quality audio recording with features such as an eye-protection screen, one-click recording, voice activation, noise reduction, and password protection. Please read this manual carefully to ensure proper use and optimal performance.



## Small Voice Recorder

64 x 96 Eye Protection Screen  
Protect eyes, Multiple content display  
Fully understand the situation

Image: The ciciglow Mini Digital Audio Recorder, highlighting its eye-protection screen and compact design.

## PACKAGE CONTENTS

---

Please check the package for the following items:

- 1 x ciciglow Mini Digital Audio Recorder
- 1 x USB Data Cable
- 1 x User Manual

## SETUP

---

### 1. Charging the Device

Before first use, fully charge the recorder. Connect the device to a USB power adapter (not included) or a computer's USB port using the provided USB data cable. The screen will indicate charging status. A full charge typically takes 2-3 hours.

## **2. Powering On/Off**

1. To power on: Slide the power button (usually located on the side) to the right.
2. To power off: Slide the power button to the left.

## **3. Setting Up Password Protection**

The recorder features a password lock function to protect your recordings. To activate and set a password:

1. Navigate to the 'Settings' menu using the MENU button.
2. Select 'Password Protection' or 'Lock Screen'.
3. Follow the on-screen prompts to set your desired password. Remember your password, as there may not be a recovery option.



Image: Angled view of the recorder, displaying the screen and primary control buttons (MENU, PLAY).

## OPERATING INSTRUCTIONS

---

### 1. One-Click Recording

For quick and convenient recording:

1. Ensure the device is powered on.

2. Press the **PLAY** button (often labeled with a play/pause icon) to start recording. The screen will show the recording time.
3. To stop recording, press the **SAVE** button (located on the side, as seen in image). The recording will be saved automatically.

## 2. Voice Activated Recording (VOR)

This feature conserves storage space and playback time by recording only when sound is detected.

1. Navigate to the 'Settings' menu using the **MENU** button.
2. Select 'Voice Activated Recording' or 'VOR Mode'.
3. Enable the VOR function and adjust sensitivity if available.
4. Start recording as usual. The device will automatically pause recording when there is no sound and resume when sound is detected.

# Voice Recorder

Voice Activated Recording

Start recording when there is sound

Pause recording when there is no sound

Save storage space and playback time



Image: The recorder shown in a meeting environment, demonstrating its use for voice-activated recording.

## 3. Playback

To listen to your recordings:

1. From the main screen, press the **PLAY** button to enter playback mode or select a file from the file list.
2. Use the **PREV** and **NEXT** buttons (located on the side) to navigate between recordings.
3. Adjust the volume using the **VOL** buttons (located on the side).
4. The device features a built-in speaker for direct playback. You can also connect headphones to the headphone jack for private listening.





Image: Side view of the recorder, detailing the REC, SAVE, PREV, NEXT, and VOL buttons, along with the USB port and headphone jack.

## 4. Noise Reduction

The recorder is equipped with a noise reduction feature to filter background noise and enhance human voice clarity, providing a pleasant listening experience. This feature is typically active by default or can be toggled in the settings menu.

## MAINTENANCE

---

### 1. Cleaning

Wipe the device with a soft, dry cloth. Do not use liquid cleaners or solvents, as they may damage the device.

### 2. Storage

Store the recorder in a cool, dry place away from direct sunlight, extreme temperatures, and high humidity. Avoid dropping the device or exposing it to strong impacts.

### 3. Battery Care

To prolong battery life, avoid fully discharging the battery frequently. If the device will not be used for an extended period, charge it to about 50% and store it. Recharge every few months to prevent deep discharge.

### 4. Data Management

Regularly transfer important recordings to a computer to prevent data loss. The device supports connection via USB for file transfer. While the product description mentions memory card expansion, please verify if your specific model includes a card slot.

## TROUBLESHOOTING

---

- **Device does not power on:**

Ensure the battery is charged. Connect the device to a power source and try again. Check the power switch position.

- **Cannot record:**

Check if the device has sufficient storage space. Ensure the recording function is not locked or restricted by a setting.

- **Poor recording quality:**

Ensure the microphone is not obstructed. Record in a quieter environment. Check if noise reduction settings are

appropriate.

- **No sound during playback:**

Check the volume level. Ensure headphones are properly connected if used. The built-in speaker might be muted or faulty.

- **Device is unresponsive:**

Try performing a soft reset by pressing and holding the power button for 10-15 seconds. If the issue persists, allow the battery to fully discharge and then recharge.

## SPECIFICATIONS

---

Feature	Specification
Model Number	0r5kz1mcqs5228
Material	Zinc Alloy
Screen	64 x 96 Eye Protection Display
Recording Format	WAV, MP3
Playback Format	MP3
Recording Distance	Approx. 10 meters
Maximum Recording Files	999
Battery Type	Built-in 250 mAh Lithium-ion Battery
Memory Storage Capacity	8 GB
Hardware Interface	USB

## WARRANTY AND SUPPORT

---

Information regarding warranty coverage and customer support for the ciciglow Mini Digital Audio Recorder is not available in the provided product details. Please refer to the packaging or contact the retailer/manufacturer directly for warranty terms and support options.