

[Manuals.plus](#) /

› [JREN](#) /

› JREN Android 10-inch Tablet User Manual (Model KV00011MZ)

## JREN KV00011MZ

# JREN Android 10-inch Tablet User Manual

Model: KV00011MZ

## 1. INTRODUCTION

Thank you for choosing the JREN Android 10-inch Tablet. This manual provides essential information for setting up, operating, maintaining, and troubleshooting your device. Please read it thoroughly to ensure optimal performance and longevity of your tablet.

The JREN Android 10-inch Tablet (Model KV00011MZ) features a 10-inch display, 64GB of internal storage, and runs on the Android operating system. It comes equipped with a protective case for enhanced durability.



Image: The JREN Android 10-inch Tablet, presented in its pink protective case, showcasing the display and robust design.

## 2. SETUP GUIDE

---

### 2.1 Unboxing and Initial Inspection

Upon opening the package, verify that all components are present:

- JREN Android 10-inch Tablet (with pre-installed protective case)
- Charging Cable
- Power Adapter
- User Manual (this document)



Image: The JREN tablet shown within its retail packaging, indicating the included protective case.

## 2.2 Charging the Tablet

Before first use, fully charge the tablet. Connect the charging cable to the tablet's charging port and the power adapter to a wall outlet. The charging indicator will typically illuminate during charging and change color or turn off when fully charged.

## 2.3 Powering On/Off

- **To Power On:** Press and hold the Power button located on the side of the tablet until the screen illuminates.
- **To Power Off:** Press and hold the Power button until a power menu appears on the screen. Select "Power Off" and confirm.
- **To Restart:** From the power menu, select "Restart."

## 2.4 Initial Setup Wizard

Upon first power-on, the tablet will guide you through an initial setup process. Follow the on-screen prompts to:

1. Select your preferred language.
2. Connect to a Wi-Fi network.
3. Sign in with your Google Account or create a new one. This is necessary for downloading apps from the Google Play Store.
4. Set up screen lock (PIN, pattern, or password).
5. Review and accept terms and conditions.

## 3. OPERATING INSTRUCTIONS

### 3.1 Basic Navigation

The tablet uses touch gestures for navigation:

- **Tap:** To select an item or open an app.
- **Swipe:** To scroll through pages or lists.
- **Pinch:** To zoom in or out on images and web pages.
- **Long Press:** To access contextual menus or move icons.

### 3.2 Connecting to Wi-Fi

1. Go to **Settings > Network & internet > Wi-Fi**.
2. Toggle Wi-Fi **On**.
3. Select your desired network from the list.
4. Enter the password if prompted and tap **Connect**.

### 3.3 Downloading Applications

Access the Google Play Store to download and install applications. A Google account is required.

1. Open the **Play Store** app.
2. Search for the desired app.
3. Tap **Install** to download and install the app.



Image: A visual representation of various applications available for download, including educational and entertainment content.

### 3.4 Parental Controls and Google Kids Space

The JREN tablet supports Google Family Link and Google Kids Space, allowing you to manage content and screen time for users.

- **Google Family Link:** Use the Family Link app on your own device to set digital ground rules, manage app usage, and set screen time limits for the tablet.
- **Google Kids Space:** This mode offers teacher-approved apps, books, and videos curated for children, promoting engaging and creative learning.



# Google Kids Space

Teacher-agreed apps and games  
Books handpicked by experts  
suggested videos with engaging  
content Videos that spark  
hands-on creativity & play

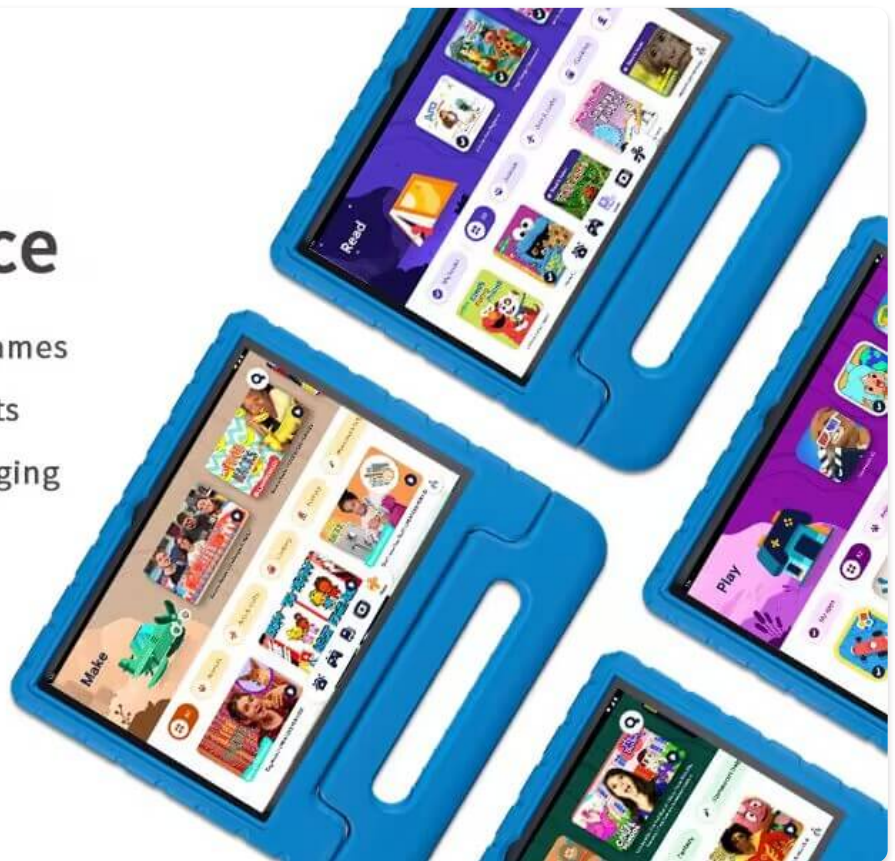


Image: A visual guide demonstrating the Google Family Link interface for setting parental controls and screen time limits.

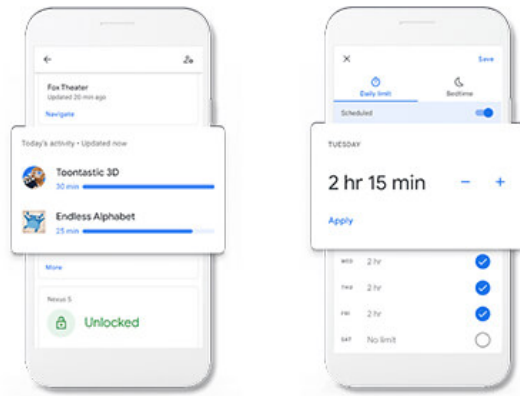


Image: The Google Kids Space logo with text highlighting its features, such as teacher-approved apps and expert-picked books.

## 3.5 Battery Management

The tablet is equipped with an 8000mAh battery, providing extended usage time. To maximize battery life:

- Reduce screen brightness.
- Disable Wi-Fi or Bluetooth when not in use.
- Close unused applications running in the background.
- Avoid extreme temperatures.



### Set boundaries with parental control

With parental controls in the Family Link app from Google, you can guide your child's experience by managing content, setting screen time limits, and more, all from your own device

Image: A graphic displaying "Long battery life" and "8000mAh," emphasizing the tablet's substantial battery capacity.

## 3.6 Connecting to an External Display

The tablet supports connecting to an external display for a larger viewing experience.



Image: The JREN tablet positioned in front of a larger monitor, demonstrating its capability to mirror content onto an external display.

## 4. MAINTENANCE

### 4.1 Cleaning the Tablet

- Use a soft, lint-free cloth to clean the screen and body.
- For stubborn smudges, slightly dampen the cloth with water or a screen cleaner designed for electronics.
- Avoid using harsh chemicals, abrasive materials, or excessive moisture.

### 4.2 Software Updates

Regularly check for and install software updates to ensure your tablet has the latest features, security patches, and performance improvements. Go to **Settings > System > System update**.

### 4.3 Storage Management

To maintain optimal performance, periodically manage the tablet's storage:

- Delete unused apps and files.
- Clear cache data for apps in **Settings > Apps > [App Name] > Storage & cache**.
- Transfer large files (photos, videos) to cloud storage or an external device.

## 5. TROUBLESHOOTING

This section addresses common issues you might encounter with your JREN tablet.

| Problem                           | Solution                                                                                                                                                                                                            |
|-----------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Tablet does not turn on           | Ensure the battery is charged. Connect the charger and wait a few minutes before attempting to power on again. If it still doesn't turn on, perform a forced restart by holding the power button for 10-15 seconds. |
| Wi-Fi connection drops frequently | Restart your Wi-Fi router and the tablet. Forget the network in Wi-Fi settings and reconnect. Ensure you are within range of the Wi-Fi signal.                                                                      |
| Tablet is slow or unresponsive    | Close unused apps. Clear app caches. Check for available storage and free up space if necessary. Restart the tablet.                                                                                                |
| Apps are crashing                 | Ensure the app is updated to its latest version. Clear the app's cache and data (Settings > Apps > [App Name] > Storage & cache). If the issue persists, uninstall and reinstall the app.                           |
| Screen is unresponsive            | Restart the tablet. Ensure the screen is clean and free of debris. If only parts of the screen are unresponsive, it may indicate a hardware issue.                                                                  |
| Battery drains quickly            | Reduce screen brightness. Disable Wi-Fi, Bluetooth, and GPS when not in use. Close background apps. Check battery usage in Settings to identify power-hungry apps.                                                  |

### 5.1 Factory Reset

If troubleshooting steps do not resolve the issue, a factory reset may be necessary.**Warning: This will erase all data on your tablet. Back up important data before proceeding.**

1. Go to **Settings > System > Reset options**.
2. Select **Erase all data (factory reset)**.
3. Confirm your decision and enter your PIN/pattern/password if prompted.

## 6. SPECIFICATIONS

Below are the technical specifications for the JREN Android 10-inch Tablet (Model KV00011MZ):

| Feature           | Detail            |
|-------------------|-------------------|
| Model Name        | J10 Pro           |
| Item Model Number | KV00011MZ         |
| Operating System  | Android           |
| Screen Size       | 10 Inches         |
| Screen Resolution | 1280 x 800 Pixels |
| Processor         | 1.8 GHz ARM       |

| Feature              | Detail                                        |
|----------------------|-----------------------------------------------|
| RAM                  | 64 GB (Internal Storage)                      |
| Flash Memory Size    | 64 GB                                         |
| Wireless Type        | 2.4 GHz Radio Frequency (Wi-Fi)               |
| Average Battery Life | 8 Hours                                       |
| Power Source         | AC & Battery (1 Lithium Ion battery included) |
| Item Weight          | 2.43 pounds                                   |
| Product Dimensions   | 19 x 11 x 0.8 inches                          |
| Color                | Pink                                          |

## 7. WARRANTY AND SUPPORT

### 7.1 Product Warranty

For information regarding the warranty coverage for your JREN Android 10-inch Tablet, please refer to the warranty card included with your purchase or visit the official JREN website. Keep your proof of purchase for warranty claims.

### 7.2 Customer Support

If you encounter issues not covered in this manual or require further assistance, please contact JREN customer support. Contact details can typically be found on the product packaging, the official JREN website, or through your retailer's support channels.

© 2024 JREN. All rights reserved.

### ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

**Details**

Model number, symptoms, what you tried, or the section of the manual you are using.

**Submit question**