

[Manuals.plus](#) /

› [Candy](#) /

› Candy CCT3L517EB Combined Refrigerator User Manual

Candy CCT3L517EB

Candy CCT3L517EB Combined Refrigerator User Manual

Model: CCT3L517EB

1. SAFETY INFORMATION

Please read this manual carefully before using your appliance. Keep it for future reference. This appliance is designed for domestic use only.

- **Electrical Safety:** Ensure the appliance is connected to a properly grounded power outlet. Do not use extension cords or multiple adapters. Disconnect from power before cleaning or maintenance.
- **Ventilation:** Ensure adequate ventilation around the appliance to prevent overheating. Do not block ventilation openings.
- **Handling:** The appliance is heavy. Use caution and proper lifting techniques when moving.
- **Children Safety:** Keep children away from the appliance, especially when the door is open. Packaging materials can be dangerous for children.
- **Flammable Materials:** Do not store explosive substances such as aerosol cans with a flammable propellant in this appliance.

2. SETUP AND INSTALLATION

Before first use, follow these steps to ensure proper installation and operation.

2.1 Unpacking

Carefully remove all packaging materials, including protective films and tapes. Check the appliance for any damage during transit. The package includes the combined refrigerator, power cable, shelves, balconies, and this user manual.

2.2 Placement

Place the refrigerator on a flat, stable surface away from direct sunlight, heat sources (like ovens or radiators), and excessive moisture. Ensure there is sufficient space around the appliance for proper air circulation. The dimensions of the

refrigerator are approximately 176 cm (H) x 54.5 cm (W) x 55 cm (D).

2.3 Leveling

The appliance is equipped with 2 adjustable feet at the front. Use a spirit level to ensure the refrigerator is perfectly level. This prevents vibrations and ensures proper door closure.

2.4 Door Reversal

The refrigerator and freezer doors are reversible, allowing them to open from either the left or right side to suit your kitchen layout. Refer to the detailed instructions in the included paper manual for the door reversal procedure.



Side view of the refrigerator, showing the integrated handles and the design that allows for door reversal.

2.5 Initial Cleaning


Before plugging in, clean the interior and all accessories with a damp cloth and a mild detergent. Wipe dry thoroughly.

2.6 Power Connection

After installation and cleaning, wait at least 2-4 hours before plugging the appliance into the power outlet. This allows the refrigerant to settle. The refrigerator operates on 230 Volts.

3. OPERATING INSTRUCTIONS

Familiarize yourself with the controls and features of your new refrigerator.

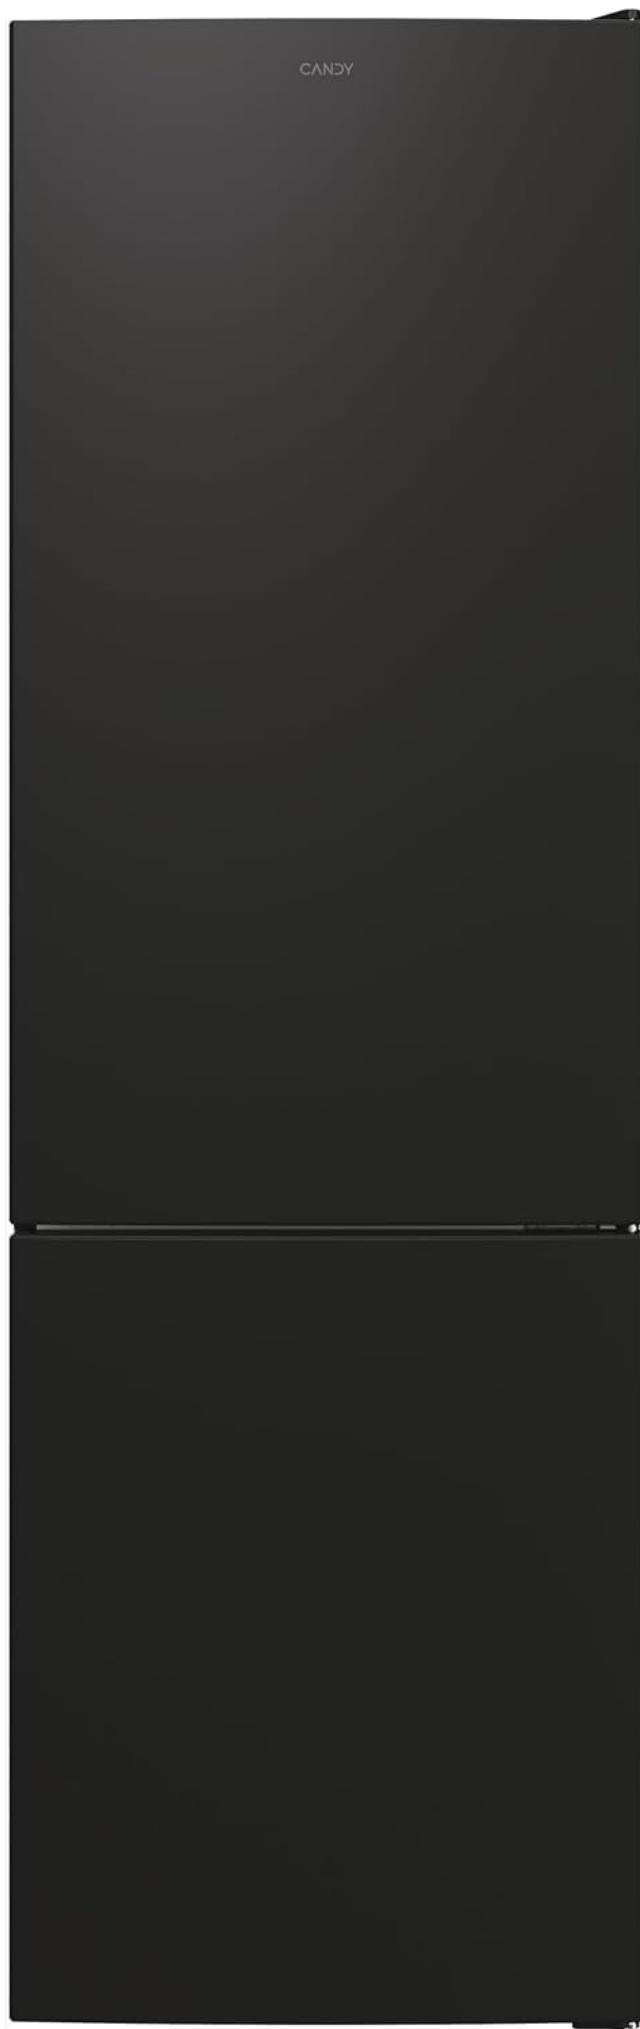

Front view of the Candy CCT3L517EB Combined Refrigerator.

3.1 Temperature Control

The electronic temperature control system is located inside the refrigerator compartment. Use the control panel to set the desired temperature for both the refrigerator and freezer sections. The recommended temperature for the refrigerator is typically between 2°C and 8°C, and for the freezer, around -18°C.

3.2 Super Cooling Function

Activate the Super Cooling function when adding a large quantity of fresh food to the refrigerator. This rapidly lowers the temperature to quickly cool new items and preserve their freshness for longer periods. The function will automatically deactivate after a set time or when the optimal temperature is reached.

3.3 Internal Layout and Storage

The refrigerator offers a total net capacity of 260 liters, with 186 liters for the refrigerator and 74 liters for the freezer.



Interior view of the refrigerator and freezer compartments.

Refrigerator Compartment:

- **Shelves:** Features 3+1 glass shelves with white profiles, providing flexible storage options for various food items.
- **Door Balconies:** Includes 3 door balconies for convenient storage of bottles, jars, and smaller items.
- **Vegetable Drawer:** A transparent vegetable drawer is provided to keep fruits and vegetables fresh.



Refrigerator interior with food items, showcasing storage capacity.



Detailed view of the door balconies for bottle and jar storage.



Transparent vegetable drawer for fresh produce.

Freezer Compartment:

- **Drawers:** Equipped with 3 transparent drawers for organized storage of frozen foods.
- **Ice Cube Tray:** Includes 1 ice cube tray.



Freezer compartment with transparent drawers for frozen items.

3.4 LED Lighting

The internal lighting is provided by durable LED lights, offering excellent visibility inside the refrigerator compartment without affecting the internal temperature.



View of the LED lighting inside the refrigerator compartment.

4. MAINTENANCE AND CARE

Regular cleaning and maintenance will ensure the longevity and efficiency of your appliance.

4.1 Cleaning the Interior

Unplug the appliance before cleaning. Clean the interior regularly with a solution of lukewarm water and a mild, non-

abrasive detergent. Rinse and dry thoroughly. Do not use harsh chemicals or abrasive cleaners.

4.2 Cleaning the Exterior

Wipe the exterior surfaces with a soft, damp cloth. For stubborn stains, use a mild detergent. Avoid getting water into electrical components.

4.3 Defrosting

The refrigerator compartment features an automatic defrost system. The freezer compartment requires manual defrosting. When ice buildup in the freezer reaches a thickness of about 5mm, it's time to defrost. Unplug the appliance, remove all food, and allow the ice to melt naturally. Clean and dry the interior before restarting.

4.4 Care for Shelves and Drawers

Glass shelves and transparent drawers can be removed for easier cleaning. Wash them with warm soapy water, rinse, and dry before placing them back.

4.5 Light Bulb Maintenance

The appliance uses durable LED lighting, which typically does not require frequent replacement. If the LED light needs servicing, please contact qualified service personnel.

5. TROUBLESHOOTING

Before contacting service, check the following common issues:

- **Appliance does not operate:** Check if the power cord is properly plugged in and if there is power to the outlet.
- **Temperature is not cold enough:** Ensure the temperature setting is correct. Check if the door is closed properly and not opened too frequently. Avoid placing hot food directly into the refrigerator.
- **Excessive noise:** Check if the appliance is level. Ensure nothing is touching the back or sides of the refrigerator.
- **Water on the floor:** Check if the defrost water drain is clear and not blocked.

If the problem persists after checking these points, please contact customer support.

6. SPECIFICATIONS

Feature	Specification
Brand	Candy
Model Number	CCT3L517EB
Product Dimensions (H x W x D)	176 x 54.5 x 55 cm
Weight	50 Kilograms
Total Capacity	260 Liters
Refrigerator Volume	186 Liters
Freezer Volume	74 Liters
Energy Efficiency Class	E
Annual Energy Consumption	214 kWh/year

Noise Level	39 dB
Installation Type	Freestanding
Defrost System	Automatic (Refrigerator), Manual (Freezer)
Special Features	Super Cooling Function, Reversible Doors, Low Frost Technology
Color	Black
Number of Doors	2
Shelf Type	Glass

For detailed product information and energy label data, please refer to the EPREL database:

[EPREL Product Information \(QR Code Link\)](#)

Produktdatenblatt

DELEGIERTE VERORDNUNG (EU) 2019/2016 DER KOMMISSION zur Energieverbrauchskennzeichnung von Kühlgeräten

Name oder Handelsmarke des Lieferanten: CANDY

Anschrift des Lieferanten: Candy Hoover Group contact, Comolli 16, 20861 Brugherio MB, IT

Modellkennung: CCT3LS17EB

Art des Kühlgeräts:

Geräuscharmes Gerät:	Nein	Bauart:	freistehend
Weinlagerschrank:	Nein	Anderes Kühlgerät:	Ja

Allgemeine Produktparameter:

Parameter		Wert	Parameter	Wert
Gesamtabmessungen (in Millimeter)	Höhe	1 760	Gesamtrauminhalt (in dm ³ oder l)	260
	Breite	545		
	Tiefe	550		

EEI	100	Energieeffizienzklasse	E
Luftschallemissionen (la)			

Luftschallemissionen (in dB(A) re 1 pW)	39	Luftschallemissionsklasse	C
---	----	---------------------------	---

Jährlicher Energieverbrauch (in kWh/a)	214	Klimaklasse:	gemäßigte Zone, subtropische Zone
--	-----	--------------	-----------------------------------

Mindestumgebungstemperatur Die 90. Perzentile der Hitzelast ist $\geq 10^\circ\text{C}$		Höchstumgebungstemperatur Die 90. Perzentile der Hitzelast ist $\leq 30^\circ\text{C}$	
--	--	---	--

(in °C), für die das Kühlgerät geeignet ist	16	temperatur (in °C), für die das Kühlgerät geeignet ist	38
---	----	--	----

Winterschaltung

Fachparameter:		Fachparameter und #werte		
Fachtyp	Rauminhalt des Fachs (in dm³ oder l)	Empfohlene Temperatureinstellung für eine optimierte Lebensmittellagerung (in °C) Diese Einstellungen dürfen nicht im Widerspruch zu den Lagerbedingungen nach Anhang IV	Gefriervermögen (in kg/24h)	Defrosting type (auto-defrost=A, manual defrost=M)

Seite 1 / 2

		Tabelle 3 stehen			
Speisekammerfach	Nein	-	-	-	-
Weinlagerfach	Nein	-	-	-	-
Kellerfach	Nein	-	-	-	-
Lagerfach für frische Lebensmittel	Ja	186,0	4	-	A
Kaltlagerfach	Nein	-	-	-	-
Null-Sterne- oder Eisbereiterfach	Nein	-	-	-	-
Ein-Stern-Fach	Nein	-	-	-	-
Zwei-Sterne-Fach	Nein	-	-	-	-
Drei-Sterne-Fach	Nein	-	-	-	-
Vier-Sterne-Fach	Ja	74,0	-18	3,3	M
Zwei-Sterne-Abteil	Nein	-	-	-	-
Fach mit variabler Temperatur	-	-	-	-	-

Für Vier-Sterne-Fächer

Schnelleinfrierfunktion	Nein
-------------------------	------

Lichtquellenparameter:

Art der Lichtquelle	OTHER_FL
---------------------	----------

Energieeffizienzklasse	G
------------------------	---

Mindestlaufzeit der vom Hersteller angebotenen Garantie: 24 Monate

Weitere Angaben:

Weblink zur Website des Herstellers, auf der die Informationen gemäß Nummer 4 Buchstabe a des Anhangs der Verordnung (EU) 2019/2019 der Kommission zu finden sind: <https://corporate.haier-europe.com/en/>

Seite 2 / 2

Product Information Sheet				
COMMISSION DELEGATED REGULATION (EU) 2019/2016 with regard to energy labelling of refrigerating appliances				
Supplier's name or trade mark: CANDY				
Supplier's address: Candy Hoover Group contact, Comolli 16, 20861 Brugherio MB, IT				
Model identifier: CCT3L517EB				
Type of refrigerating appliance:				
Low-noise appliance:	No	Design type:	freestanding	
Wine storage appliance:	No	Other refrigerating appliance:	Yes	
General product parameters:				
Parameter	Value		Parameter	Value
Overall dimensions (millimetre)	Height	1 760	Total volume (dm³ or l)	260
	Width	545		
	Depth	550		
EER	100		Energy efficiency class	E
Airborne acoustical noise emissions (dB(A) re 1 pW)	39		Airborne acoustical noise emission class	C
Annual energy consumption (kWh/a)	214		Climate class:	temperate, subtropical
Minimum ambient temperature (°C), for which the refrigerating appliance is suitable	16		Maximum ambient temperature (°C), for which the refrigerating appliance is suitable	38
Winter setting	No			
Compartment Parameters:				
Compartment parameters and values				
Compartment type	Compartment Volume (dm³ or l)	Recommended temperature setting for optimised food storage (°C) These settings shall not contradict the storage conditions set out in Annex IV, Table 3	Freezing capacity (kg/24h)	Defrosting type (auto-defrost=A, manual defrost=M)
Pantry	No	-	-	-

Page 1 / 2

Page 1 / 2

Wine storage	No	-	-	-	-
Cellar	No	-	-	-	-
Fresh food	Yes	186,0	4	-	A
Chill	No	-	-	-	-
0-star or ice-making	No	-	-	-	-
1-star	No	-	-	-	-
2-star	No	-	-	-	-
3-star	No	-	-	-	-
4-star	Yes	74,0	-18	3,3	M
2-star section	No	-	-	-	-
Variable temperature compartment	-	-	-	-	-
For 4-star compartments					
Fast freeze facility		No			
Light source parameters:					
Type of light source		OTHER_FL			
Energy efficiency class		G			
Minimum duration of the guarantee offered by the manufacturer: 24 months					
Additional information:					
Weblink to the manufacturer's website, where the information in point4(a) Annex of Commission Regulation (EU) 2019/2019 is found: https://corporate.haier-europe.com/en/					

Page 2 / 2

Product Information Sheet (English).

7. WARRANTY AND SUPPORT

This appliance comes with a manufacturer's warranty of 24 months from the date of purchase. Please retain your proof of purchase for warranty claims.

For technical assistance, spare parts, or warranty service, please contact Candy customer support. Refer to the contact information provided in your purchase documentation or on the official Candy website.

© 2024 Candy. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0B2JNH6BX>

More documents and user manuals: <https://manuals.plus/>