

## Reebok RV-VNE-U9-PZIB-BB

# Reebok Nerd Digital Watch RV-VNE-U9-PZIB-BB User Manual

Model: RV-VNE-U9-PZIB-BB

## INTRODUCTION

---

This manual provides detailed instructions for the Reebok Nerd Digital Watch, model RV-VNE-U9-PZIB-BB. Please read this manual carefully before using your watch to ensure proper operation and to understand its features and functions. This digital watch features a square dial, quartz movement, and is designed for unisex use.

## SETUP

---

### 1. Initial Power-On and Time Setting

Your watch may arrive with the display off or showing an incorrect time. To set the time and date:

- Identify Buttons:** Locate the buttons on the side of the watch case. Typically, these are labeled or have distinct functions: **SET**, **MODE**, **ADJ** (Adjust), and **LIGHT**.
- Enter Setting Mode:** Press and hold the **MODE** button for a few seconds until a digit on the display starts flashing. This indicates you are in setting mode.
- Select Item to Adjust:** Press the **MODE** button repeatedly to cycle through the settings: seconds, hour, minute, year, month, day.
- Adjust Value:** Use the **ADJ** or **SET** button (depending on the model, one typically increments, the other confirms or moves to the next) to change the flashing value.
- Confirm Settings:** Once all settings are correct, press the **MODE** button again or the **SET** button to exit the setting mode.



Image: Close-up of the watch display and control buttons (SET, MODE, ADJ, LIGHT) on the side of the case.

## 2. Wearing the Watch

Place the watch on your wrist and adjust the silicone strap until it fits comfortably. The buckle closure ensures a secure fit.



Image: The Reebok Nerd Digital Watch worn on a wrist, displaying the time and date.

## OPERATING INSTRUCTIONS

---

### 1. Basic Time Display

In normal timekeeping mode, the watch displays the current time (hour, minute, second), day of the week, and date.

### 2. Using the Light Function

Press the **LIGHT** button to illuminate the display for better visibility in low-light conditions. The light will typically stay on for a few seconds.

### 3. Mode Selection

Press the **MODE** button to cycle through different functions such as:

- **Timekeeping Mode:** Displays current time and date.
- **Alarm Mode:** Allows setting and activating an alarm.
- **Stopwatch Mode:** For measuring elapsed time.

- **Date Mode:** Displays the full date.

Refer to the "Setup" section for detailed instructions on adjusting values within each mode.



Image: Angled view of the watch on a wrist, showing the digital display and the arrangement of control buttons.

## MAINTENANCE

### 1. Cleaning Your Watch

To maintain the appearance of your watch:

- Wipe the watch case and strap with a soft, dry cloth.
- For stubborn dirt, use a slightly damp cloth and mild soap, then wipe dry immediately.
- Avoid using harsh chemicals, solvents, or abrasive cleaners, as these can damage the watch's finish or seals.

### 2. Water Resistance

This watch has a water resistance depth of 50 meters (5 ATM). This means it is suitable for everyday use and can withstand splashes, rain, and brief immersion in water. However, it is **not suitable for swimming, diving, or prolonged water activities**. Do not operate buttons while the watch is wet or submerged.

### 3. Battery Replacement

The watch is powered by a battery. When the display becomes dim or the watch stops functioning, the battery may need replacement. Battery replacement should ideally be performed by a qualified watch technician to ensure the water resistance seal is properly maintained.



Image: Rear view of the watch, displaying the stainless steel case back and engraved details.

## TROUBLESHOOTING

- **Display is blank or dim:** The battery may be low or depleted. Consider professional battery replacement.
- **Time is incorrect:** Re-enter the time setting mode and adjust the time and date as described in the "Setup" section. Ensure AM/PM is correctly set if applicable.
- **Buttons are unresponsive:** Ensure the watch is not in a locked mode (if applicable, though not common for basic digital watches). If the issue persists, a battery replacement might be necessary, or there could be an internal malfunction.
- **Condensation inside the watch:** This indicates a breach in the water resistance seal. Avoid further contact with water and seek professional service immediately.

## SPECIFICATIONS

<b>Model Number</b>	RV-VNE-U9-PZIB-BB
<b>Display Type</b>	Digital
<b>Movement Type</b>	Quartz
<b>Case Shape</b>	Square
<b>Case Diameter</b>	39.5 Millimetres
<b>Case Thickness</b>	10.5 Millimetres
<b>Crystal Material</b>	Mineral Glass
<b>Band Material Type</b>	Silicone
<b>Band Colour</b>	Black
<b>Band Width</b>	20 Millimetres
<b>Closure Type</b>	Buckle
<b>Water Resistance Depth</b>	50 Metres (5 ATM)
<b>Item Weight</b>	65 Grams
<b>Product Dimensions</b>	40 x 20 x 11 Millimeters (LxWxH)

## WARRANTY INFORMATION

This Reebok watch comes with a **Limited Warranty**. The specific terms and duration of the warranty are provided at the time of purchase and typically cover manufacturing defects in materials and workmanship under normal use. The warranty does not usually cover:

- Damage resulting from improper handling, lack of care, accidents, or normal wear and tear.
- Water damage if the watch was used beyond its specified water resistance limits or if buttons were operated underwater.
- Battery life or replacement.
- Unauthorized repairs or modifications.

Please retain your proof of purchase for warranty claims. For detailed warranty terms, refer to the documentation included with your watch or contact customer support.

## CUSTOMER SUPPORT

For any questions, service, or support regarding your Reebok Nerd Digital Watch, please contact the authorized service center or importer:

- **Importer/Packer:** Bizotico
- **Address:** 3rd Floor, RT Nagar Main Road, Bangalore, India - 560032
- **Email:** [customercare@bizotico.com](mailto:customercare@bizotico.com)
- **Phone:** +91 80 2353 5166

- **Manufacturer:** Time Network Limited

When contacting support, please have your watch model number (RV-VNE-U9-PZIB-BB) and proof of purchase readily available.