

BIGASUO Pro302 DVD Projector

BIGASUO 5G WiFi Bluetooth Projector with DVD Player User Manual

Model: Pro302 DVD Projector

INTRODUCTION

Product Overview

The BIGASUO Pro302 is a versatile 2-in-1 projector featuring a built-in DVD player, 5G WiFi, and Bluetooth 5.0 connectivity. Designed for both indoor and outdoor entertainment, it supports 1080P video playback with an 8000:1 contrast ratio, delivering clear and vibrant images. Its compact design and included accessories like a tripod and carry bag make it highly portable.

Key Features

- **Built-in DVD Player:** Directly play CDs, DVDs, and various disc formats (excluding Blu-ray).
- **5G WiFi Connectivity:** Seamless wireless screen mirroring from iOS and Android devices.
- **Bluetooth 5.0:** Connect to external Bluetooth speakers, soundbars, or headphones for enhanced audio.
- **1080P Supported Resolution:** Enjoy sharp and colorful visuals with 8000:1 contrast.
- **Multiple Inputs:** HDMI, AV, VGA, Micro SD Card, USB for broad device compatibility.
- **Portable Design:** Includes a tripod and carry bag for easy setup and transport.

WHAT'S IN THE BOX

The BIGASUO Pro302 DVD Projector package includes the following items:

- BIGASUO Pro302 DVD Projector
- Padded Carry Bag
- Mini Tripod
- Remote Control
- HDMI Cable
- AV Cable

- VGA Cable
- Power Adapter
- User Manual



Image showing the BIGASUO Pro302 DVD Projector and its included accessories: carry bag, tripod, remote control, various cables (HDMI, AV, VGA), power adapter, and user manual.

PRODUCT OVERVIEW

Front View

The front of the projector features the projection lens and the infrared receiver for the remote control.



Front view of the BIGASUO Pro302 DVD Projector, highlighting the main lens and compact design.

Top View

The top panel includes control buttons for navigation, power, and input selection, along with the DVD player lid.

Not only a Projector, But also a DVD Player!



Support CD, DVD, VCD, SVCD, CD-R/RW,
DVD-R/+R, DVD-RW/+RW, MP3, WMA,
VOB, AVI, MPEG1, XVID, JPEG, USB/
SD/MMC etc.
(Not support Blu-ray discs)



Top view of the projector showing the control panel and the open DVD player compartment with a disc inserted.

Side and Rear Views (Ports)

The side and rear panels house all the connectivity ports for various devices.

Portable Size & Multimedia Connection



VAT



AV



Audio



SD



HDMI



USB



3.86 inch / 9.8 cm

8 inch / 20.3 cm

6.57 inch / 16.7 cm



PC & laptops



Smartphones & iPad



Camera



Game Console



PS4 & XBOX



Bluetooth Speakers



USB Flash Drive



TV Stick & TV Box

Side view of the projector detailing the input/output ports: VAT, AV, Audio, SD, HDMI, and USB.

- **HDMI Ports:** Connect to laptops, gaming consoles (PS4, Xbox), TV sticks, etc.
- **USB Port:** For USB flash drives.
- **SD Card Slot:** For Micro SD cards.
- **AV Port:** For older devices using RCA cables.
- **VGA Port:** For connecting to computers.
- **Audio Out:** 3.5mm jack for external speakers or headphones.

SETUP

Initial Placement

Place the projector on a stable, flat surface. Use the included tripod to adjust the height and angle for optimal projection. Ensure the projection surface (wall or screen) is clean and smooth.

Theater-Like Projector Screen & Digital Zoom

Recommend Distance: 2.8M/9.2FT

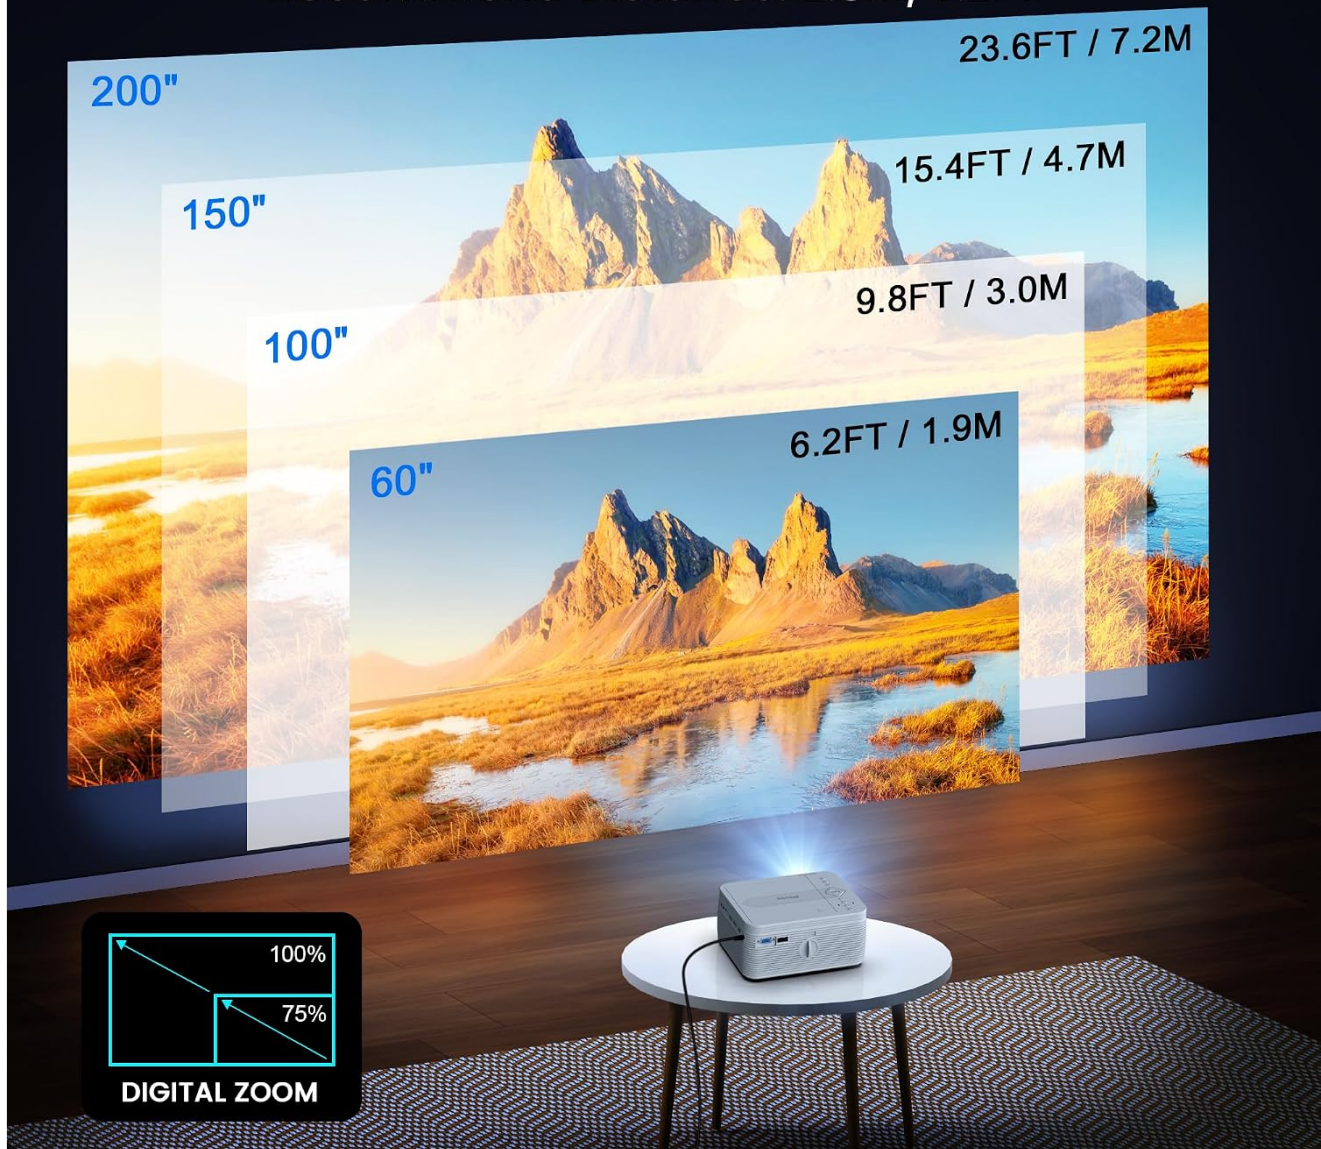


Image demonstrating recommended projection distances and screen sizes, showing the projector placed on a table with a tripod.

Power Connection

Connect the power adapter to the projector's DC IN port and plug it into a power outlet. The power indicator light will illuminate.

Focusing the Image

Turn on the projector. Rotate the focus ring on the front of the lens until the projected image appears sharp and clear.

Keystone Correction

If the projected image appears trapezoidal, use the keystone adjustment on the projector (usually a dial or lever near the lens) to correct the image shape.

OPERATING INSTRUCTIONS

DVD Playback

Open the DVD player lid on the top of the projector. Insert a compatible disc (CD, DVD, CD-R/RW, DVD-R/+R, DVD+RW/-RW, VCD, SVCD – Blu-ray discs are NOT supported). Close the lid. Select "DVD" as the input source using the remote control or the projector's control panel. The disc will begin playing automatically.



Image showing a DVD disc being inserted into the top-loading DVD player of the projector.

Wireless Connection (Wi-Fi Screen Mirroring)

To connect your smartphone or tablet wirelessly:

1. On the projector, navigate to the "Screen Sync" or "WiFi Settings" option.
2. Ensure your mobile device is connected to the same 2.4G or 5G WiFi network as the projector.
3. For iOS devices, open Control Center and select "Screen Mirroring," then choose the projector from the list.

4. For Android devices, enable "Wireless Projection," "Multi-screen," or "Smart View" (names may vary by device) and select the projector.



Image illustrating the 5G WiFi screen mirroring feature, showing a smartphone wirelessly connected to the projector.

Your browser does not support the video tag.

Video demonstrating the real-time projection capabilities of the BIGASUO 5G WiFi Projector.

Bluetooth Connection

To connect to an external Bluetooth speaker or headphones:

1. On the projector, go to "Settings" and then "Option."
2. Turn the "Bluetooth" setting from OFF to ON.
3. The projector will scan for nearby Bluetooth devices.
4. Select your Bluetooth speaker/headphone from the list to connect.

Built in Dual HiFi Speakers & Bluetooth 5.0

Brings a Free and Immersive Auditory Experience



Image showing the projector connected to various Bluetooth audio devices like a soundbar, headphones, and earbuds.

Your browser does not support the video tag.

Video tutorial on how to enable and connect Bluetooth devices to the Pro302-TP WiFi projector.

Connecting External Devices (Wired)

Use the appropriate cables (HDMI, AV, VGA) to connect devices like laptops, PCs, gaming consoles, or TV sticks to the projector's corresponding ports. Select the correct input source from the projector's menu.

Screen Flip Function

If you install the projector on the ceiling or need to adjust the projection orientation:

1. Press the "MENU" button on the remote or projector to enter the setup page.
2. Select "OPTION" in the setting options.
3. Change the "Panel Flip Rotate" setting to choose your desired projection way (e.g., ceiling mount, rear projection).

4. Press "EXIT" to close the setting page.

Your browser does not support the video tag.

Video guide on how to use the screen flip function for ceiling installations or other projection orientations.

MAINTENANCE

Cleaning the Lens

Use a soft, lint-free cloth specifically designed for optical lenses to gently wipe the projector lens. Avoid using abrasive cleaners or excessive pressure.

Cleaning the Projector Body

Wipe the exterior of the projector with a soft, dry cloth. Do not use liquid or aerosol cleaners.

Storage

When not in use, store the projector in its padded carry bag in a cool, dry, and dust-free environment to protect it from damage.

TROUBLESHOOTING

No Image / No Signal

- Ensure the power cable is securely connected and the projector is turned on.
- Verify that the correct input source (HDMI, AV, VGA, DVD, etc.) is selected on the projector.
- Check the connection cables between the projector and the source device for looseness or damage.
- Try connecting a different source device to confirm if the issue is with the projector or the source.

Blurry Image

- Adjust the focus ring on the projector lens until the image is clear.
- Ensure the projection distance is within the recommended range (refer to specifications).
- Use the keystone adjustment to correct any trapezoidal distortion.

No Sound / Low Sound

- Check the volume level on both the projector and the source device.
- If using Bluetooth, ensure the external speaker/headphone is properly paired and its volume is up.
- If connecting via HDMI, ensure the source device's audio output is set correctly.
- For DVD playback, ensure the disc's audio track is selected correctly.

Bluetooth Audio Lag

- While the projector has built-in Bluetooth, some users may experience slight audio lag with external Bluetooth

speakers. This is a known characteristic and cannot be adjusted. For critical audio synchronization, consider using a wired audio connection via the 3.5mm audio out port.

Loud Fan Noise

- The projector's cooling fan operates continuously to prevent overheating. The fan noise is normal for this type of device. Ensure adequate ventilation around the projector to prevent the fan from working harder than necessary.

SPECIFICATIONS

Feature	Detail
Brand	BIGASUO
Model Number	Pro302 DVD Projector
Display Resolution	1280 x 800 (Supports 1080P)
Contrast Ratio	8000:1
Connectivity	5G WiFi, Bluetooth 5.0, HDMI, USB, SD, AV, VGA
Built-in DVD Player	Yes (CD, DVD, CD-R/RW, DVD-R/+R, DVD+RW/-RW, VCD, SVCD)
Item Weight	5.51 pounds
Product Dimensions	7.99 x 3.86 x 6.57 inches
Recommended Uses	Home Cinema, Outdoor Activities, Portable Projector, Gaming

WARRANTY AND SUPPORT

For warranty information, technical support, or customer service inquiries, please refer to the contact details provided in the original product packaging or visit the official BIGASUO website.
The product is verified by Transparency, ensuring authenticity.

© 2023 BIGASUO. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question