

## GLAKER GLS03

# GLAKER Electric Rotary Shaver GLS03 User Manual

Model: GLS03

## 1. INTRODUCTION AND PRODUCT OVERVIEW

---

The GLAKER Electric Rotary Shaver GLS03 is designed for efficient and comfortable grooming. This comprehensive kit includes the electric shaver, a nose/ear hair trimmer, a soft toiletry bag, a cleaning brush, a USB charging cord, and two protective caps. The shaver features a 3D rotary head with 5-directional flex and floating blades for a smooth shave that adapts to facial contours, minimizing nicks and irritation. It also includes a pop-up trimmer for precise detailing.

The shaver is IPX6 waterproof, allowing for both wet and dry shaving. The nose/ear hair trimmer operates on an AA battery and is suitable for dry use only. The electric shaver is equipped with a fast-charging battery, providing 90 minutes of cordless use after a 1.5-hour charge, with an LCD screen displaying the remaining battery percentage.



Figure 1.1: GLAKER Electric Rotary Shaver GLS03.

## 2. PACKAGE CONTENTS

Verify that all items are present in the package:

- GLAKER Electric Rotary Shaver GLS03
- Nose/Ear Hair Trimmer
- Soft Toiletry Bag
- Cleaning Brush
- USB Charging Cord
- 2 Protective Caps

# Your Grooming Kit on the Go

Shave Better with Glaker

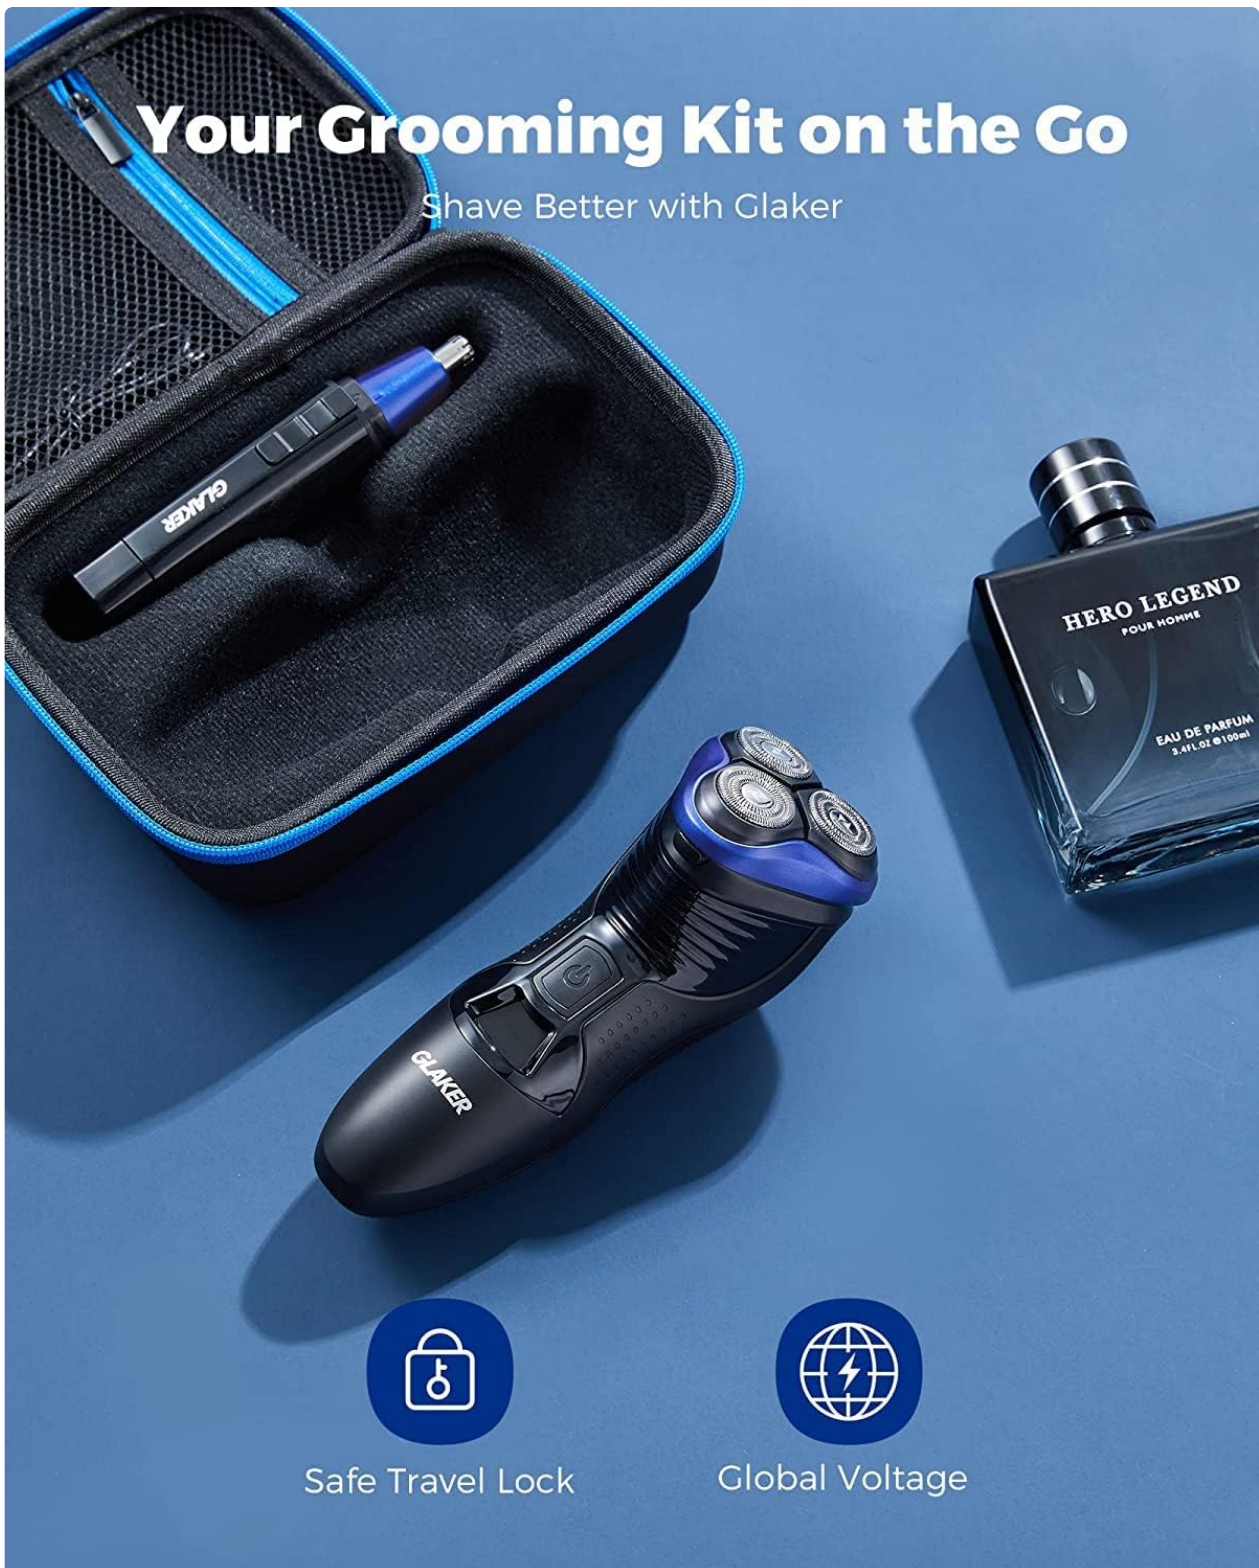


Figure 2.1: The complete GLAKER grooming kit, including the electric shaver, nose trimmer, and travel bag.

## 3. SETUP

### 3.1 Initial Charging

1. Connect the provided USB charging cord to the shaver's charging port.
2. Plug the other end of the USB cord into a 5V/1A AC adapter (not included) or a compatible USB power source.
3. The LCD screen on the shaver will display the charging progress. A full charge takes approximately 1.5 hours.

4. Once fully charged (100% displayed), disconnect the shaver from the power source.

## Fantastic Battery Life

**1.5<sub>H</sub>** Quick Charge      **90<sub>Mins</sub>** Run Time



Recommended 5V/1A AC Adapter  
is not included

Figure 3.1: The shaver's LCD screen indicates battery percentage during charging and use.

### 3.2 Nose/Ear Hair Trimmer Battery Installation

The nose/ear hair trimmer requires one AA battery (not included).

1. Twist the bottom cap of the trimmer counter-clockwise to open the battery compartment.
2. Insert one AA battery, ensuring correct polarity (+/-).
3. Replace the bottom cap and twist clockwise to secure.

## 4. OPERATING INSTRUCTIONS

## 4.1 Using the Electric Rotary Shaver

The shaver can be used for both wet and dry shaving.

- **Dry Shaving:** Ensure your face is clean and dry. Press the power button to turn on the shaver. Gently move the shaver in small circular motions over your face and neck.
- **Wet Shaving:** Apply shaving foam or gel to your face. Press the power button to turn on the shaver. Move the shaver in small circular motions. Rinse the shaver head under running water during and after use to prevent clogging.

The 5-directional flex and floating heads will adapt to your facial contours for an effective shave.

**Easy to Use & Clean**

  
Waterproof



  
**Wet**

  
**Dry**

Figure 4.1: The shaver is suitable for both wet shaving with foam and convenient dry shaving.

## 4.2 Using the Pop-up Trimmer

The integrated pop-up trimmer is ideal for precise edging of sideburns, mustaches, and beards.

1. With the shaver turned on, locate the pop-up trimmer switch on the back of the shaver.
2. Slide the switch upwards to engage the trimmer.
3. Use the trimmer to define lines and edges.
4. Slide the switch downwards to retract the trimmer when finished.

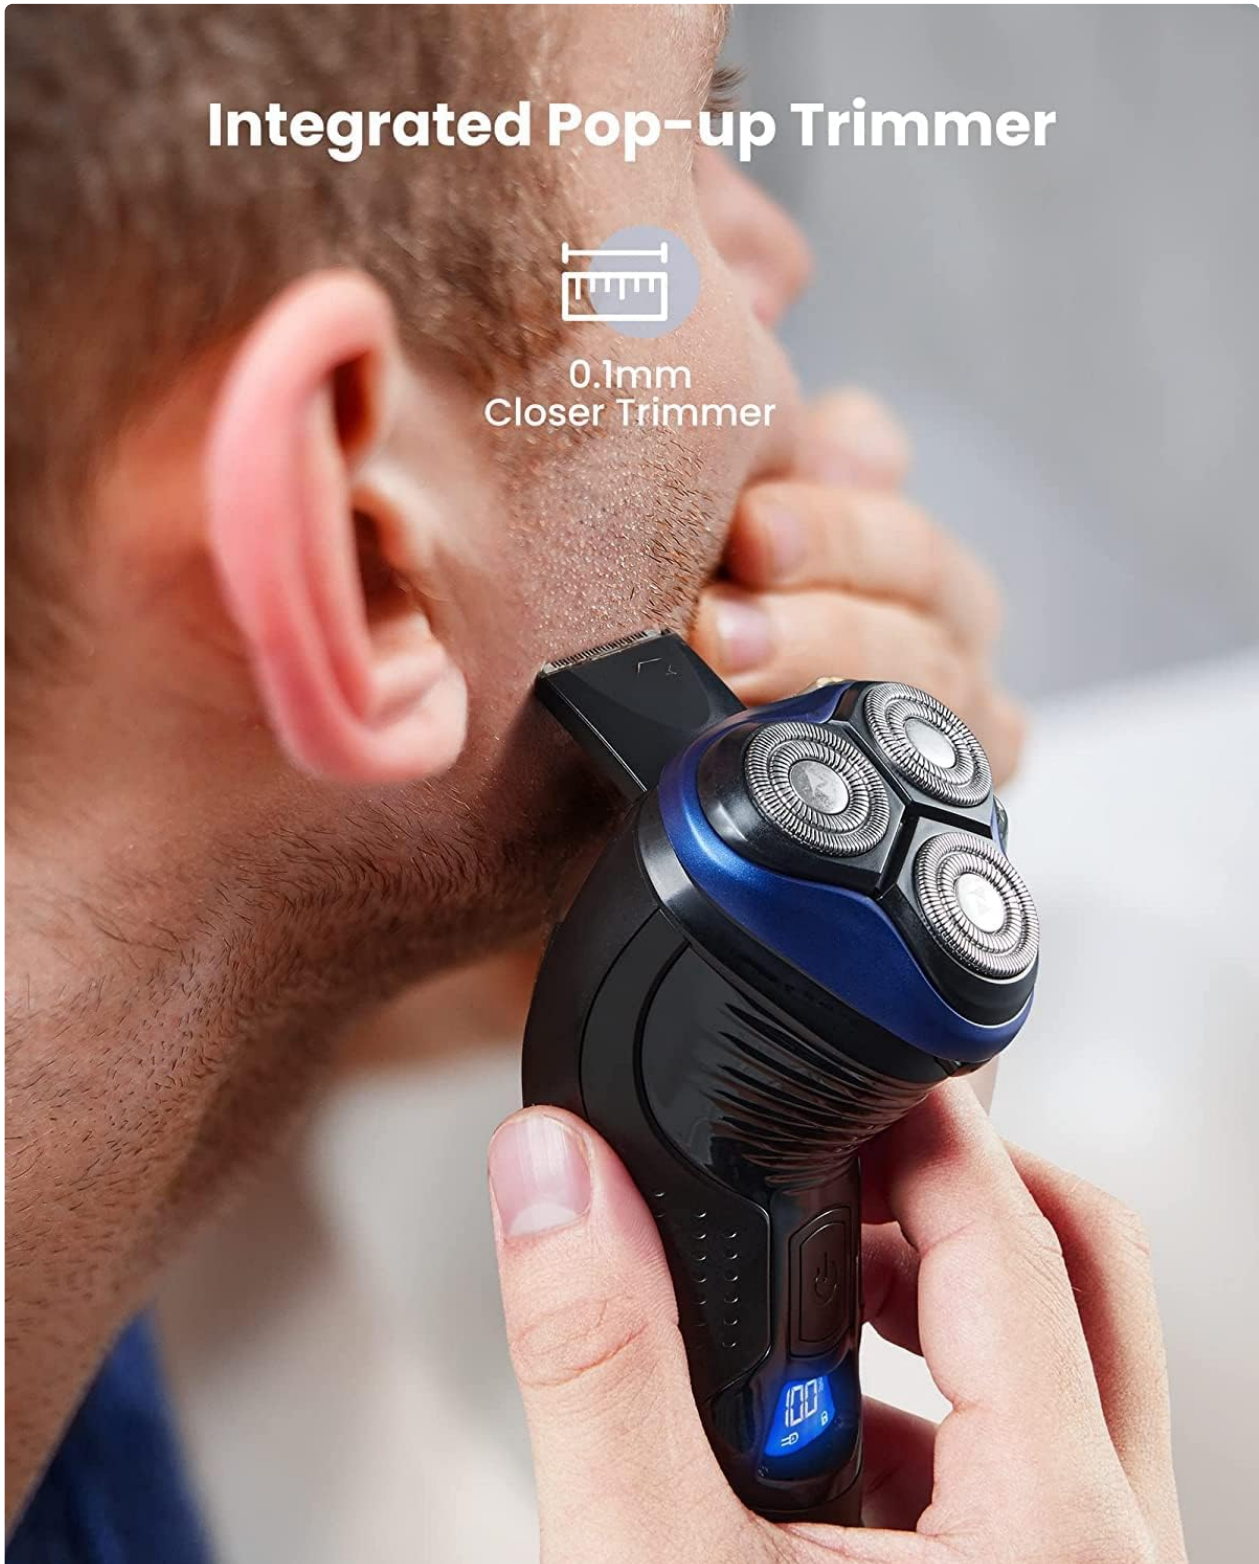


Figure 4.2: The integrated pop-up trimmer allows for precise detailing.

### 4.3 Using the Nose/Ear Hair Trimmer

The nose/ear hair trimmer is designed for dry use only.

1. Ensure the trimmer has a fresh AA battery installed.
2. Turn on the trimmer by sliding the power switch.
3. Gently insert the trimmer tip into your nostril or ear canal.
4. Move the trimmer in a circular motion to trim unwanted hair.
5. Turn off the trimmer after use.



Figure 4.3: The nose and ear hair trimmer for precise grooming.

## 5. MAINTENANCE

---

### 5.1 Cleaning the Electric Rotary Shaver

Regular cleaning ensures optimal performance and hygiene.

1. Turn off the shaver and disconnect it from any charging cable.
2. Press the release button to open the shaver head assembly.
3. Rinse the shaver head thoroughly under running water. For a deeper clean, you can detach the individual rotary blades.
4. Use the provided cleaning brush to remove any stubborn hair clippings from the blades and the shaver body.
5. Allow the shaver head to air dry completely before closing it or reattaching it to the shaver body.

### 5.2 Cleaning the Nose/Ear Hair Trimmer

1. Turn off the trimmer.
2. Twist the trimmer head counter-clockwise to remove it.
3. Rinse the trimmer head under running water. The trimmer body is not waterproof.
4. Use the cleaning brush to remove any hair from the trimmer head and the trimmer body.
5. Allow the trimmer head to air dry completely before reattaching it.

### 5.3 Blade Replacement

For continued optimal performance, it is recommended to replace the shaver blades and foil every 12 months, or sooner if you notice a decrease in shaving efficiency or increased irritation. Replacement parts can be purchased from authorized GLAKER retailers.

## 6. TROUBLESHOOTING

---

Problem	Possible Cause	Solution
Shaver does not turn on.	Battery is depleted.	Charge the shaver for 1.5 hours.
Shaver does not provide a close shave.	Blades are dull or dirty.	Clean the shaver head thoroughly. Consider replacing the blades/foil.
Shaver pulls hair or causes irritation.	Blades are dull or shaver head is clogged.	Clean the shaver head. Replace blades/foil if necessary. Ensure proper shaving technique (small circular motions).
Nose/Ear Trimmer does not work.	AA battery is depleted or incorrectly installed.	Replace the AA battery, ensuring correct polarity.

## 7. SPECIFICATIONS

---

- **Model Number:** GLS03
- **Brand:** GLAKER

- **Dimensions:** 2.7 x 2.9 x 7.2 inches
- **Weight:** 10 ounces
- **Head Type:** Rotary, 3 blades
- **Power Source:** Rechargeable (Corded Electric for charging, Cordless operation)
- **Charging Time:** Approximately 1.5 hours
- **Run Time:** Up to 90 minutes (cordless)
- **Waterproof Rating:** IPX6 (Shaver only)
- **Included Components:** Shaver, Nose/Ear Trimmer, Toiletry Bag, Cleaning Brush, USB Charging Cord, Protective Caps
- **Color:** Blue

## 8. OFFICIAL PRODUCT VIDEO

---

Your browser does not support the video tag.

Video 8.1: An official GLAKER video demonstrating the features and functionality of the electric shaver, including its flexible heads, waterproof design, and pop-up trimmer.

## 9. WARRANTY AND SUPPORT

---

GLAKER products are manufactured to high-quality standards. For information regarding warranty coverage, product support, or to purchase replacement parts, please refer to the warranty card included with your product or visit the official GLAKER website. Please retain your proof of purchase for warranty claims.