

[Manuals.plus](#) /

› [COSORI](#) /

› COSORI Lite 4.0-Quart Smart Air Fryer Instruction Manual

COSORI CAF-LI401S-AUS

COSORI Lite 4.0-Quart Smart Air Fryer Instruction Manual

Model: CAF-LI401S-AUS

1. INTRODUCTION

The COSORI Lite 4.0-Quart Smart Air Fryer is designed to simplify your cooking experience with its compact size and advanced features. This appliance utilizes rapid air circulation technology to cook food with significantly less oil, offering a healthier alternative to traditional deep frying. It features smart control capabilities, allowing for remote operation and monitoring via a smartphone app.



Image 1.1: The COSORI Lite 4.0-Quart Smart Air Fryer, showcasing its sleek design and digital control panel, alongside a smartphone displaying the companion app interface.

Key Features:

- **Smart Control:** Operate and monitor cooking remotely via the VeSync app.
- **7 Cooking Functions:** Pre-set options for common dishes like chicken, fries, bacon, steak, and veggies.
- **4.0-Quart Capacity:** Ideal for 1-3 servings, capable of cooking up to 2 lbs of French fries or 12 chicken wings.
- **97% Less Oil:** Achieve crispy results with minimal oil compared to traditional deep frying.
- **Dishwasher-Safe Components:** Nonstick basket and crisper plate for easy cleanup.
- **Even Heating Technology:** Ensures consistent cooking and crispy results.

2. IMPORTANT SAFETY INFORMATION

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, or injury. Read all instructions thoroughly before operation.

- Do not immerse the air fryer housing, cord, or plug in water or other liquids.
- Keep the appliance and its cord out of reach of children.
- Do not operate the air fryer if the cord or plug is damaged, or if the appliance malfunctions.
- Ensure the appliance is placed on a stable, heat-resistant surface, away from walls or other appliances to allow proper air circulation. Maintain at least 5 inches of clearance around the unit.
- The air fryer generates heat and steam during use. Do not block the air vents.
- Always unplug the air fryer when not in use and before cleaning.
- Use oven mitts when handling hot surfaces or removing the basket.

For detailed safety guidelines, please refer to the official Safety Information PDF document provided by COSORI.

3. PRODUCT COMPONENTS

Familiarize yourself with the main parts of your COSORI Lite 4.0-Quart Smart Air Fryer:

- **Main Unit:** Houses the heating element, fan, and control panel.
- **Control Panel:** Digital display with touch controls for temperature, time, presets, and smart functions.
- **Air Fryer Basket:** The main cooking compartment where food is placed.
- **Crisper Plate:** Sits inside the basket, allowing air to circulate around food for even cooking and crisping. It features silicone feet to prevent scratching the basket.

Nonstick Crisper Plate

Easy to put in and take out, while allows hot air to circulate around the food for a crispy surface



Image 3.1: A hand demonstrating the insertion of the nonstick crisper plate into the air fryer basket, highlighting its design for optimal air circulation.

The 4.0-quart capacity of the basket is designed to accommodate meals for 1-3 people, making it versatile for various cooking needs.

4.0-Quart Capacity

Allows for cooking 2 lb of French fries or 12 chicken wings in one go, making it perfect for 1-3 servings



Image 3.2: The 4.0-quart air fryer basket filled with French fries, illustrating its capacity and internal dimensions (7.9 x 7.9 x 4.3 inches).

4. SETUP

Before First Use:

1. Remove all packaging materials from the air fryer, including any stickers or labels.
2. Clean the air fryer basket and crisper plate thoroughly with warm, soapy water. Rinse and dry completely. The basket and crisper plate are dishwasher-safe.
3. Wipe the inside and outside of the main unit with a damp cloth.
4. Place the air fryer on a stable, level, heat-resistant surface, ensuring at least 5 inches of space from walls or other appliances for proper ventilation.

Test Run:

To ensure the air fryer is working correctly and to eliminate any potential manufacturing odors, perform a test run before cooking food:

1. Insert the clean basket and crisper plate into the air fryer.
2. Plug in the air fryer.
3. Set the temperature to 350°F (175°C) and the time to 5 minutes.
4. Start the air fryer. Allow it to complete the cycle.
5. Once complete, unplug the air fryer and let it cool down completely before proceeding.

Connecting to the VeSync App:

For smart control features, download the VeSync app from your smartphone's app store and follow the in-app instructions to pair your COSORI Lite 4.0-Quart Smart Air Fryer.

5. OPERATING INSTRUCTIONS

Basic Operation:

1. Place food in the air fryer basket, ensuring not to overfill.
2. Slide the basket back into the main unit until it clicks into place.
3. Use the digital control panel to select a preset cooking function or manually set the temperature (170°F–450°F) and time (1-60 minutes).
4. Press the Start/Pause button to begin cooking.
5. The air fryer features an automatic Shake Reminder to prompt you to shake or flip food halfway through cooking for even results.

Manual or Mobile Control

Choose manual adjustment of settings, or programme remotely through your smartphone


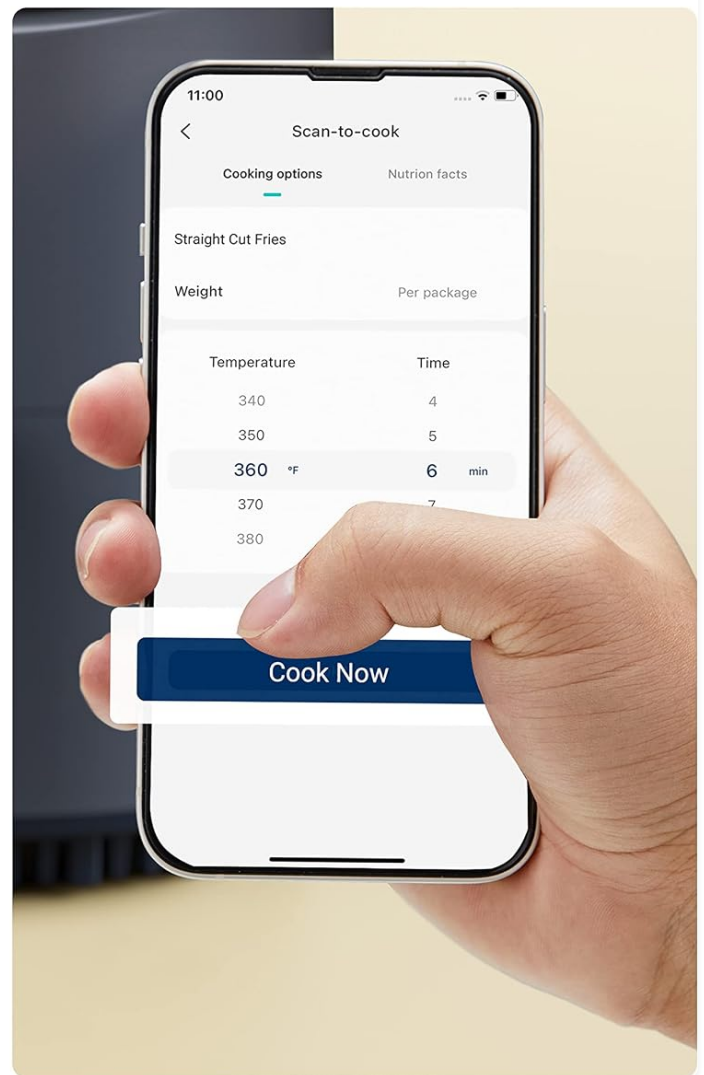


Image 5.1: The air fryer's digital control panel on the left, showing manual temperature and time settings, and a smartphone on the right, illustrating remote programming via the VeSync app.

Cooking Functions and Presets:

The COSORI Lite Air Fryer offers 7 one-touch cooking functions for convenience. Simply select the desired food type, and the air fryer will apply optimal temperature and time settings. You can also adjust these settings manually.

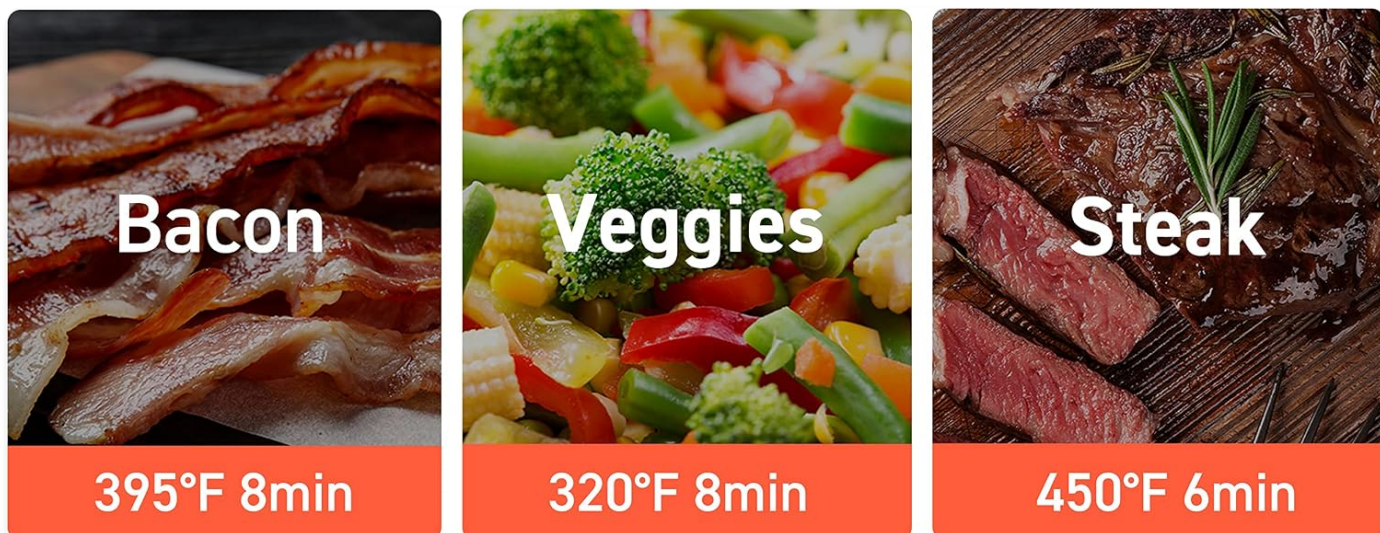

Enjoy Your Meals in Minutes

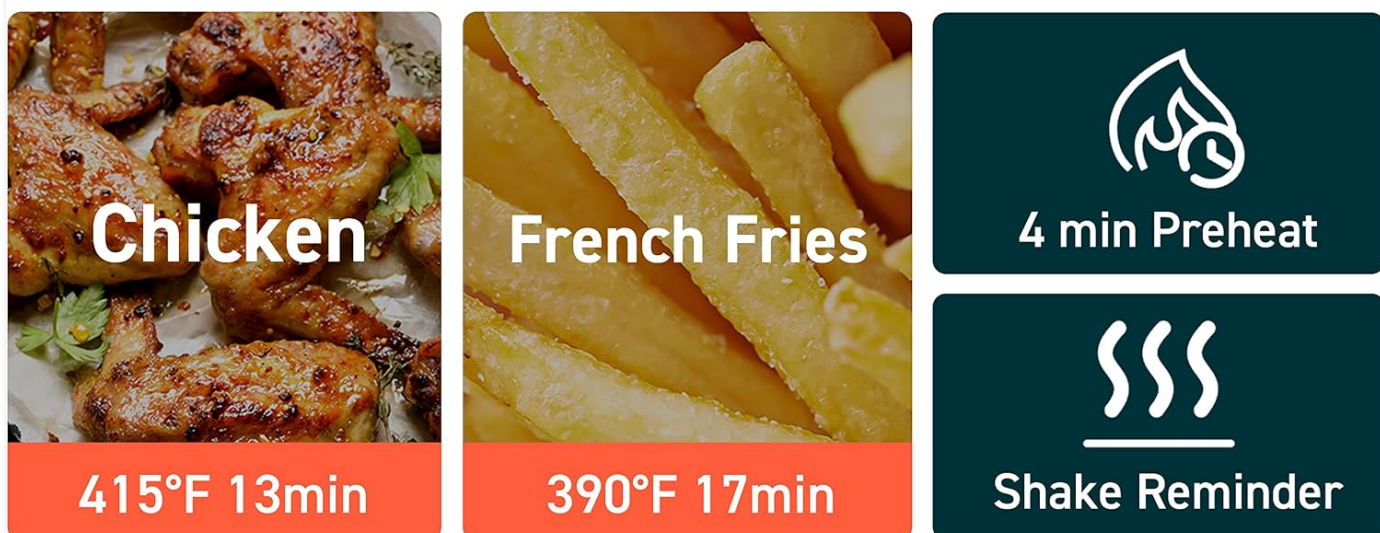


Image 5.2: Visual examples of various foods (Bacon, Veggies, Steak, Chicken, French Fries) with recommended cooking temperatures and times, demonstrating the air fryer's versatility.

Smart Features:

Utilize the VeSync app for enhanced control:

- **Remote Control:** Start, pause, or stop cooking from your smartphone.
- **Recipe Access:** Explore over 150 original recipes by COSORI chefs.
- **Smart Notifications:** Receive alerts for shake reminders and cooking completion.
- **Voice Control:** Compatible with Amazon Alexa for hands-free operation.

Your browser does not support the video tag.

Video 5.1: An official COSORI video introducing the Lite 4.0-Quart Smart Air Fryer, highlighting its design, smart features, and ease of use.

6. CLEANING AND MAINTENANCE

Regular cleaning ensures optimal performance and extends the lifespan of your air fryer.

Cleaning the Basket and Crisper Plate:

- Always unplug the air fryer and allow it to cool completely before cleaning.
- The nonstick basket and crisper plate are dishwasher-safe. For hand washing, use warm, soapy water and a non-abrasive sponge.
- Avoid using metal utensils or abrasive cleaning materials, as these can damage the nonstick coating.
- For stubborn food residue, soak the basket and crisper plate in warm, soapy water for 10-15 minutes before cleaning.

Dishwasher Safe

The nonstick, dishwasher-safe basket and crisper plate are BPA-Free and made without PFOA, making cleaning a breeze



Image 6.1: The air fryer basket and crisper plate placed in a dishwasher, demonstrating their dishwasher-safe design for convenient cleaning.

Cleaning the Main Unit:

- Wipe the exterior of the air fryer with a damp cloth. Do not immerse the unit in water.

- Clean the interior of the air fryer, including the heating coil, with a damp cloth or non-abrasive sponge. Remove any food debris.
- Ensure all parts are completely dry before storing or using the air fryer again.

7. TROUBLESHOOTING

If you encounter issues with your COSORI Lite 4.0-Quart Smart Air Fryer, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Air fryer does not turn on.	Not plugged in; power outlet issue; basket not fully inserted.	Ensure the power cord is securely plugged into a working outlet. Check if the basket is fully pushed into the unit.
Food is not cooked evenly.	Basket is overcrowded; food not shaken/flipped.	Cook food in smaller batches. Shake or flip food halfway through cooking, especially for items like fries or chicken wings.
White smoke coming from air fryer.	Grease residue from previous cooking; high-fat food.	Clean the basket and crisper plate thoroughly after each use. For high-fat foods, drain excess oil from the basket during cooking.
Cannot connect to VeSync app.	Wi-Fi issues; incorrect pairing steps.	Ensure your Wi-Fi network is 2.4GHz. Restart your router and air fryer. Follow the in-app pairing instructions carefully.

If the problem persists, please contact COSORI Customer Support.

8. SPECIFICATIONS

Specification	Detail
Model	CAF-LI401S-AUS
Capacity	4.0 Quarts
Temperature Range	170°F–450°F (77°C–232°C)
Time Range	1-60 minutes
Rated Power	1500W
Power Supply	AC 120V, 60Hz (US and Canada only)
Product Dimensions (D x W x H)	13.6" x 10.8" x 12.8"
Item Weight	9.75 lbs (4.43 kg)
Material	Non-stick
Special Features	Smart Control, Manual Control, Programmable

Specification	Detail
Dishwasher Safe	Yes (Basket and Crisper Plate)
Certifications	ETL-Listed

9. WARRANTY AND SUPPORT

Warranty Information:

COSORI provides a limited warranty for this product. Please refer to the warranty card included with your purchase or visit the official COSORI website for the most up-to-date warranty terms and conditions. Keep your proof of purchase for warranty claims.

Customer Support:

For any questions, concerns, or technical assistance regarding your COSORI Lite 4.0-Quart Smart Air Fryer, please contact COSORI Customer Support. Contact information can typically be found in the product packaging, on the official COSORI website, or within the VeSync app.

When contacting support, please have your model number (CAF-LI401S-AUS) and purchase details ready.

© 2024 COSORI. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question