

CHICIRIS B0B2KD7VD2

CHICIRIS Electric Egg Boiler User Manual

Model: B0B2KD7VD2

IMPORTANT SAFETY INSTRUCTIONS

Please read all instructions carefully before using the appliance and retain for future reference. Failure to follow these instructions may result in electric shock, fire, or serious injury.

- Always unplug the appliance from the power outlet when not in use, before cleaning, or if a malfunction occurs.
- Do not immerse the main unit (base with heating plate) in water or any other liquid.
- Keep the appliance away from children. Close supervision is necessary when any appliance is used by or near children.
- Use the appliance on a stable, flat, heat-resistant surface.
- Do not operate the appliance with a damaged cord or plug, or if the appliance malfunctions or has been damaged in any manner.
- Avoid contact with hot surfaces. Use handles or knobs. Steam released during operation is hot.
- Do not use attachments not recommended by the manufacturer, as this may cause hazards.
- This appliance is for household use only. Do not use outdoors.

PRODUCT OVERVIEW

The CHICIRIS Electric Egg Boiler is designed for convenient and efficient egg cooking and food steaming. It features a compact, chicken-shaped design and automatic shut-off for safety.

Components:

- **Main Unit:** Contains the heating plate and power switch.
- **Lid:** Chicken-shaped cover with an ergonomic handle.
- **Egg Steaming Rack:** Holds up to 7 eggs.
- **Measuring Cup:** Used to add the correct amount of water for desired egg doneness.



Figure 1: Labeled components of the CHICIRIS Electric Egg Boiler.

SETUP

1. **Unpack:** Carefully remove all components from the packaging.
2. **Clean:** Wash the lid, egg steaming rack, and measuring cup with warm, soapy water. Rinse thoroughly and dry. Wipe the main unit with a damp cloth. Do not immerse the main unit in water.
3. **Placement:** Place the main unit on a stable, flat, heat-resistant surface near a power outlet.

OPERATING INSTRUCTIONS

Cooking Eggs:

1. **Add Water:** Use the provided measuring cup to add the appropriate amount of water to the heating plate of the main unit. The measuring cup has markings for different egg doneness (e.g., soft, medium, hard). Adjust water level based on desired consistency.
2. **Place Eggs:** Place the egg steaming rack onto the main unit. Carefully place up to 7 eggs onto the rack. For best results and to prevent cracking, you may gently pierce the larger end of each egg with a pin (not included) before cooking.
3. **Cover:** Place the chicken-shaped lid securely over the egg steaming rack and main unit.
4. **Start Cooking:** Plug the appliance into a suitable power outlet. Press the power switch (usually located on the front of the main unit). The power indicator light will illuminate, indicating that the appliance has started cooking.
5. **Automatic Shut-off:** The egg boiler will automatically turn off when all the water has evaporated from the heating plate. The power indicator light will extinguish.
6. **Serve:** Once the light goes out, carefully unplug the appliance. Use oven mitts or a towel to remove the hot lid and egg rack. Immediately transfer the cooked eggs to a bowl of cold water to stop the cooking process and make them easier to peel.



Figure 2: Preparing eggs in the CHICIRIS Electric Egg Boiler.

Steaming Other Foods:

This appliance can also be used to steam other small food items. Place a heat-safe dish with your food (e.g., dumplings, corn, small vegetables) onto the steaming rack, add water to the heating plate as needed, cover, and turn on. The appliance will shut off automatically when the water evaporates.



Figure 3: Examples of various foods that can be steamed with the appliance.

MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and extends the life of your egg boiler.

1. **Unplug and Cool:** Always unplug the appliance and allow it to cool completely before cleaning.
2. **Wash Removable Parts:** The lid, egg steaming rack, and measuring cup can be washed by hand with warm, soapy water. Rinse thoroughly and dry. These parts are generally not dishwasher safe.

3. **Clean Main Unit:** Wipe the exterior of the main unit with a soft, damp cloth. Do not use abrasive cleaners or scouring pads.
4. **Heating Plate Descaling:** Over time, mineral deposits (scale) may build up on the stainless steel heating plate. To remove, add a mixture of water and white vinegar (1:1 ratio) to the heating plate. Let it sit for 15-30 minutes, then gently scrub with a non-abrasive sponge. Rinse by wiping with a damp cloth. Do not immerse the main unit in water.
5. **Storage:** Ensure all parts are dry before storing the appliance in a cool, dry place.

TROUBLESHOOTING

- **Appliance does not turn on:**
 - Ensure the power cord is securely plugged into a working outlet.
 - Check that the power switch on the unit is pressed to the 'ON' position.
- **Eggs are not cooked to desired doneness:**
 - Verify that the correct amount of water was added using the measuring cup for your desired egg consistency.
 - Ensure the lid is properly seated to retain steam.
- **Water boils dry too quickly:**
 - Confirm that the correct water level for your desired doneness was used. Adding too little water will result in faster evaporation.

SPECIFICATIONS

Feature	Specification
Model	B0B2KD7VD2
Power	350W
Capacity	7 Eggs
Material	PP and Stainless Steel
Product Dimensions (L x W x H)	7.1" x 7.1" x 6.3" (Approx. 18cm x 18cm x 16cm)
Color	Yellow (US plug variant)



Figure 4: Product dimensions of the CHICIRIS Electric Egg Boiler.

WARRANTY AND SUPPORT

For warranty information or technical support, please contact CHICIRIS customer service through the retailer where the product was purchased or refer to the contact information provided with your product packaging.

© 2023 CHICIRIS. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question

and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question