

## Naxa NID-1021

# Naxa NID-1021 Core Android 11 Tablet User Manual

Model: NID-1021 | Brand: Naxa

## INTRODUCTION

This manual provides detailed instructions for the setup, operation, and maintenance of your Naxa NID-1021 Core Android 11 Tablet. Please read this manual thoroughly before using your device to ensure proper functionality and to maximize your user experience.

## WHAT'S IN THE Box

- Naxa NID-1021 Core Android 11 Tablet
- USB Keyboard & Case
- UL Approved Power Adapter
- Wired Headphones

## PRODUCT FEATURES

- **10.1-inch HD IPS Screen:** Enjoy clear and vibrant visuals.
- **Android 11 Go Operating System:** Optimized for efficient performance.
- **High-power 1.6 GHz Quad Core Processor:** For smooth multitasking and application usage.
- **2 GB RAM:** Supports efficient operation of applications.
- **16 GB Internal Storage:** Expandable via memory card for additional capacity.
- **Built-in Bluetooth Functionality:** Connect wireless accessories with ease.
- **Front and Rear Cameras:** For video conferencing and capturing moments.
- **Integrated Speaker and Microphone:** For audio playback and communication.
- **Includes a USB Keyboard Case:** Transforms your tablet into a portable workstation.



Powered by:  
Android 11  
Go Edition



## 10.1" CORE ANDROID® 11 TABLET WITH USB KEYBOARD CASE



System  
Memory



Built-in  
Memory



Bluetooth® Keyboard



Wi-Fi



Card Slot

Image: Infographic highlighting key features of the Naxa NID-1021 tablet, including 2GB RAM, 16GB Built-in Memory, Bluetooth Keyboard, Wi-Fi, and a Card Slot.

## SETUP GUIDE

### 1. Initial Power On and Charging

Before first use, fully charge your tablet using the provided UL Approved Power Adapter. Connect the adapter to the tablet's charging port and plug it into a power outlet. The battery indicator will show charging status.

1. Press and hold the Power button (usually located on the side or top edge) until the Naxa logo appears.
2. Follow the on-screen prompts to select your language, region, and accept the terms and conditions.

### 2. Connecting to Wi-Fi

1. From the home screen, tap the "Settings" icon (gear symbol).
2. Select "Network & internet" then "Wi-Fi".
3. Toggle Wi-Fi to "On".
4. Select your desired Wi-Fi network from the list.

5. Enter the network password if prompted and tap "Connect".

### 3. Connecting the USB Keyboard Case

The USB Keyboard Case connects directly to your tablet via a USB port. No Bluetooth pairing is required for the keyboard functionality.

1. Carefully place your NID-1021 tablet into the provided case, ensuring it is securely held.
2. Locate the USB connector on the keyboard and plug it into the corresponding USB port on your tablet.
3. The tablet should automatically recognize the keyboard. You can now use the physical keyboard for typing.



Image: The Naxa NID-1021 tablet securely placed within its USB keyboard case, ready for use. The tablet screen displays the Naxa logo and Android interface.

### 4. Bluetooth Device Pairing

Your tablet supports Bluetooth connectivity for accessories like headphones, speakers, or a wireless mouse.

1. Go to "Settings" > "Connected devices" > "Connection preferences" > "Bluetooth".
2. Toggle Bluetooth to "On".
3. Ensure your Bluetooth device is in pairing mode (refer to your device's manual).
4. The tablet will scan for available devices. Select your device from the list to pair.

5. Confirm any pairing codes if prompted.

## 5. Setting Up User Profiles and Parental Controls

The Android 11 Go operating system allows for multiple user profiles, including restricted profiles for children, enabling parental controls.

1. Go to "Settings" > "System" > "Multiple users".
2. Tap "Add user" or "Add guest" to create a new profile.
3. For child profiles, you can set up restrictions on app access, content, and screen time through Google Family Link or similar parental control applications.
4. All child profile activities are managed through the adult account.

## OPERATING YOUR TABLET

### Basic Navigation

- **Touch Gestures:** Tap to select, swipe to scroll, pinch to zoom.
- **Home Screen:** Access apps, widgets, and notifications.
- **App Drawer:** Swipe up from the bottom of the screen to view all installed applications.
- **Notifications:** Swipe down from the top of the screen to view notifications and quick settings.



Image: The Naxa NID-1021 tablet displaying its home screen with the Naxa logo wallpaper and various app icons, including Google apps and Play Store.

### Using Cameras

Your tablet is equipped with front and rear cameras for photos and video calls.

1. Tap the "Camera" app icon to open the camera interface.
2. Switch between front and rear cameras using the camera toggle icon.
3. Tap the shutter button to take a photo or start/stop video recording.



Image: The back of the Naxa NID-1021 tablet, showing the rear camera lens and speaker grilles.

## Expanding Storage with a Memory Card

The tablet supports memory cards for additional storage. This is useful for storing more apps, photos, videos, and documents.

1. Locate the memory card slot on your tablet (usually on the side).
2. Gently insert a compatible microSD card into the slot until it clicks into place.
3. The tablet will prompt you to format the card or use it as portable storage. Follow the on-screen instructions.

## MAINTENANCE AND CARE

- **Cleaning:** Use a soft, lint-free cloth to clean the screen and body of the tablet. Avoid abrasive cleaners or solvents.
- **Battery Care:** To prolong battery life, avoid extreme temperatures. Do not leave the tablet fully charged or fully discharged for extended periods.
- **Software Updates:** Periodically check for system updates in "Settings" > "System" > "System update" to ensure optimal performance and security.
- **Storage Management:** Regularly clear unnecessary files and uninstall unused apps to maintain sufficient storage space and performance.

## TROUBLESHOOTING

Problem	Solution
---------	----------

Problem	Solution
Tablet does not power on.	Ensure the tablet is charged. Connect the power adapter and wait a few minutes before attempting to power on again. If unresponsive, perform a hard reset by holding the power button for 10-15 seconds.
Cannot connect to Wi-Fi.	Check if Wi-Fi is enabled in settings. Verify the Wi-Fi password. Restart your router and the tablet. Try connecting to a different Wi-Fi network if available.
Keyboard is not responding.	Ensure the USB connector is fully inserted into the tablet's USB port. Try unplugging and re-plugging the keyboard. Restart the tablet.
Tablet is running slow.	Close unused applications. Clear cache from apps in "Settings" > "Apps & notifications". Consider uninstalling large or unnecessary apps. Check for system updates.
Bluetooth device won't pair.	Ensure Bluetooth is enabled on both the tablet and the device. Make sure the device is in pairing mode. Try restarting both devices.

## SPECIFICATIONS

Feature	Detail
Model	NID-1021
Operating System	Android 11 Go
Screen Size	10.1 Inches
Screen Resolution	1280 x 800 pixels (Max: 600 x 1024 Pixels)
Processor	1.6 GHz Quad Core (Allwinner)
RAM	2 GB
Internal Storage	16 GB Flash Memory (expandable)
Rear Webcam Resolution	2 MP
Wireless Type	802.11n (Wi-Fi)
Bluetooth	Yes
Average Battery Life	4 Hours
Item Weight	1.14 pounds
Product Dimensions	10.55 x 0.5 x 4.6 inches
Color	Black

## WARRANTY AND SUPPORT

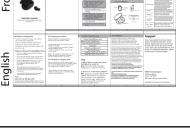
For warranty information and technical support, please refer to the documentation included with your product or visit the official Naxa Electronics website. You can also contact Naxa customer service for assistance with product issues or inquiries.

**Naxa Electronics, Inc.**

[Visit the Naxa Store on Amazon](#)

© 2023 Naxa Electronics. All rights reserved.

## Related Documents - NID-1021

	<p><a href="#">Naxa NID-1002 10.1" Core Tablet Instruction Manual</a></p> <p>Comprehensive instruction manual for the Naxa NID-1002 10.1" Core Tablet, covering setup, basic operations, app management, connectivity, troubleshooting, and specifications. Learn how to use your Naxa tablet effectively.</p>
	<p><a href="#">Naxa NID-1070 Core Tablet User Manual</a></p> <p>Comprehensive user manual for the Naxa NID-1070 10.1-inch Core Tablet with Android 11 and Bluetooth Keyboard. Get detailed instructions on setup, features, connecting to Wi-Fi and Bluetooth, using applications, and technical specifications. Includes troubleshooting and support information.</p>
	<p><a href="#">Naxa NID-1080 10.1" Tablet Combo User Manual</a></p> <p>User manual for the Naxa NID-1080 10.1-inch Tablet Combo with Detachable Keyboard &amp; Bluetooth Headphone, covering setup, features, and basic operations.</p>
	<p><a href="#">Naxa NKM-101 Portable Karaoke Party System with Bluetooth - Instruction Manual</a></p> <p>Comprehensive instruction manual for the Naxa NKM-101 Portable Karaoke Party System with Bluetooth. Learn how to set up, operate, and troubleshoot your karaoke system.</p>
	<p><a href="#">Naxa NF-503 7-Inch Digital Photo Frame User Manual</a></p> <p>User manual for the Naxa NF-503 7-inch Digital Photo Frame, covering its features, setup, operating instructions, and troubleshooting guide.</p>
	<p><a href="#">Naxa NE-976 True Wireless Bluetooth Headset &amp; Charging Case - Operation Manual</a></p> <p>User manual for the Naxa NE-976 True Wireless Bluetooth Headset &amp; Charging Case. Learn how to pair, charge, and use its features. Includes specifications and support information.</p>