

Naxa NID-7021

Naxa NID-7021 Android 11 Tablet with USB Keyboard Case User Manual

Model: NID-7021 | Brand: Naxa

1. INTRODUCTION

This manual provides essential information for the proper setup, operation, and maintenance of your Naxa NID-7021 Android 11 Tablet with USB Keyboard Case. The NID-7021 is a 7-inch HD TN screen tablet powered by a 1.6 GHz Quad Core processor and 2GB RAM, running Android 11 Go OS. It features 16GB of internal storage, front and rear cameras, and includes a USB keyboard case for enhanced productivity. Please read this manual thoroughly before using your device.

2. WHAT'S IN THE BOX

Carefully unpack your Naxa NID-7021 Tablet and ensure all items are present:

- Naxa NID-7021 Android 11 Tablet
- USB Keyboard Case
- UL Approved Power Adapter

3. PRODUCT OVERVIEW

Familiarize yourself with the physical components of your tablet and keyboard case.



Image: Front view of the Naxa NID-7021 tablet, displaying the screen with the Naxa logo and app icons.



Image: Rear view of the Naxa NID-7021 tablet, showing the black casing and the rear camera lens.



Image: The Naxa NID-7021 tablet inserted into its USB keyboard case, open and ready for use.

Tablet Components:

- **7-inch HD TN Screen:** Main display for interaction.
- **Front Camera:** Located on the front bezel, typically used for video calls.
- **Rear Camera:** Located on the back of the tablet, for taking photos and videos.
- **Power Button:** Usually on the side, press and hold to power on/off, short press to sleep/wake.
- **Volume Buttons:** Typically adjacent to the power button, for adjusting audio levels.
- **USB Port:** For charging, data transfer, and connecting the keyboard case.
- **Headphone Jack:** Standard 3.5mm port for audio output.
- **MicroSD Card Slot:** For expanding storage capacity.
- **Speaker & Microphone:** Integrated for audio playback and recording.

USB Keyboard Case:

- **Standard QWERTY Keyboard:** For typing and navigation.
- **USB Connector:** Connects to the tablet's USB port for power and data.
- **Protective Casing:** Secures the tablet and provides a stand.

4. SETUP

4.1 Initial Charging

1. Connect the UL approved power adapter to the tablet's USB port.
2. Plug the adapter into a wall outlet.
3. Allow the tablet to charge completely before first use. The battery indicator on the screen will show charging status.

4.2 Powering On/Off

- **To Power On:** Press and hold the Power button until the Naxa logo appears on the screen.
- **To Power Off:** Press and hold the Power button until a power-off menu appears. Select "Power off" and confirm.
- **To Sleep/Wake:** Briefly press the Power button.

4.3 Initial Android Setup

Upon first power-on, you will be guided through the Android 11 Go setup process:

1. Select your preferred language.
2. Connect to a Wi-Fi network. This is crucial for downloading updates and accessing Google services.
3. Sign in with your Google account or create a new one. This is required for Google Play Store access and app synchronization.
4. Follow the on-screen prompts to set up date/time, security (PIN, pattern, or password), and other preferences.

4.4 Connecting the USB Keyboard Case

1. Carefully insert the tablet into the protective casing of the keyboard.
2. Connect the USB cable from the keyboard to the USB port on the tablet.
3. The tablet should automatically detect the keyboard. You can now use the physical keyboard for typing and navigation.

5. OPERATING INSTRUCTIONS

5.1 Basic Touchscreen Navigation

- **Tap:** Select an item or open an app.
- **Tap & Hold:** Access contextual menus or move icons.
- **Swipe:** Scroll through pages or lists.
- **Pinch:** Zoom in or out on images and web pages.

5.2 Wi-Fi Connection

1. Go to **Settings > Network & internet > Wi-Fi**.
2. Toggle **Wi-Fi On**.
3. Select your desired network from the list and enter the password if prompted.

5.3 Bluetooth Pairing

The tablet supports Bluetooth connectivity for devices like headphones, speakers, or other peripherals.

1. Go to **Settings** > **Connected devices** > **Bluetooth**.
2. Toggle Bluetooth **On**.
3. Ensure your Bluetooth device is in pairing mode.
4. Select the device from the list of available devices and follow any on-screen prompts to complete pairing.

5.4 Using Cameras

The tablet features front and rear cameras for photos and video conferencing.

1. Open the **Camera** app.
2. Tap the shutter button to take a photo.
3. Switch between front and rear cameras using the camera icon.
4. Select video mode to record videos.

5.5 Installing and Managing Apps

Access a wide range of applications through the Google Play Store.

- Open the **Play Store** app.
- Search for apps and tap **Install** to download them.
- To manage apps, go to **Settings** > **Apps & notifications**. You can uninstall, force stop, or clear data for apps here.

5.6 Storage Management

The tablet comes with 16GB of internal storage, expandable via a microSD card.

- To check storage, go to **Settings** > **Storage**.
- Insert a microSD card into the designated slot to expand storage for photos, videos, and other files.

6. MAINTENANCE

6.1 Cleaning the Device

- Use a soft, lint-free cloth to clean the screen and body of the tablet.
- For stubborn marks, slightly dampen the cloth with water or a screen cleaner designed for electronics.
- Avoid using harsh chemicals, abrasive cleaners, or excessive moisture.

6.2 Battery Care

- Avoid extreme temperatures, as they can degrade battery life.
- Do not leave the tablet charging for extended periods after it's fully charged.
- Use only the provided UL approved power adapter or a compatible charger.

6.3 Software Updates

Regularly check for and install software updates to ensure optimal performance and security.

1. Connect to a stable Wi-Fi network.
2. Go to **Settings > System > System update**.
3. Follow the on-screen instructions to download and install any available updates.

7. TROUBLESHOOTING

If you encounter issues with your Naxa NID-7021 Tablet, refer to the following common solutions:

Problem	Solution
Tablet does not power on.	Ensure the battery is charged. Connect the power adapter and wait a few minutes before attempting to power on again.
Wi-Fi connection issues.	Check if Wi-Fi is enabled in Settings. Restart your router and the tablet. Ensure you are within range of the Wi-Fi signal.
Apps are crashing or running slowly.	Close unused apps. Clear app cache (Settings > Apps & notifications > [App Name] > Storage & cache). Restart the tablet. Ensure sufficient storage space.
Keyboard case not responding.	Ensure the USB cable is securely connected to both the keyboard and the tablet. Try reconnecting the cable. Restart the tablet.
Tablet is unresponsive.	Perform a force restart by pressing and holding the Power button for approximately 10-15 seconds until the tablet restarts.
Low storage space.	Delete unnecessary files and apps. Move media to a microSD card. Clear cache data for apps.

If problems persist, consider performing a factory reset (**Settings > System > Reset options > Erase all data (factory reset)**). **Warning:** This will erase all data on your tablet. Back up important data before proceeding.

8. SPECIFICATIONS

Detailed technical specifications for the Naxa NID-7021 Tablet:

Feature	Specification
Model	NID-7021
Operating System	Android 11 Go
Screen Size	7 Inches
Screen Resolution	1024x600 HD TN
Processor	1.6 GHz Quad Core (Allwinner)
RAM	2 GB
Internal Storage	16 GB Flash Memory

Feature	Specification
Expandable Storage	MicroSD Card Slot
Cameras	Front & Rear (Rear Webcam Resolution: 2 MP)
Connectivity	Wi-Fi, Bluetooth
Ports	USB, 3.5mm Headphone Jack
Battery	1 Lithium Ion battery (included)
Item Weight	10.4 ounces
Product Dimensions (LxWxH)	7.5 x 0.49 x 4.6 inches
Color	Black

9. SAFETY INFORMATION

Please observe the following safety guidelines to prevent damage to your device or injury:

- Do not expose the tablet to extreme temperatures, direct sunlight, or high humidity.
- Avoid dropping or subjecting the tablet to strong impacts.
- Keep the tablet away from water and other liquids.
- Do not attempt to disassemble or repair the tablet yourself. Refer to qualified service personnel.
- Use only the provided accessories and power adapter.
- Dispose of batteries and electronic components responsibly according to local regulations.

10. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the documentation included with your purchase or visit the official Naxa Electronics website. Keep your proof of purchase for warranty claims.