

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Yaheetech](#) /

› [Yaheetech 13x13 Pop Up Hexagonal Gazebo Instruction Manual - Model YTshvw0002001](#)

### Yaheetech YTshvw0002001

# Yaheetech 13x13 Pop Up Hexagonal Gazebo Instruction Manual

Model: YTshvw0002001 | Brand: Yaheetech

## SAFETY INFORMATION

Please read and understand all safety information before assembly and use of this product. Failure to follow these instructions may result in injury or product damage.

- Ensure the shelter is securely anchored with pegs and ropes to prevent it from being blown down during use.
- Avoid using in heavy windy or rainy conditions to prolong the product's life and ensure safety.
- Two or more adults are needed to set up/take down this gazebo.
- For optimal performance and safety, do not use this gazebo in conditions of strong breeze, continuous light rain, heavy rain, or any other extreme weather scenarios.

## PRODUCT OVERVIEW

The Yaheetech 13x13 Pop Up Hexagonal Gazebo is designed to provide a comfortable and protected outdoor space. It features a hexagonal shape, double-tiered roof for enhanced ventilation, and mesh netting for all-around protection against insects.



Image: The fully assembled Yaheetech 13x13 Pop Up Hexagonal Gazebo with mesh walls in an outdoor patio setting.

## Key Features

- **All-Around Protection:** Six-sided mesh walls keep insects at bay while allowing fresh air circulation.
- **Weather-Resistant:** Hard-wearing polyester fabric with water- and tear-resistant PA finish, supported by a sturdy powder-coated metal frame.
- **Adjustable Heights:** Features adjustable heights of 8.6', 8.9', and 9.2' to suit various outdoor events.
- **Enhanced Ventilation:** Double-tiered top ensures better heat regulation, increased air circulation, and improved wind resistance.
- **Easy Transport & Storage:** Compact folded size (10.2" L x 10.2" W x 46.5" H) and included carry bag for convenience.

Video: A brief overview of the Yaheetech 13x13 Pop up Gazebo, highlighting its hexagonal shape and mesh walls.

## PACKAGE CONTENTS

Before beginning assembly, ensure all parts listed below are present and undamaged. If any parts are missing or damaged, please contact customer service.



Image: A visual representation of all components included in the package: Metal Frame, Wheeled Bag, Top Cover Cloth, Small Cover Cloth, Mesh Sidewall, Stakes (two sizes), and Rope.

- Metal Frame (1)
- Top Cover Cloth (1)
- Small Cover Cloth (1)
- Mesh Sidewalls (6)
- Stakes (various sizes)
- Ropes
- Wheeled Carry Bag (1)

## SETUP INSTRUCTIONS

Follow these steps for a quick and easy assembly. It is recommended to have at least two people for setup.

Video: Detailed installation guide for the Pop Up Gazebo Hexagonal Outdoor Gazebo, demonstrating each step of the assembly process.

### Step 1: Unpacking and Frame Extension

1. Remove the folded frame and canopy from the wheeled carry bag.
2. Place the folded frame in the center of your desired setup area.
3. With a partner, gently pull the outer legs of the frame outwards to begin extending it.

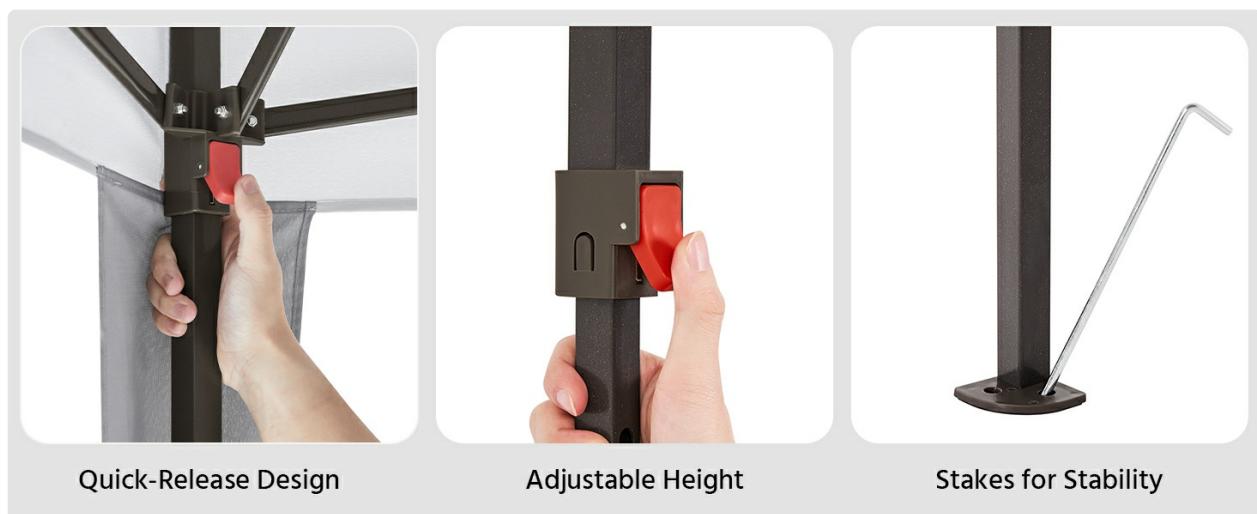


Image: A visual guide showing the three easy setup steps: 1. Open the frame and install the canopy top. 2. Lift the four corner buttons to lock the frame in place. 3. Adjust to desired height.

### Step 2: Attaching the Canopy Top

1. Drape the main canopy top over the partially extended frame. Ensure the corners of the canopy align with the frame's corners.
2. Secure the canopy to the frame using the Velcro straps located on the underside of the canopy.
3. Insert the small top cover cloth into the center opening of the main canopy.

### Step 3: Extending Legs and Securing

1. Push up on the center hub of the frame until it locks into place.
2. Extend each leg of the gazebo by pressing the red quick-release button and pulling the inner leg section downwards until it clicks into the desired height adjustment hole. There are three adjustable height settings.
3. Secure the gazebo to the ground using the provided stakes. Insert the J-shaped stakes through the holes in the footplates of each leg.
4. Attach the ropes to the designated loops on the canopy and stake them into the ground at an angle for additional stability.



Image: Close-up views of the quick-release button for easy folding, the adjustable height mechanism on the legs, and the secure pegs for ground anchoring.


### Step 4: Attaching Mesh Sidewalls

1. Attach the mesh sidewalls to the gazebo frame using the Velcro straps located along the top edge of each mesh panel.
2. Zip the mesh panels together to create a fully enclosed space.
3. Use the ties on the mesh panels to secure them to the gazebo legs, or to tie them back when not in use.



## DETACHABLE SIDEWALLS

Fully enclosed sidewalls can block annoying "visitors" while maintaining ventilation

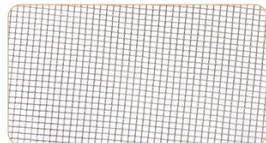

Mesh Sidewall



Double Zippered Door



Highly Adhesive Hook & Loop



Tieback

Image: The detachable mesh sidewalls are shown, featuring double zippered doors, highly adhesive hook & loop fasteners, and tie-backs for versatility.

## OPERATING INSTRUCTIONS

### Adjustable Height

The gazebo offers three height settings. To adjust the height, press the red quick-release button on each leg and slide the inner leg section up or down to the desired position until it clicks securely into place. Ensure all legs are adjusted to the same height for stability.

### Mesh Netting Usage

The six mesh sidewalls can be zipped together to create a fully enclosed space, protecting against insects. Each mesh panel also features tie-backs, allowing you to secure them to the legs when you prefer an open-air setup. The double zippered doors provide convenient entry and exit points.

### Ventilation

The double-tiered roof design promotes air circulation, helping to dissipate heat and improve comfort on warm days. This design also contributes to the gazebo's wind resistance.

## WHAT'S IN YOUR BAG

Unbox the 13x13 ft gazebo set and discover everything you need for a secure and hassle-free setup



Image: Close-up details of the gazebo's double-tier roof for ventilation, waterproof fabric, extended eaves, and six drainage holes.

## MAINTENANCE

- Cleaning:** Clean the canopy fabric and mesh walls with mild soap and water. Do not use harsh chemicals or abrasive cleaners. Allow to air dry completely before storage.
- Storage:** When not in use, disassemble the gazebo and store all components in the wheeled carry bag in a cool, dry place away from direct sunlight.
- Weather Precautions:** Although weather-resistant, it is advisable to take down the gazebo during strong winds, heavy rain, or snow to prevent damage and extend its lifespan.

## TROUBLESHOOTING

- Gazebo Instability:** Ensure all legs are fully extended and locked into place. Verify that all stakes and ropes are properly secured to the ground. Consider using additional weight bags (not included) on the legs in windy conditions.
- Water Pooling on Roof:** Ensure the canopy is taut and properly installed. The double-tier roof and drainage holes are designed to prevent pooling, but extreme weather may still cause some accumulation.
- Difficulty Extending/Retracting Frame:** Ensure all quick-release buttons are fully depressed when adjusting the legs or folding the frame. Lubricate moving parts if necessary.

## SPECIFICATIONS

Feature	Specification
Brand	Yaheetech
Model Number	YTshvw0002001
Product Dimensions	157.87" L x 133.46" W x 111.02" H (13x13 ft)
Item Weight	40.6 Pounds
Frame Material	Iron
Canopy Material	Polyester fabric with PA finish
Water Resistance Level	Water Resistant
Shape	Hexagonal
Ultraviolet Light Protection	Yes
Assembly Required	Yes
Color	Khaki & Brown
Floor Area	169 Square Feet

## WARRANTY AND SUPPORT

For warranty information or product support, please refer to the documentation included with your purchase or visit the official Yaheetech website. Keep your purchase receipt for any warranty claims.

