

[Manuals.plus](#) /

› [Haam Electric](#) /

› Haam Electric HMFL80W-21N Front Load Washing Machine User Manual

Haam Electric HMFL80W-21N

Haam Electric HMFL80W-21N Front Load Washing Machine User Manual

Model: HMFL80W-21N | Capacity: 8 kg

1. IMPORTANT SAFETY INFORMATION

Please read all instructions carefully before using the appliance and retain them for future reference. This manual provides important safety warnings and guidelines to ensure safe operation and prevent damage to the appliance or injury to users.

- Ensure the washing machine is properly grounded.
- Do not allow children to play with or operate the appliance.
- Do not wash items that have been cleaned in, washed in, soaked in, or spotted with combustible or explosive substances.
- Unplug the appliance before cleaning or performing any maintenance.
- Do not install or store this appliance where it will be exposed to the weather.
- Keep the area around the washing machine clear of flammable materials.

2. PRODUCT OVERVIEW

The Haam Electric HMFL80W-21N is an 8 kg capacity front load washing machine designed for efficient and effective laundry care. It features a durable stainless steel drum and a user-friendly LED display.

Key Features:

- **Capacity:** 8 kg
- **Programs:** 15 washing programs, including a daily wash cycle up to 45 minutes.
- **Control:** LED display with button and knob controls.
- **Temperature Control:** Adjustable water temperature levels.
- **Spin Speed Control:** Adjustable spin speed.
- **Child Lock:** For enhanced safety.
- **Delay Start:** Schedule wash cycles at your convenience.
- **Drum Material:** Stainless Steel.
- **Noise Level:** 55 dB.

Components:

The washing machine includes the main unit, power cord, and water inlet/outlet hoses.

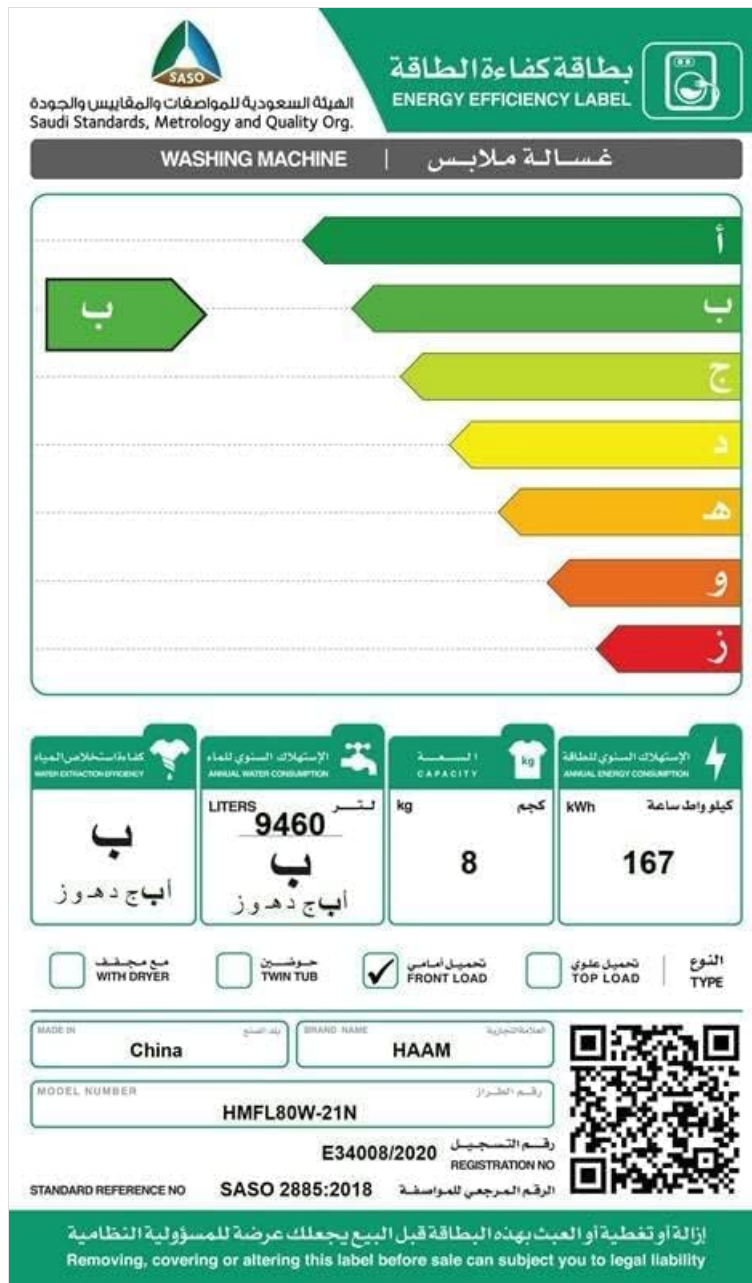


Image 2.1: Interior view of the stainless steel washing machine drum. This image shows the perforated inner drum where clothes are placed for washing.

3. INSTALLATION AND SETUP

Proper installation is crucial for the safe and efficient operation of your washing machine. It is recommended to have the appliance installed by a qualified technician.

Unpacking:

- Remove all packaging materials, including the polystyrene base and any protective films.
- Remove the transport bolts located at the rear of the machine. Keep these bolts for future transport if needed.

Positioning:

- Place the washing machine on a firm, level surface.
- Adjust the leveling feet to ensure the machine is stable and balanced.

- Ensure there is adequate space around the machine for ventilation and access.

Water Connection:

- Connect the water inlet hose to a cold water tap with a 3/4-inch thread.
- Ensure all connections are tight to prevent leaks.
- Position the drain hose into a standpipe or over the edge of a sink, ensuring it is securely fastened and not kinked.

Electrical Connection:

- Plug the power cord into a grounded electrical outlet.
- Do not use extension cords or adapters.

4. OPERATING INSTRUCTIONS

This section guides you through the basic operation of your Haam Electric washing machine.

Control Panel:



Image 4.1: The control panel features a central program selection knob, an LED display, and various function buttons.

1. **Program Knob:** Rotate to select desired wash program.
2. **LED Display:** Shows program status, time remaining, and error codes.
3. **Temperature Button:** Adjusts water temperature.
4. **Spin Speed Button:** Adjusts spin speed.

5. **Delay Start Button:** Sets a delayed start time for the wash cycle.
6. **Start/Pause Button:** Starts or pauses the selected program.
7. **Child Lock:** Press and hold specific buttons (refer to control panel markings) to activate/deactivate.

Basic Washing Steps:

1. **Load Laundry:** Open the door and place clothes loosely into the drum. Do not overload.
2. **Add Detergent:** Pour appropriate amount of detergent into the detergent dispenser.
3. **Select Program:** Turn the program knob to choose a suitable wash program (e.g., Cotton, Synthetics, Delicates, Daily Wash).
4. **Adjust Settings (Optional):** Use the temperature and spin speed buttons to customize settings if desired.
5. **Start Cycle:** Press the Start/Pause button to begin the wash cycle.
6. **End of Cycle:** The machine will signal when the cycle is complete. Open the door and remove laundry.

Washing Programs:

The washing machine offers 15 programs. Refer to the control panel for specific program names and their recommended uses. Examples include:

- **Daily Wash:** For lightly soiled items, up to 45 minutes.
- **Cotton:** For cotton items, typically at higher temperatures.
- **Synthetics:** For synthetic fabrics, usually at lower temperatures and gentler spin.
- **Delicates:** For fragile items requiring minimal agitation.
- **Spin:** For draining water and spinning clothes without a wash cycle.
- **Rinse & Spin:** For rinsing and spinning clothes.

5. MAINTENANCE AND CARE

Regular maintenance ensures the longevity and optimal performance of your washing machine.

Cleaning the Exterior:

- Wipe the exterior with a soft, damp cloth.
- Do not use abrasive cleaners or solvents.

Cleaning the Detergent Dispenser:

- Pull out the dispenser drawer.
- Remove any residue and rinse under running water.
- Clean the dispenser housing with a brush.

Cleaning the Drum:

- Run a maintenance wash cycle (e.g., a hot wash with no laundry and a descaling agent or white vinegar) periodically to prevent odor and residue buildup.

Cleaning the Drain Filter:

- Locate the drain filter at the bottom front of the machine.
- Place a shallow container underneath to catch any water.
- Carefully unscrew and remove the filter.
- Clean any lint or debris from the filter and its housing.
- Reinsert and tighten the filter securely.

6. TROUBLESHOOTING

Before contacting customer service, please refer to the following table for common issues and their solutions.

Problem	Possible Cause	Solution
Machine does not start	Power cord unplugged, door not closed properly, program not selected, Start/Pause button not pressed.	Check power connection, ensure door is latched, select a program, press Start/Pause.
No water filling	Water tap closed, inlet hose kinked, water supply cut off.	Open water tap, straighten hose, check household water supply.
Water not draining	Drain hose kinked or blocked, drain filter clogged.	Check and clear drain hose, clean drain filter (see Maintenance section).
Excessive vibration/noise	Machine not level, transport bolts not removed, uneven load.	Adjust leveling feet, ensure transport bolts are removed, redistribute laundry in the drum.
Detergent residue on clothes	Too much detergent, low water pressure, clogged dispenser.	Reduce detergent amount, check water pressure, clean detergent dispenser.

7. SPECIFICATIONS

Detailed technical specifications for the Haam Electric HMFL80W-21N washing machine.

Specification	Value
Brand	Haam Electric
Model Number	HMFL80W-21N
Product Type	Front Load Washing Machine
Capacity	8 kg
Color	White
Drum Material	Stainless Steel
Body Material	ABS
Display Type	LED
Number of Programs	15
Noise Level	55 dB
Product Depth	25 inches
Item Weight	20 kg
Installation Type	Freestanding
Annual Water Consumption	9460 Liters
Annual Energy Consumption	167 kWh

Specification	Value
Energy Efficiency Class	B



Image 7.1: Energy efficiency label showing Class B rating, 9460 liters annual water consumption, and 167 kWh annual energy consumption.

For more details on energy efficiency, visit: sls.gov.sa

8. WARRANTY AND SUPPORT

Your Haam Electric HMFL80W-21N washing machine comes with a comprehensive warranty and dedicated customer support.

Warranty Information:

This product is covered by a **two-year warranty** from the date of purchase. The warranty covers manufacturing defects and malfunctions under normal household use. Please retain your proof of purchase for warranty claims.

The warranty does not cover:

- Damage caused by improper installation or use.
- Damage due to accidents, misuse, or neglect.
- Normal wear and tear.
- Repairs performed by unauthorized service personnel.

Customer Support:

For technical assistance, service requests, or warranty inquiries, please contact Haam Electric customer support. Contact details can typically be found on the manufacturer's official website or on your product documentation.

© 2023 Haam Electric. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question