

[Manuals.plus](#) /

> [AGARO](#) /

> AGARO Royal 4 Slice Stainless Steel Pop Up Toaster Instruction Manual, Model 33776

AGARO 33776

AGARO Royal 4 Slice Stainless Steel Pop Up Toaster

Model: 33776

1. IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including the following:

1. Read all instructions before operating the toaster.
2. Do not touch hot surfaces. Use handles or knobs.
3. To protect against electrical shock, do not immerse cord, plug, or toaster in water or other liquid.
4. Close supervision is necessary when any appliance is used by or near children.
5. Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
6. Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner. Contact customer service for examination, repair, or adjustment.
7. The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
8. Do not use outdoors.
9. Do not let cord hang over edge of table or counter, or touch hot surfaces.
10. Do not place on or near a hot gas or electric burner, or in a heated oven.
11. To disconnect, press the CANCEL button, then remove plug from wall outlet.
12. Do not use appliance for other than intended use.
13. Oversize foods, metal foil packages, or utensils must not be inserted in a toaster as they may involve a risk of fire or electric shock.
14. A fire may occur if toasters are covered or touching flammable material, including curtains, draperies, walls, and the like, when in operation.
15. Do not attempt to dislodge food when toaster is plugged in.
16. Do not operate unattended.

2. PRODUCT OVERVIEW

The AGARO Royal 4 Slice Stainless Steel Pop Up Toaster is designed for efficient and convenient toasting of bread

slices. It features a durable stainless steel body and offers multiple functions to suit various toasting needs.



Image: The AGARO Royal toaster capable of toasting four slices of bread simultaneously.

Key Features:

- **4 Slice Capacity:** Toasts up to four slices of bread at once.
- **Stainless Steel Body:** Ensures durability and a rust-free design.
- **7 Adjustable Browning Settings:** Allows customization from light to dark toast.
- **Defrost Function:** Heats frozen bread without over-toasting.
- **Reheat Function:** Warms previously toasted bread without further browning.
- **Cancel Function:** Stops the toasting cycle at any time.
- **Self-Centering Function:** Automatically positions bread for even toasting.
- **Removable Crumb Tray:** For easy cleaning and maintenance.
- **High-Rise Carriage Handle:** Safely lifts smaller items from the toaster slots.

3. COMPONENTS

Familiarize yourself with the parts of your AGARO Royal toaster:

- **Toasting Slots:** Four slots for bread slices.
- **Carriage Lever:** Lowers bread into the toaster and initiates the toasting cycle.
- **Browning Control Dial:** Adjusts the desired level of toast browning (settings 1-7).
- **CANCEL Button:** Stops the toasting process immediately.
- **REHEAT Button:** Activates the reheat function.
- **DEFROST Button:** Activates the defrost function.
- **Removable Crumb Tray:** Collects crumbs for easy disposal.

Extra wide slots



Auto bread centering

Removable crumb tray



High rise carriage handle



Image: Key features including extra wide slots, auto bread centering, removable crumb tray, and high-rise carriage handle.

4. BEFORE FIRST USE

1. **Unpack:** Remove all packaging materials, including any protective films or stickers.
2. **Clean:** Wipe the exterior of the toaster with a damp cloth. Ensure the crumb tray is clean and properly inserted.
3. **Initial Burn-Off:** To eliminate any manufacturing odors, operate the toaster without bread for a few cycles at the highest browning setting in a well-ventilated area. A slight smoke or odor is normal during this process.

5. OPERATING INSTRUCTIONS

5.1 Basic Toasting

1. **Place Bread:** Insert up to four slices of bread into the toasting slots. The self-centering guides will automatically adjust to hold the bread evenly.
2. **Set Browning Level:** Turn the browning control dial to your desired setting from 1 (lightest) to 7 (darkest). Start with a

medium setting (e.g., 3 or 4) and adjust according to preference.

3. **Start Toasting:** Push the carriage lever down until it locks into place. The toasting cycle will begin, and the indicator light will illuminate.
4. **Eject Toast:** Once the selected browning cycle is complete, the toast will automatically pop up, and the toaster will switch off. Use the high-rise carriage handle to safely retrieve smaller items.



Image: The browning control dial offers 7 settings for customized toast crispiness.

5.2 Special Functions

The toaster includes dedicated buttons for specific toasting needs:



4 Slice toaster

Good morning with delicious breakfast

Image: Easy push buttons for Cancel, Reheat, and Defrost functions.

- **CANCEL Button:** Press this button at any point during the toasting cycle to immediately stop the process and eject the bread.
- **REHEAT Function:** To reheat already toasted bread without further browning, insert the bread, push the carriage lever down, and then press the **REHEAT** button. The indicator light will illuminate.
- **DEFROST Function:** To toast frozen bread, insert the bread, push the carriage lever down, and then press the **DEFROST** button. The indicator light will illuminate. This function adds extra time to the toasting cycle to thaw the bread before browning.

6. CARE AND MAINTENANCE

Proper care ensures the longevity and performance of your toaster.

1. **Always Unplug:** Before cleaning, always unplug the toaster from the power outlet and allow it to cool completely.
2. **Clean Exterior:** Wipe the exterior surfaces with a soft, damp cloth. Do not use abrasive cleaners or metal scouring pads, as they may scratch the stainless steel finish.
3. **Empty Crumb Tray:** Pull out the removable crumb tray from the bottom of the toaster. Discard accumulated crumbs. Wipe the tray clean with a damp cloth and dry thoroughly before reinserting. Ensure the crumb tray is fully pushed in before using the toaster.
4. **Do Not Immerse:** Never immerse the toaster in water or any other liquid.
5. **Storage:** When not in use, store the toaster in a clean, dry place.

7. TROUBLESHOOTING

If you encounter issues with your toaster, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Toaster does not turn on.	Not plugged in; power outage; faulty outlet.	Ensure the toaster is securely plugged into a working electrical outlet. Check your circuit breaker.
Bread does not toast evenly.	Uneven bread thickness; crumb buildup.	Ensure bread slices are of uniform thickness. Clean the crumb tray regularly. The self-centering function should help.
Bread is stuck in the toaster.	Oversized bread; malfunction.	Unplug the toaster immediately. Carefully remove the bread using non-metallic tongs. Do not use metal utensils.
Smoke or burning smell.	Crumb buildup; food lodged inside.	Unplug the toaster. Allow to cool. Clean the crumb tray and check for any food particles inside the slots.

If the problem persists after trying these solutions, please contact customer support.

8. SPECIFICATIONS

Technical details for the AGARO Royal 4 Slice Pop Up Toaster:

Dimension



Image: Product dimensions for the AGARO Royal 4 Slice Toaster.

- **Brand:** AGARO
- **Model Number:** 33776
- **Colour:** Green
- **Material:** Stainless Steel
- **Product Dimensions (D x W x H):** 39D x 16.2W x 17.2H Centimeters
- **Specific Uses For Product:** Bread
- **Wattage:** 1450 Watts
- **Voltage:** 240 Volts
- **Slot Count:** 4
- **Number of Browning Settings:** 7
- **Item Weight:** 1700 Grams
- **Special Features:** Cancel Function, Reheat Function, Defrost Function

9. WARRANTY AND SUPPORT

The AGARO Royal 4 Slice Stainless Steel Pop Up Toaster comes with a **1-year warranty** from the date of purchase.

For warranty claims, technical support, or any product-related inquiries, please contact AGARO customer service. Keep your purchase receipt as proof of purchase for warranty validation.

Manufacturer: Universal Corporation Limited, CIXI CITY, ZHEJIANG, CHINA

Importer: Universal Corporation Limited, 4/1 Middleton Street, Sikkim Commerce House, Kolkata-71

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0B2P2C7TR>

More documents and user manuals: <https://manuals.plus/>