

Jetson JBYOD-3KIK

Jetson Disney Grogu 3-Wheel Kick Kids Scooter Instruction Manual

Model: JBYOD-3KIK

IMPORTANT SAFETY INFORMATION

Before operating the Jetson Disney Grogu 3-Wheel Kick Kids Scooter, please read all instructions carefully. Failure to follow these instructions may result in serious injury.

- Always wear a helmet and appropriate safety gear, including knee and elbow pads, when riding.
- Adult supervision is required at all times.
- This scooter is designed for children aged 3 years and older.
- Maximum weight capacity is 132 pounds (60 kg).
- Do not ride on uneven surfaces, near traffic, or in wet conditions.
- Ensure all clamps and fasteners are securely tightened before each use.
- Regularly inspect the scooter for wear and tear, especially wheels and brakes.
- Keep fingers and hair away from moving parts.

PACKAGE CONTENTS

Verify that all items are present in the package:

- Jetson Disney Grogu 3-Wheel Kick Kids Scooter (Main Body)
- Handlebar Assembly
- Instruction Manual (This document)

SETUP AND ASSEMBLY

Follow these steps to assemble your scooter:

1. **Unpack Components:** Carefully remove all parts from the packaging.
2. **Insert Handlebar:** Locate the handlebar assembly. Insert the handlebar stem into the opening on the

scooter deck until it clicks securely into place. Ensure the handlebar is fully seated and locked.

3. **Check Connections:** Verify that the handlebar is firmly attached and does not wobble.



Image: Front view of the assembled scooter, showing the handlebar inserted into the deck.



Image: The Jetson Disney Grogu 3-Wheel Kick Kids Scooter, showcasing its LED lights on the stem and wheels.

OPERATING INSTRUCTIONS

This scooter features a lean-to-steer system and motion-activated LED lights.

- **Riding:** Place one foot on the scooter deck and use the other foot to push off the ground.
- **Steering (Lean-to-Steer):** To turn, gently lean your body and the handlebar in the desired direction. The front wheels will pivot accordingly.
- **Braking:** The scooter is equipped with a rear brake. To slow down or stop, press your foot firmly on the rear fender brake located above the back wheel.
- **LED Lights:** The LED lights on the wheels and stem are motion-activated. They will illuminate automatically when the scooter is in motion. No batteries are required for these lights.



Image: A child wearing a helmet, actively riding the Jetson Disney Grogu scooter on a paved sidewalk, demonstrating proper use.



Image: A child riding the Jetson Disney Grogu scooter, viewed from the side, showing the lean-to-steer motion.

ADJUSTING HANDLEBAR HEIGHT

The handlebar height can be adjusted to accommodate growing riders:

1. Locate the quick-release clamp on the handlebar stem.
2. Open the quick-release clamp.
3. Adjust the handlebar to the desired height. Ensure the handlebar is not extended beyond the maximum height mark.
4. Close the quick-release clamp firmly to secure the handlebar in place. Test for stability before riding.



Image: A close-up view of the scooter's handlebar and adjustable stem, highlighting the grip and adjustment mechanism.

FOLDING MECHANISM

The scooter features an easy-fold mechanism for convenient storage and transport:

1. Locate the folding mechanism near the base of the handlebar stem.
2. Follow the specific instructions on the scooter for engaging the folding latch (this typically involves pulling a lever or pressing a button while pushing the stem down).
3. Once the latch is released, fold the handlebar stem down towards the deck until it locks into the folded position.
4. Ensure the scooter is securely folded before carrying or storing.



Image: The Jetson Disney Grogu scooter shown in its compact, folded configuration, ready for transport or storage.

MAINTENANCE

Regular maintenance ensures the longevity and safe operation of your scooter:

- **Cleaning:** Wipe the scooter with a damp cloth to remove dirt and dust. Do not use harsh chemicals or abrasive cleaners.
- **Wheel Inspection:** Periodically check the wheels for wear, cracks, or damage. Ensure they spin freely.
- **Brake Check:** Test the rear brake regularly to ensure it functions effectively.
- **Fasteners:** Check all bolts, nuts, and clamps to ensure they are tight. Tighten any loose fasteners.
- **Storage:** Store the scooter in a dry place, away from direct sunlight and extreme temperatures.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Handlebar is wobbly	Handlebar not fully inserted or clamp is loose.	Ensure handlebar is fully inserted and the quick-release clamp is securely tightened.
LED lights not working	Scooter is not in motion or wheels are obstructed.	The lights are motion-activated; ensure the scooter is moving. Check for any debris obstructing wheel rotation.
Brake is not effective	Rear fender brake worn or dirty.	Clean the brake area. If wear is significant, contact customer support for replacement parts.

SPECIFICATIONS

Feature	Detail
Model Number	JBYOD-3KIK
Age Range	3+ Years
Maximum Weight Capacity	132 lbs (60 kg)
Wheel Type	3-Wheel Design, Polyurethane
Wheel Size	4.7 Inches
Brake Type	Rear Fender Brake
Frame Material	Aluminium
Special Features	Adjustable Handlebar Height, Foldable, Motion-Activated LED Light-Up Wheels and Stem, Lean-to-Steer System
Product Dimensions (L x W x H)	55.88 x 26.42 x 59.69 cm
Product Weight	3.18 kg

Feature	Detail
Batteries Required	No (Motion-activated lights)



Image: A diagram illustrating the key dimensions (length, width, height) of the Jetson Disney Grogu 3-Wheel Kick Kids Scooter.

 
 

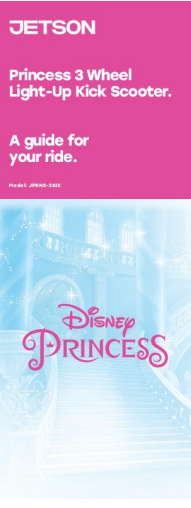 
WARRANTY AND SUPPORT


For warranty information or technical support, please refer to the official Jetson website or contact their customer service department. Keep your proof of purchase for warranty claims.

Jetson Customer Service:

- Website: www.ridejetson.com (Example link, actual link may vary)
- Email: Refer to website for contact form or email address.
- Phone: Refer to website for phone support numbers.


Related Documents - JBYOD-3KIK

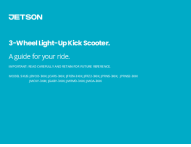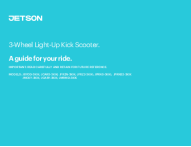	<p>Jetson 3-Wheel Light-Up Kick Scooter User Manual and Guide</p> <p>A comprehensive user manual and guide for the Jetson 3-Wheel Light-Up Kick Scooter, detailing safety warnings, product overview, specifications, getting started instructions, riding tips, care and maintenance, and online resources.</p>
	<p>Jetson 3-Wheel Light-Up Kick Scooter User Guide</p> <p>Comprehensive guide for the Jetson 3-Wheel Light-Up Kick Scooter, covering safety warnings, product overview, specifications, assembly, riding instructions, maintenance, and warranty.</p>
	<p>Jetson Baby Yoda 3 Wheel Light-Up Kick Scooter User Guide</p> <p>User guide for the Jetson Baby Yoda 3 Wheel Light-Up Kick Scooter (Model: JBYOD-3KIK), covering assembly, features, safety, and maintenance.</p>
	<p>Jetson Princess 3 Wheel Light-Up Kick Scooter: User Guide and Safety Information</p> <p>Comprehensive guide for the Jetson Princess 3 Wheel Light-Up Kick Scooter (Model JPRNS-3KIK), including setup instructions, features, specifications, care, maintenance, and essential safety warnings.</p>

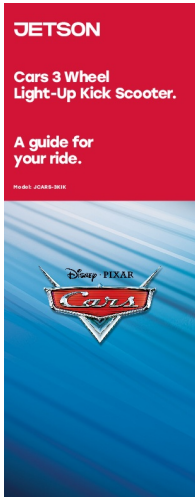 

[Jetson Cars 3 Wheel Light-Up Kick Scooter User Guide](#)

 Comprehensive user guide for the Jetson Cars 3 Wheel Light-Up Kick Scooter (Model: JCARS-3KIK), covering assembly, features, safety, and maintenance.

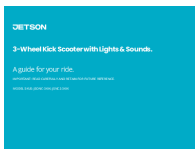

[Jetson 3-Wheel Kick Scooter with Lights & Sounds User Guide](#)

Comprehensive user guide for the Jetson 3-Wheel Kick Scooter with Lights & Sounds, covering safety, setup, operation, maintenance, and specifications. Learn how to unfold, adjust, ride, and care for your scooter.