

[Manuals.plus](#) /

› [Sixfivsevn](#) /

› Sixfivsevn 50-inch Electric Fireplace Instruction Manual

Sixfivsevn 699838483828

Sixfivsevn 50-inch Electric Fireplace Instruction Manual

Model: 699838483828

PRODUCT OVERVIEW

The Sixfivsevn 50-inch Electric Fireplace is a versatile heating and decorative appliance designed for both recessed and wall-mounted installations. It features a high-quality tempered glass panel, adjustable flame and flame bed colors, and two heat settings (750W/1500W) to provide supplemental zone heating for areas up to 400 square feet. Its ultra-thin design, low noise operation, and remote control functionality offer convenience and aesthetic appeal to various living spaces.



IMPORTANT SAFETY INFORMATION

Please read and understand all instructions before installing, operating, or servicing this fireplace. Failure to comply with these instructions may result in electric shock, fire, or serious injury.

- Always connect to a properly grounded outlet.
- Do not operate any fireplace with a damaged cord or plug, or if the heater has malfunctioned, been dropped, or damaged in any manner.
- Keep combustible materials, such as furniture, pillows, bedding, papers, clothes, and curtains at least 3 feet (0.9 m) from the front of the heater and keep them away from the sides and rear.
- Extreme caution is necessary when any heater is used by or near children or invalids and whenever the fireplace is left operating and unattended.
- Do not insert or allow foreign objects to enter any ventilation or exhaust opening as this may cause an electric shock or fire, or damage the heater.
- To prevent a possible fire, do not block air intakes or exhaust in any manner. Do not use on soft surfaces, like a bed, where openings may become blocked.
- This fireplace is equipped with an overheating safety protection feature. If the internal temperature becomes too hot, the thermostat limiter will automatically turn off the unit.
- Use only as described in this manual. Any other use not recommended by the manufacturer may cause fire, electric shock, or injury to persons.

PACKAGE CONTENTS

Carefully unpack all components from the box and ensure all items are present before discarding packaging materials.

- Electric Fireplace Unit
- Remote Control
- Mounting Hardware (screws, anchors)
- Crystal Glass Stones (for flame bed)
- Instruction Manual (this document)

INSTALLATION

The Sixfivsevn Electric Fireplace offers flexible installation options: recessed into a wall or wall-mounted.

Dimensions and Clearance

Before installation, ensure adequate space and proper clearances. The product dimensions are 4.33"D x 50"W x 16.14"H.

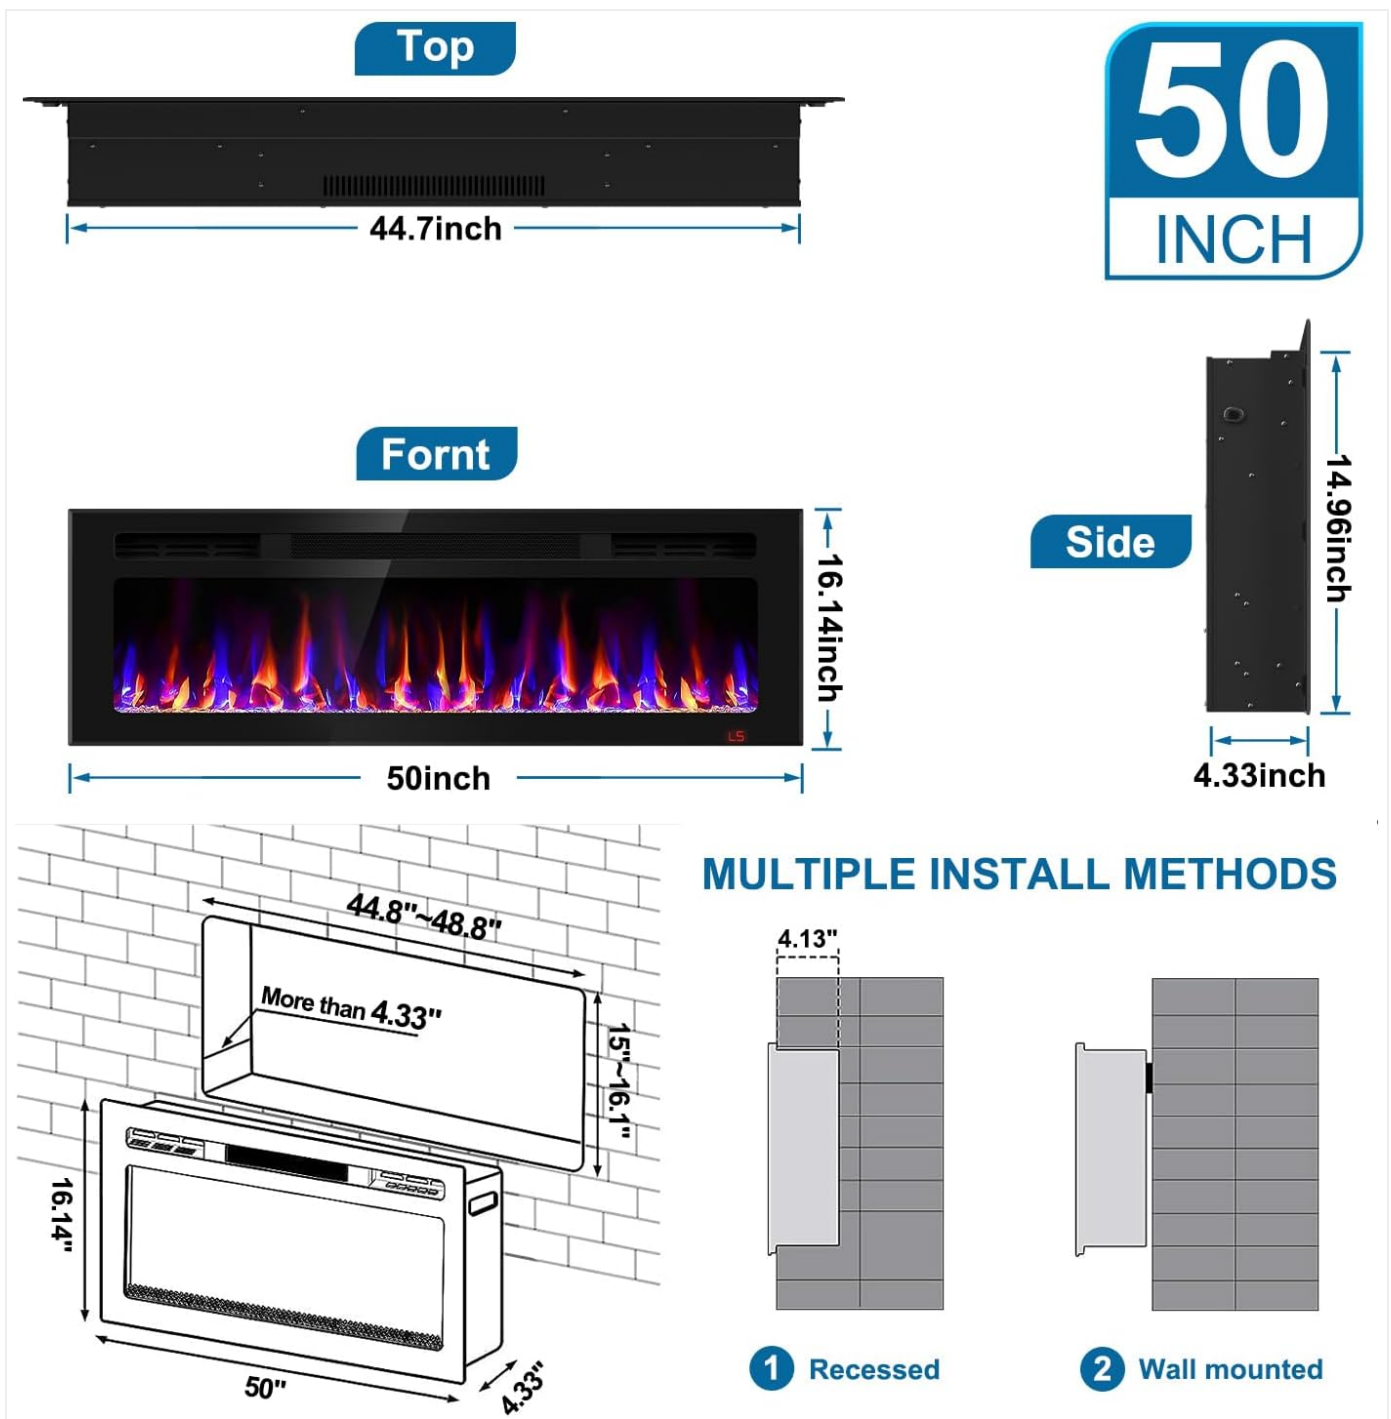


Image: Detailed dimensions and visual representation of recessed and wall-mounted installation options.

Wall Mounted Installation

1. Choose a suitable wall location, ensuring it is structurally sound and away from combustible materials.
2. Mark the desired mounting height and position on the wall.
3. Secure the mounting bracket to the wall using appropriate screws and anchors, ensuring it is level.
4. Carefully lift the fireplace unit and hook it onto the wall mounting bracket.
5. Secure the bottom of the fireplace to the wall using the provided screws.

Recessed Installation

1. Construct a wall opening with precise dimensions to accommodate the fireplace. Refer to the dimension diagram for exact measurements.
2. Ensure there is sufficient clearance around the unit for proper ventilation.
3. Slide the fireplace unit into the prepared opening.

4. Secure the fireplace to the framing of the opening using the provided screws.

Flexible Installation Modes



Image: Visual examples of the fireplace installed as wall-mounted, recessed into a wall, and inserted into a TV cabinet.

OPERATING INSTRUCTIONS

Your Sixfivsevn Electric Fireplace can be operated using either the control panel on the unit or the included remote control.

Control Panel Functions

Button Panel Control

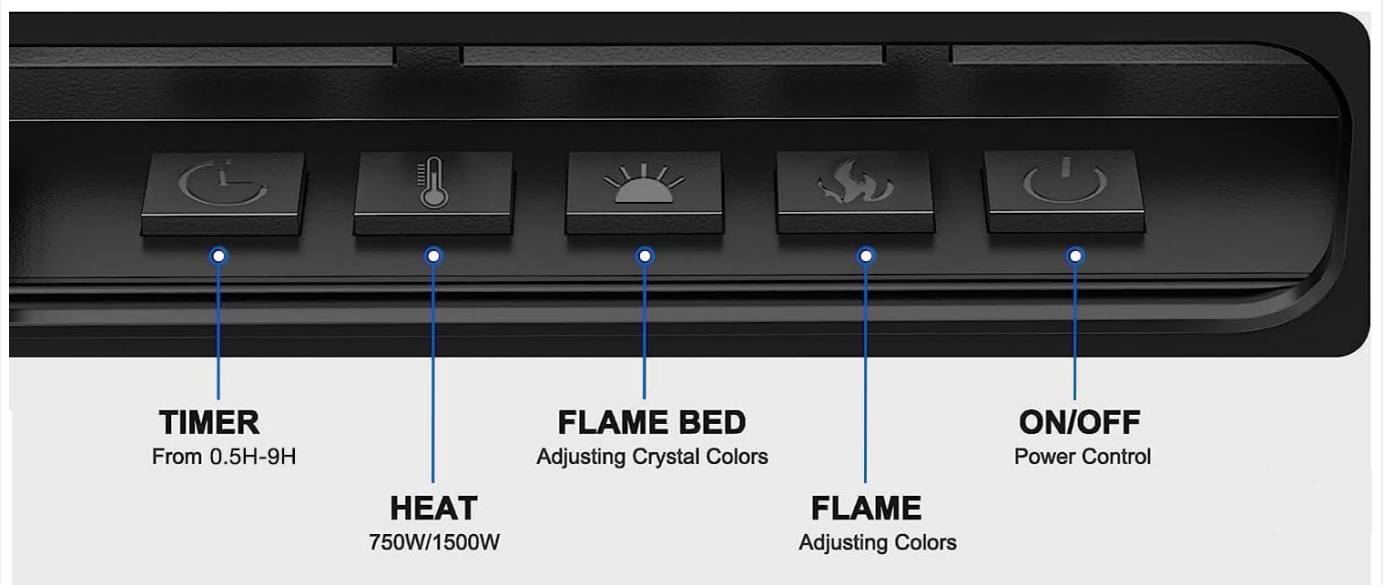


Image: Diagram showing the functions of the buttons on the fireplace's control panel.

- **Power Control:** Turns the fireplace ON/OFF.
- **Timer:** Sets the operating timer from 0.5 to 9 hours.
- **Heat:** Toggles between 750W and 1500W heat settings.
- **Flame Bed:** Adjusts the crystal bed colors.
- **Flame:** Adjusts the flame colors.

Remote Control Functions



Timer



Heat



Bed color



Flame color



ON / OFF



Heater

Heater 750/1500w



Temperature

Up: 62°F-82°F



Temperature

Down: 62°F-82°F



Switch

Power on / off



Flame color

Flame Color 12colors



Crystal Bed Color

Crystal Bed Color 12colors



Timer

Timer 0.5h-9h



Image: Diagram illustrating the various functions controlled by the remote, including power, heat, temperature, flame color, crystal bed color, and timer.

- **Power (On/Off):** Activates or deactivates the fireplace.
- **Timer (0.5-9h):** Sets the automatic shut-off timer.
- **Heater (750W/1500W):** Selects between low and high heat output.
- **Temperature (Up/Down):** Adjusts the thermostat setting from 62°F to 82°F.
- **Flame Color (12 colors):** Cycles through 12 different flame color options.
- **Crystal Bed Color (12 colors):** Cycles through 12 different crystal bed color options.

Heating Operation

The fireplace provides supplemental zone heating for up to 400 square feet. You can select between 750W and 1500W heat settings and adjust the desired room temperature from 62°F to 82°F. The unit operates with low noise, between 35-40dB.



Low noise Operation
Keep quiet 35-40db



Timer 0.5-9H

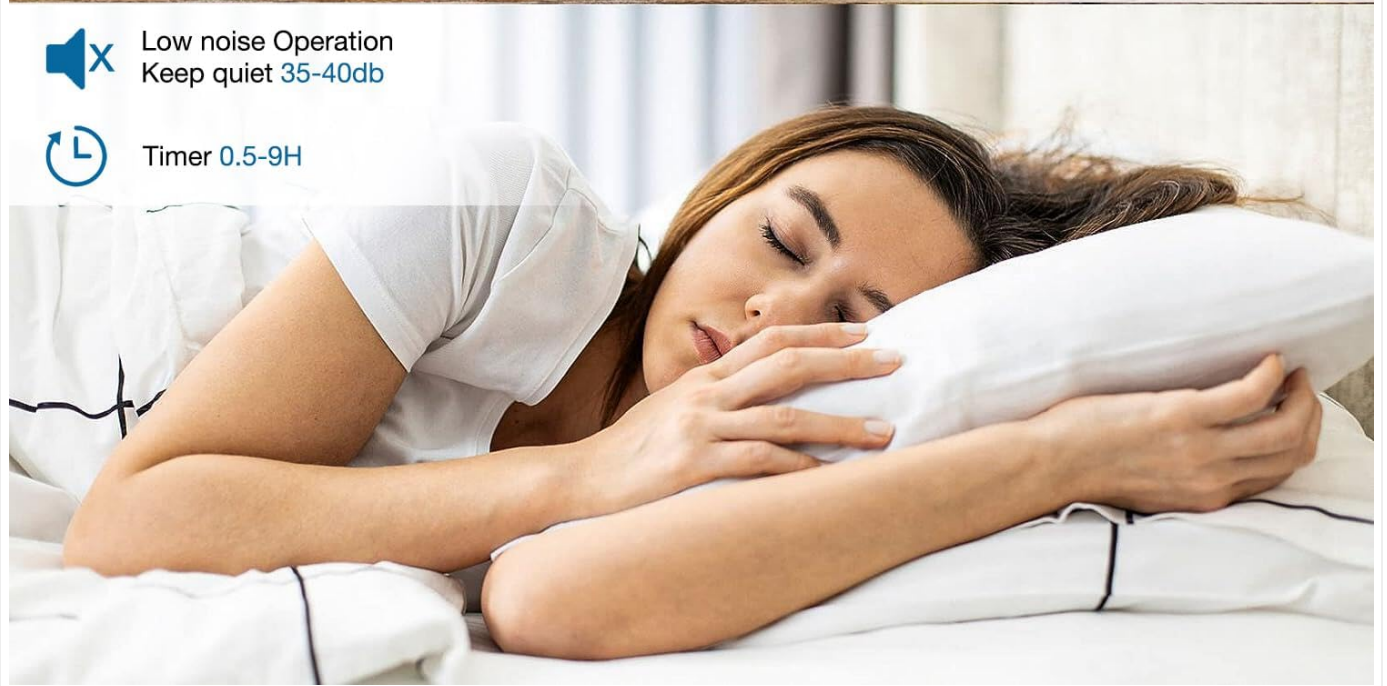


Image: Information on heating coverage, adjustable temperature range, and low noise operation.



Image: Visual representation of temperature adjustment from 62°F to 82°F and wattage selection between 750W and 1500W.

Flame and Flame Bed Customization

The fireplace offers 12 flame colors and 12 LED flame bed colors, allowing for 144 different combinations to suit your ambiance preferences. The high-intensity LED colors create a realistic and vibrant effect when reflected on the crystal glass stones.



SPARKLING-CRYSTAL
Sparkling crystal cannot be hidden in your eyes



12 FLAME-COLORS
12 Led Bed Colors



Double-twelve color presents you with its 144 combinations

Image: A visual palette showcasing the 12 available flame colors and 12 LED crystal bed colors.

Your browser does not support the video tag.

Video: Demonstration of the multi-function electric fireplace, showcasing manual and remote control, HD display of flames and flame beds, 144 color combinations, energy saving features, and various flame and flame bed colors.

MAINTENANCE

Regular maintenance ensures the longevity and optimal performance of your electric fireplace.

- **Cleaning:** Ensure the unit is turned OFF and unplugged before cleaning. Use a soft, damp cloth to wipe the exterior surfaces. Do not use abrasive cleaners or sprays.

- **Air Vents:** Periodically check and clean the air inlet and outlet vents to ensure unobstructed airflow. This helps maintain heating efficiency and prevents overheating.
- **Storage:** If storing the fireplace for an extended period, unplug it and store it in a dry, dust-free location.



Image: Diagram illustrating the air inlet and outlet locations on the fireplace for proper ventilation.

TROUBLESHOOTING

If you experience issues with your fireplace, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Fireplace does not turn on.	No power, power switch off, or overheating protection activated.	Check power cord connection, ensure outlet is functional, turn power switch ON, allow unit to cool down if overheated.
No heat output.	Heater function off, low wattage setting, or thermostat setting too low.	Activate heater function, switch to 1500W setting, increase thermostat temperature.
Flames are not visible or dim.	Flame effect off, or LED lights malfunctioning.	Ensure flame effect is turned on via control panel or remote. If issue persists, contact customer support.
Remote control not working.	Dead batteries, obstruction, or remote not pointed correctly.	Replace batteries, remove obstructions, point remote directly at the fireplace sensor.
Unusual noise during operation.	Minor fan noise is normal, but excessive noise may indicate an issue.	Ensure vents are clear. If noise is loud or persistent, discontinue use and contact customer support.

SPECIFICATIONS

Feature	Detail
Brand	Sixfivsevn
Model Name	Sixfivsevn Electric Fireplace
Product Dimensions	4.33"D x 50"W x 16.14"H
Material	Tempered Glass, Metal
Installation Type	Wall Mount, Recessed
Power Source	AC

Feature	Detail
Heat Output	5100 British Thermal Units (BTU)
Wattage	750W / 1500W
Heating Coverage	Up to 400 sq ft
Adjustable Temperature	62°F to 82°F
Flame Colors	12 options
Flame Bed Colors	12 options (Crystal Glass Stones)
Timer	0.5 - 9 hours
Noise Level	Low Noise (35-40dB)
Safety Features	Overheating Safety Protection
Item Weight	35 Pounds
UPC	699838483828

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the manufacturer's official website or contact their customer service department. Keep your purchase receipt for warranty claims.

Manufacturer: Sixfivsevn

For further assistance, you may visit the [Sixfivsevn Store on Amazon](#).