

## Samsung HW-B530

# Samsung HW-B530 Soundbar with Wireless Subwoofer User Manual

Model: HW-B530

## 1. INTRODUCTION

This manual provides essential information for the safe and efficient use of your Samsung HW-B530 Soundbar and Wireless Subwoofer. Please read these instructions thoroughly before operating the device and retain them for future reference. This 2.1 channel sound system is designed to enhance your audio experience with 360W of power, deep bass, and surround sound effects.

## 2. SAFETY INFORMATION

To reduce the risk of electric shock, fire, or damage to the unit, observe the following precautions:

- Do not expose this appliance to rain or moisture.
- Do not remove the cover (or back). No user-serviceable parts inside. Refer servicing to qualified service personnel.
- Ensure proper ventilation. Do not block any ventilation openings.
- Do not place the unit near heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- Protect the power cord from being walked on or pinched, particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- Only use attachments/accessories specified by the manufacturer.
- Unplug this apparatus during lightning storms or when unused for long periods of time.

## 3. PACKAGE CONTENTS

Verify that all components are present in your package:

- Samsung HW-B530 Soundbar (1 unit)
- Wireless Subwoofer (1 unit)
- Remote Control
- Power Cable(s)
- Wall Mount Kit (if included)
- User Manual (this document)

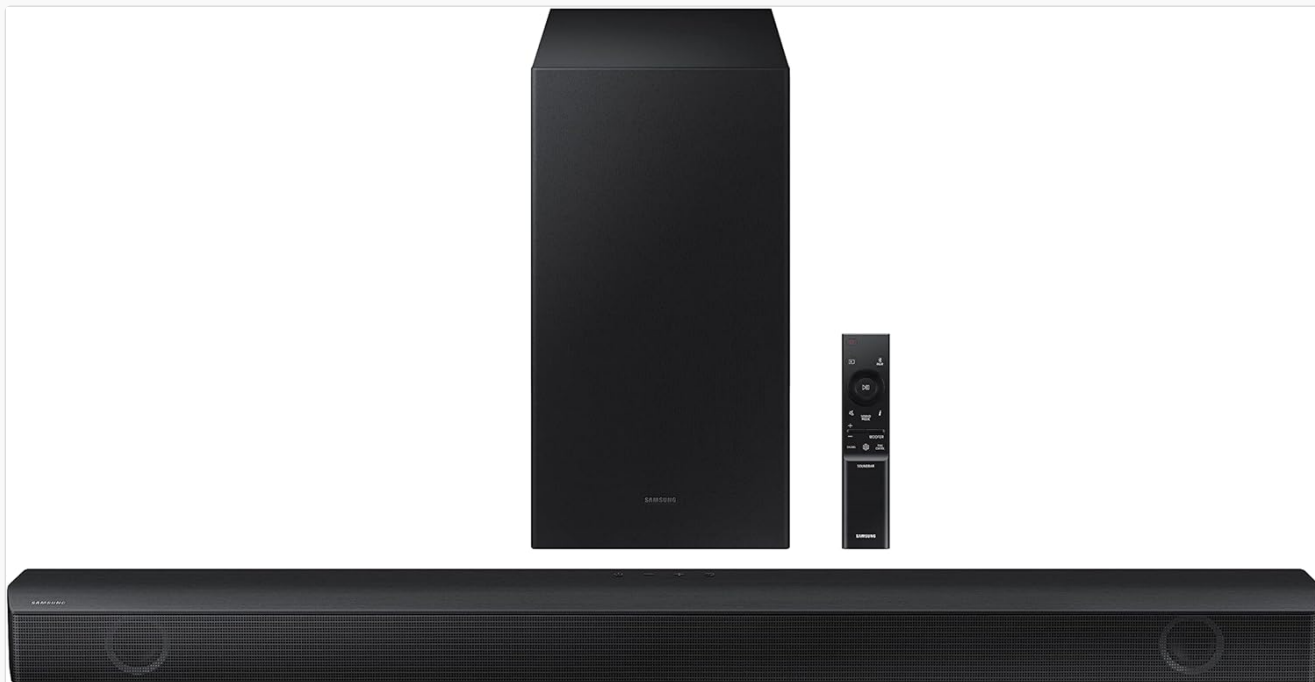


Image: The Samsung HW-B530 Soundbar, its wireless subwoofer, and the included remote control are shown together, illustrating the main components of the system.

## 4. SETUP

---

### 4.1 Soundbar Placement

Place the soundbar on a flat, stable surface directly in front of your TV, centered horizontally. Ensure there are no obstructions in front of the soundbar to allow for optimal sound projection. For wall mounting, use the provided wall mount kit and follow the specific instructions included with the kit.



\*Image simulated for illustration purposes. Actual ratio may vary depending on TV model and size.  
\* Applied Model : 65 Inch BU8000

Image: The Samsung HW-B530 Soundbar is positioned horizontally beneath a large television screen, demonstrating a typical setup for home entertainment.

## 4.2 Subwoofer Placement

The wireless subwoofer can be placed anywhere in the room, ideally near the soundbar or in a corner for enhanced bass response. Ensure it is within range of the soundbar for a stable wireless connection. Avoid placing it directly against a wall or in an enclosed cabinet, which can negatively affect sound quality.



Image: A detailed view of the Samsung wireless subwoofer, highlighting its minimalist design and textured finish.

### 4.3 Connections

Connect the soundbar to your TV or other audio sources using one of the following methods:

- **Optical Cable (Recommended for TV):** Connect one end of an optical digital cable to the DIGITAL AUDIO OUT port on your TV and the other end to the DIGITAL AUDIO IN (OPTICAL) port on the soundbar.
- **Bluetooth (Wireless Audio):** For wireless audio streaming from a mobile device or compatible TV, select the

Bluetooth source on the soundbar. Put your device into pairing mode and select 'Samsung Soundbar HW-B530' from the list of available devices.



Image: The rear panel of the Samsung HW-B530 Soundbar, displaying various input ports including the optical digital audio input, for connecting to external devices.

## 4.4 Power Connection

Connect the power cable to the soundbar and the subwoofer, then plug both into a wall outlet. The soundbar and subwoofer should automatically pair. If they do not pair, refer to the troubleshooting section.

## 5. OPERATING INSTRUCTIONS

### 5.1 Power On/Off

Press the Power button on the remote control or the soundbar to turn the unit on or off.

### 5.2 Volume Control

Use the Volume Up (+) and Volume Down (-) buttons on the remote control to adjust the sound level. You can also adjust the subwoofer level independently using the remote.

### 5.3 Input Source Selection

Press the Source button on the remote control or the soundbar to cycle through available input sources (e.g., D.IN (Optical), Bluetooth).

### 5.4 Sound Modes and Bass Boost

The soundbar offers various sound modes to optimize your listening experience. Activate the **Bass Boost** feature for deeper, more impactful low frequencies, ideal for action movies or music with heavy bass. Refer to your remote control for specific sound mode buttons.

### 5.5 Bluetooth Pairing

To pair a new Bluetooth device:

1. Press the Source button on the soundbar or remote until 'BT' (Bluetooth) appears on the display.
2. The soundbar will enter pairing mode.
3. On your mobile device, go to Bluetooth settings and select 'Samsung Soundbar HW-B530' from the list of available devices.
4. Once connected, the soundbar display will show 'BT PAIRING' followed by 'BT READY'.

## 6. MAINTENANCE

To maintain the performance and appearance of your soundbar:

- **Cleaning:** Use a soft, dry cloth to clean the surfaces of the soundbar and subwoofer. Do not use liquid cleaners or abrasive materials.
- **Ventilation:** Ensure that the ventilation openings are not blocked by dust or debris.
- **Storage:** If storing the unit for an extended period, disconnect it from the power outlet and store it in a cool, dry place.

## 7. TROUBLESHOOTING

If you encounter issues with your soundbar, refer to the following common problems and solutions:

Problem	Possible Solution
No power	Check if the power cords are securely connected to the soundbar, subwoofer, and wall outlet. Try a different power outlet.
No sound	Ensure the correct input source is selected. Check volume levels on both the soundbar and your TV/source device. Verify audio cables are connected correctly.
Subwoofer not connecting	Ensure the subwoofer is powered on. If the connection indicator light is not solid blue, try manually pairing by pressing the ID SET button on the back of the subwoofer and then the ID SET button on the remote control (while the soundbar is off).
Bluetooth connection issues	Ensure the soundbar is in Bluetooth pairing mode. Delete the soundbar from your device's Bluetooth list and try pairing again. Move your device closer to the soundbar.
Remote control not working	Check the battery orientation and replace batteries if necessary. Ensure there are no obstructions between the remote and the soundbar.

## 8. SPECIFICATIONS

Feature	Detail
Model Name	HW-B530
Brand	Samsung
Sound Channels	2.1 Channel
Total Power Output	360 Watts
Components	Soundbar, Wireless Subwoofer
Connectivity	Optical Digital Audio, Bluetooth
Control Method	Remote Control
Special Features	Bass Amplification (Bass Boost)
Soundbar Dimensions (W x H x D)	86 cm x 5.9 cm x 7.5 cm (approx.)
Total Weight	8.4 Kilograms (approx.)
Color	Black
Material	Metal

## 9. WARRANTY AND SUPPORT

---

This Samsung product is covered by a limited warranty. For detailed warranty information, please refer to the warranty card included with your product or visit the official Samsung website for your region. For technical support, product registration, or service inquiries, please contact Samsung Customer Service.

You can find contact information and support resources on the official Samsung support website:

[www.samsung.com/support](http://www.samsung.com/support)