

[Manuals.plus](#) /

› [Smoby](#) /

› Smoby Little Smoby Activity Chair Model 140103 User Manual

Smoby 140103

Smoby Little Smoby Activity Chair Model 140103 User Manual

For models: 140103

1. INTRODUCTION

Thank you for choosing the Smoby Little Smoby Activity Chair. This product is designed to provide a comfortable and engaging environment for infants beginning to sit up, typically from 6 months of age. It features a soft, inflatable seat and an integrated activity table with various interactive elements to stimulate your child's development. Please read this manual carefully before assembly and use to ensure safe and proper operation.

2. SAFETY INFORMATION

WARNING: Contains a toy. Adult supervision is recommended at all times when the child is using this product.

- Always place the activity chair on a flat, stable surface.
- Never leave your child unattended in the activity chair.
- Do not use this product if any parts are damaged or missing.
- Ensure all components are securely assembled before placing your child in the chair.
- This product is intended for children who can hold their head up unassisted.
- Maximum recommended weight: 15 kg.

3. SETUP AND ASSEMBLY

The Smoby Little Smoby Activity Chair requires minimal assembly.

1. **Unpack Components:** Carefully remove all parts from the packaging. You should have the inflatable chair base and the detachable activity table.
2. **Inflate the Chair:** Locate the air valve on the chair base. Use a suitable pump (not included) to inflate the chair until it is firm but not overinflated. Ensure the valve is securely closed after inflation.



Figure 3.1: The inflated activity chair base, ready for use.

3. **Attach the Activity Table:** Position the activity table in front of the inflated chair. Align the table's attachment points with the corresponding slots on the chair. Gently press down until the table clicks securely into place.



Figure 3.2: The activity chair with the table securely attached, showcasing its interactive features.

4. **Verify Stability:** Before placing your child in the chair, gently push and pull on the activity table to ensure it is firmly attached and the chair is stable.

4. OPERATING INSTRUCTIONS

The Smoby Little Smoby Activity Chair offers a safe and stimulating space for your child.

- **Placing Your Child:** Gently place your child into the center of the chair, ensuring they are comfortably seated and supported by the soft backrest.
- **Engaging with Activities:** The integrated activity table features multiple interactive elements designed for sensory development and motor skills:
 - A small kangaroo toy that plays hide-and-seek.
 - A Koala figure that can be moved up and down a tree.
 - A sound feature mimicking a pine forest.
 - A child-safe mirror for self-discovery.
 - Various textured elements and buttons for tactile exploration.

- **Detaching the Activity Table:** The activity table can be detached for separate play or when the chair is used as a simple floor seat. To detach, locate the release mechanisms (if any, usually clips or buttons) and gently pull the table upwards.



Figure 4.1: The 3-in-1 functionality of the product, showing the chair with table, chair only, and table only.

5. MAINTENANCE AND CARE

Proper care will extend the life of your Smoby Little Smoby Activity Chair.

- **Cleaning:** The chair and activity table are made of durable plastic and are water-resistant. Wipe clean with a damp cloth and mild soap. Rinse thoroughly with a clean damp cloth and air dry. Do not use abrasive cleaners or solvents.
- **Storage:** For compact storage, the chair can be deflated. Open the air valve and gently press the air out of the chair. Store all components in a clean, dry place away from direct sunlight and extreme temperatures.
- **Inspection:** Regularly inspect the chair for any signs of wear, tears, or damage, especially around seams and valves. Check the activity table for loose parts or sharp edges.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Chair deflates quickly.	Air valve not fully closed, or a small puncture/leak.	Ensure the air valve is securely closed. Check for leaks by applying soapy water to the surface; bubbles will indicate a leak. If a small puncture is found, a vinyl repair kit (not included) may be used.
Activity table is wobbly or detaches easily.	Table not securely attached to the chair base.	Ensure the table's attachment points are fully engaged and clicked into place. Re-attach firmly.
Activity toys are not functioning.	Damage to the toy mechanism.	Inspect the toys for any visible damage. If a toy is broken, discontinue use of that specific toy. Contact customer support if the product is under warranty.

7. SPECIFICATIONS

Brand	Smoby
Model Number	140103
Material	Plastic
Color	Neutral or Warm Tones
Product Dimensions (D x W x H)	66 cm x 70 cm x 41.8 cm
Item Weight	1.85 Kilograms
Recommended Age Range	Toddlers (+6 Months)
Maximum Recommended Weight	15 Kilograms
Assembly Required	Yes
Portable	Yes

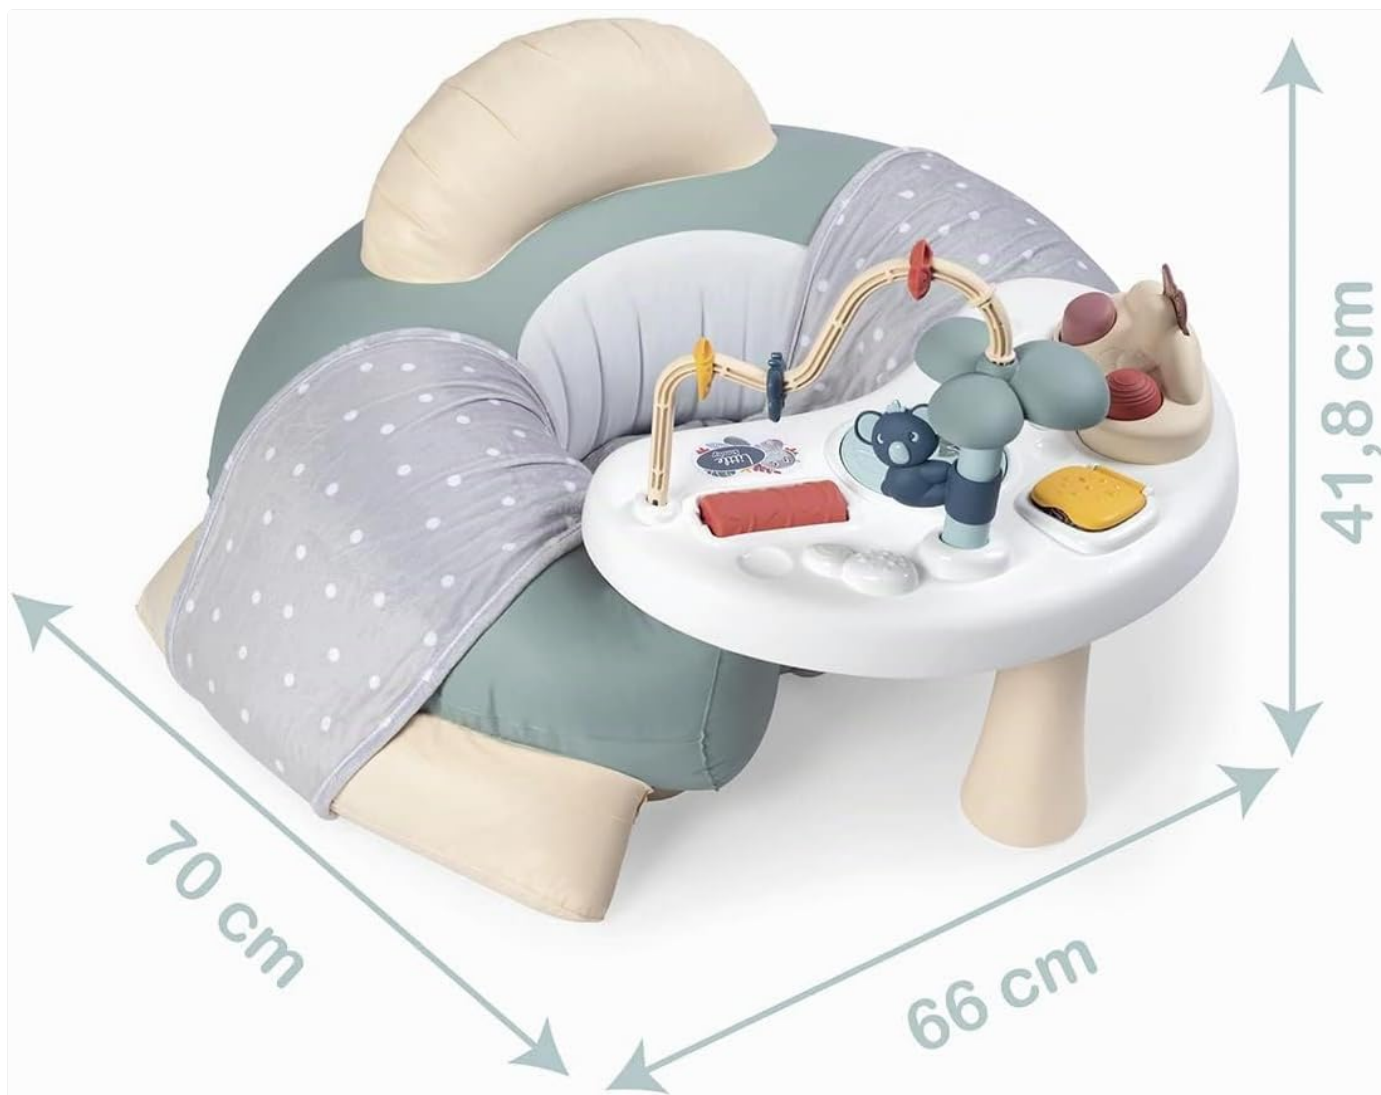


Figure 7.1: Product dimensions overview.

8. WARRANTY INFORMATION

This Smoby product is covered by a manufacturer's warranty for a period of **2 years** from the date of purchase. This warranty covers manufacturing defects under normal use. It does not cover damage caused by misuse, accidents, unauthorized modifications, or normal wear and tear. Please retain your proof of purchase for warranty claims.

9. CUSTOMER SUPPORT

If you have any questions about your Smoby Little Smoby Activity Chair, require assistance with assembly, or need to make a warranty claim, please contact Smoby customer service. Refer to the product packaging or the official Smoby website for the most up-to-date contact information.

Online Resources: For additional information and support, visit the official Smoby website: www.smoby.com

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question