

Smoby 254118

Smoby Baby Nurse Pop Pram III Stroller (Model 254118) Instruction Manual

INTRODUCTION

This manual provides instructions for the assembly, operation, and maintenance of your Smoby Baby Nurse Pop Pram III Stroller. Designed for dolls up to 42 cm, this pram features a durable metal frame and is suitable for children aged 18 months and up. Please read these instructions carefully before assembly and use.

WHAT'S IN THE BOX

Upon unpacking, please ensure all components are present:

- Toy cart (pram components including frame, wheels, fabric body, canopy, and removable carrycot)

SETUP INSTRUCTIONS

Assembly is required for this product. Please follow these steps carefully to ensure proper and safe setup.

1. Unpack all components from the box. Verify that all parts are present: metal frame sections, wheels, pram body fabric, retractable canopy, and removable carrycot.
2. Assemble the metal frame by connecting the designated sections. Ensure all connections are secure and listen for clicks or ensure locking mechanisms are engaged.
3. Attach the four wheels to the designated axles on the frame. Ensure they rotate freely and are firmly secured.
4. Secure the fabric pram body onto the assembled frame. Ensure all attachment points (snaps, velcro, or loops) are correctly fastened.
5. Install the retractable canopy onto the pram body. Check that it can be smoothly extended and retracted.

6. Place the removable carrycot inside the pram body.
7. Before first use, perform a final check to ensure all parts are correctly installed, stable, and secure. The assembled pram measures approximately 59 cm in length, 38 cm in width, and 58 cm in height.



Image: The fully assembled Smoby Baby Nurse Pop Pram III Stroller, showcasing its design and structure.

OPERATING THE PRAM

The Smoby Baby Nurse Pop Pram III Stroller is designed to enhance imaginative play for children with their dolls. Here are key features and how to use them:

- **Retractable Canopy:** The pram is equipped with a retractable canopy. This can be adjusted to an open or closed position to simulate protecting your doll from imaginary sun or wind. Gently push or pull the canopy to adjust its position.
- **Removable Carrycot:** The carrycot can be easily detached from the pram frame. This allows children to transport their doll separately, fostering diverse play scenarios. To remove, lift the carrycot from the pram body. To re-attach, simply place it back into the pram body, ensuring it sits securely.
- **Storage Space:** A convenient storage space is located beneath the pram body. This area is ideal for carrying small doll accessories, such as bottles, blankets, or extra clothes, during play.
- **Doll Compatibility:** This pram is designed to accommodate dolls up to 42 cm in height. Please note that a doll is not included with the pram.



Image: A child pushing the Smoby Baby Nurse Pop Pram III Stroller, demonstrating typical use during play.



Image: A child adjusting the doll or canopy of the Smoby Baby Nurse Pop Pram III Stroller, highlighting interactive features.

MAINTENANCE AND CARE

Proper care will extend the life of your Smoby Baby Nurse Pop Pram III Stroller.

- **Cleaning the Fabric:** To clean the fabric components of the pram, use only a slightly dampened sponge. Do not immerse in water or use harsh detergents, as this may damage the material or colors.
- **Frame Cleaning:** Wipe the metal and plastic frame components with a soft, damp cloth. Avoid abrasive cleaners.
- **Storage:** Store the pram in a clean, dry place away from direct sunlight when not in use to preserve its condition and prevent material degradation.

TROUBLESHOOTING

If you encounter any issues with your pram, please refer to the following common solutions:

- **Pram Instability:** If the pram feels unstable during use, check all assembly points to ensure they are securely fastened. Refer to the setup instructions and tighten any loose connections.
- **Canopy Not Staying Up:** Ensure the canopy mechanism is fully extended and locked into position. If it continues to slide down, inspect for any obstructions or damage to the canopy supports.
- **Wheels Not Turning Smoothly:** Check the wheels for any debris, hair, or lint that might be obstructing movement. Clean the wheel axles and treads as necessary.

PRODUCT SPECIFICATIONS

- **Model Number:** 254118
- **Brand:** Smoby
- **Material:** Metal (frame), Plastic (handle, wheels), Fabric (pram body, canopy)
- **Dimensions (L x W x H):** Approximately 59 cm x 38 cm x 58 cm (23.23" x 14.96" x 22.83")
- **Doll Compatibility:** For dolls up to 42 cm
- **Recommended Age:** 18 months and up
- **Assembly Required:** Yes
- **Included Components:** Toy cart (pram)
- **Operation Mode:** Manual

SAFETY INFORMATION

Please observe the following safety guidelines to ensure a safe play experience:

- This product is intended for children aged 18 months and older.
- Adult supervision is recommended during play, especially with younger children.
- Ensure all parts are securely assembled before allowing a child to use the pram. Regularly check for loose parts.
- This pram is a toy and is not suitable for carrying real infants, toddlers, or pets.
- Keep all packaging materials (plastic bags, ties, etc.) away from children to prevent choking hazards.
- Do not modify the product in any way, as this may compromise its safety and functionality.

WARRANTY AND SUPPORT

For warranty information or product support, please contact Smoby customer service. Retain your proof of purchase for any warranty claims. Contact information can typically be found on the product packaging or the official Smoby website.