

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Smoby](#) /

› [Smoby Black+Decker Mega Center Toy Workbench Instruction Manual](#)

Smoby 360726WEB

Smoby Black+Decker Mega Center Toy Workbench Instruction Manual

Model: 360726WEB

1. PRODUCT OVERVIEW

The Smoby Black+Decker Mega Center is a comprehensive toy workbench designed to introduce children to various DIY activities. It features three distinct play areas: mechanical, plumbing and painting, and carpentry. This versatile center is foldable and equipped with wheels for easy transport and storage. It comes with 100 accessories to enhance the play experience.



Image 1.1: The Smoby Black+Decker Mega Center Toy Workbench, showcasing its three distinct play areas and included accessories.

Key Features:

- **Complete Workshop:** Integrates mechanical, plumbing/painting, and carpentry sections.
- **Mechanical Area:** Includes a workbench with a tap/nail function, a vise, a mechanical ruler, storage compartments, a tool rack, a small chalk board, and a booklet for building vehicles.
- **Plumbing & Painting Area:** Features a sink, a paint tray, and plumbing elements for assembling a ball circuit.
- **Carpentry Area:** Equipped with a circular saw that activates via a lever.
- **Extensive Accessories:** Comes with 100 accessories, including 6 tools (saw, hammer, flat wrench, screwdriver, pliers, pipe wrench), screws, nuts, nails, a construction set for various vehicles, a mechanical drill, a paint roller, and a foam bottle.
- **Portability:** Foldable design with wheels for easy movement and storage.
- **Origin:** Manufactured in France.



Image 1.2: A detailed view of the 100 accessories provided with the workbench, including various tools, screws, nuts, and construction parts.

2. SAFETY WARNINGS

WARNING! This product is not suitable for children under 3 years of age (36 months). It contains small parts which may present a choking hazard. Adult supervision is recommended during play.

- Always ensure all parts are securely assembled before use.
- Keep small parts away from children under 3 years to prevent choking.
- Do not modify the product or use non-approved accessories.
- Regularly inspect the product for any damage or loose parts. Discontinue use if damage is found.

3. SETUP AND ASSEMBLY

The Smoby Black+Decker Mega Center requires adult assembly. Please follow the instructions provided in the included assembly guide carefully. Assembly typically takes approximately 1 hour and 30 minutes for an adult.

Assembly Steps:

- Unpack Components:** Carefully remove all parts from the packaging. Verify that all 100 accessories and main structural components are present according to the parts list in the assembly guide.
- Prepare Workspace:** Assemble the workbench on a clean, flat surface to prevent loss of small parts.
- Follow Illustrated Guide:** Refer to the detailed, step-by-step illustrations in the manufacturer's assembly manual. Pay close attention to the orientation of each piece.
- Secure Connections:** Ensure all screws, nuts, and interlocking parts are firmly secured. Do not overtighten plastic components.
- Attach Accessories:** Once the main structure is complete, attach the tool rack, vise, and other accessories as indicated in the manual.
- Final Check:** Before allowing children to play, perform a thorough check to ensure all parts are correctly assembled and stable.



Image 3.1: The product packaging, indicating the contents and age recommendation.

4. OPERATING INSTRUCTIONS

The Mega Center offers diverse play opportunities across its three specialized areas. Encourage imaginative play and skill development.

4.1. Mechanical Area

- **Vise Usage:** Use the functional vise to hold toy pieces in place for pretend cutting or drilling.
- **Tap/Nail Function:** Utilize the designated area for hammering toy nails or tapping pieces.
- **Tool Rack:** Hang the included tools on the tool rack for organized storage and easy access.
- **Vehicle Construction:** Use the construction set and booklet to assemble various toy vehicles.



Image 4.1: A child engaging with the mechanical area, using a toy hammer.

4.2. Plumbing and Painting Area

- **Plumbing Circuit:** Assemble the various plumbing elements and pipes to create a functional ball circuit.
- **Sink and Paint Tray:** Use the toy sink and paint tray for pretend washing or painting activities.



Image 4.2: A child connecting pipes in the plumbing section of the workbench.

4.3. Carpentry Area

- **Circular Saw:** Activate the toy circular saw by pushing its lever for realistic play.
- **Pretend Cutting:** Use the saw to pretend cut toy wood pieces.



Image 4.3: A child operating the toy circular saw in the carpentry area.

4.4. Portability

- **Folding:** To fold the workbench, follow the specific instructions in the assembly guide to collapse the side sections.
- **Moving:** Once folded, use the integrated wheels to easily move the workbench to a new location or for storage.



Image 4.4: A child demonstrating the easy transport of the folded workbench using its wheels.

5. MAINTENANCE

Proper maintenance ensures the longevity and safety of your Smoby Black+Decker Mega Center.

- **Cleaning:** Wipe down all plastic surfaces with a damp cloth and mild soap. Avoid abrasive cleaners or solvents. Ensure all parts are dry before storage.
- **Storage:** Store the workbench in a clean, dry place away from direct sunlight and extreme temperatures. The foldable design allows for compact storage.
- **Inspection:** Periodically check all connections, screws, and moving parts for tightness and wear. Replace any damaged parts immediately.

6. TROUBLESHOOTING

If you encounter any issues with your Smoby Black+Decker Mega Center, please refer to the following common solutions:

- **Loose Parts:** If any parts feel loose, re-tighten screws or re-secure interlocking components according to the assembly instructions.
- **Missing Accessories:** Double-check the packaging and play area. If an accessory is genuinely missing upon unboxing, contact customer support.
- **Difficulty Folding/Unfolding:** Ensure no parts are obstructing the folding mechanism. Apply gentle, even pressure. Refer to the assembly guide for specific folding steps.
- **Functionality Issues:** For mechanical parts like the circular saw or drill, ensure they are correctly assembled and free from obstructions.

If the problem persists, please contact Smoby Customer Support for further assistance.

7. SPECIFICATIONS

Feature	Specification
Model Number	360726WEB
Product Dimensions (L x W x H)	56 x 34 x 103 cm
Item Weight	6.5 Kilograms
Recommended Age	36 months - 7 years
Main Material	Plastic
Color	Multicolored
Self-assembly Required	Yes
Batteries Required	No
Number of Accessories	100
Educational Value	Creativity, manual skills, basic engineering principles

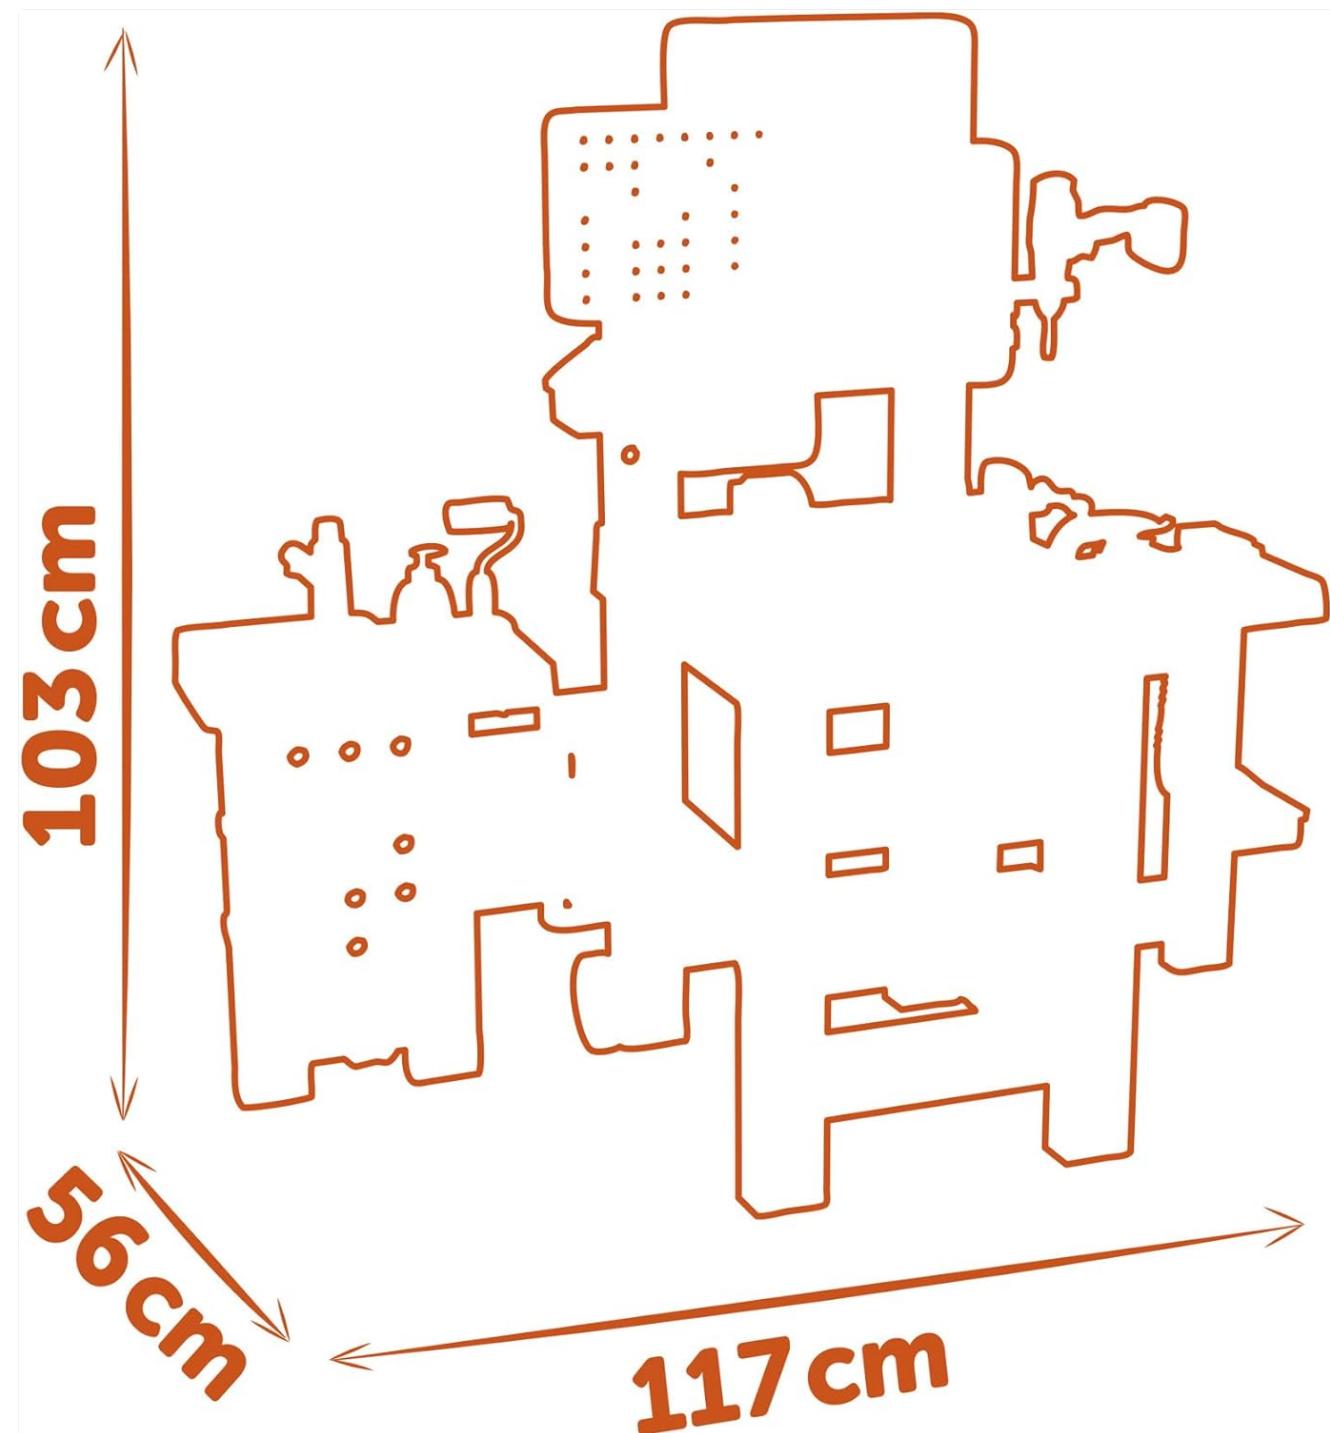


Image 7.1: Dimensional diagram of the workbench (Height: 103 cm, Depth: 56 cm, Width: 117 cm).

8. WARRANTY AND SUPPORT

Smoby is committed to providing quality products and excellent customer service. While specific warranty details may vary by region, Smoby's after-sales service is known for its efficiency and responsiveness.

- **Customer Support:** For any questions, concerns, or issues regarding your Smoby Black+Decker Mega Center, please contact Smoby customer support. Contact information can typically be found on the product packaging or the official Smoby website.
- **Replacement Parts:** Smoby offers the possibility to order certain replacement parts directly from their website, which is a valuable service in the toy industry.

When contacting support, please have your product model number (360726WEB) and purchase information readily available.

© 2026 Smoby. All rights reserved.