

Philips STH7020/20

Philips STH7020/20 Handheld Garment Steamer User Manual

Model: STH7020/20 | Brand: Philips

1. INTRODUCTION

Thank you for choosing the Philips STH7020/20 Handheld Garment Steamer. This manual provides essential information for the safe and effective use of your new appliance. Please read it thoroughly before first use and keep it for future reference.

This handheld garment steamer is designed for quick and convenient wrinkle removal and fabric refreshing, suitable for a wide range of garments and textiles.

2. PRODUCT OVERVIEW

Familiarize yourself with the components of your Philips Handheld Garment Steamer:

- Steam Plate with Pointed Tip
- Adjustable Steam Head
- Steam Trigger/Button
- Power Button
- Water Tank (100 ml, detachable)
- Power Cord with 16 AMP Plug
- Indicator Lights (Eco/Max steam settings)



A front view of the Philips STH7020/20 Handheld Garment Steamer in Deep Azur color, showcasing its ergonomic design and steam plate.

3. SAFETY INFORMATION

Please observe the following safety precautions:

- Always read the entire instruction manual before using the appliance.
- Keep the appliance out of reach of children and pets.
- Use the steamer on a stable, heat-resistant surface.
- Do not direct steam at people, animals, or other electrical appliances. Steam is hot and can cause burns.
- Only use distilled or demineralized water in the water tank to prevent mineral buildup.
- Unplug the steamer from the power outlet before filling or emptying the water tank, and when not in use.
- Never immerse the appliance in water or any other liquid.
- Ensure your power outlet is compatible with the 16 AMP plug and the appliance's voltage (240 Volts).
- Do not use the appliance if the plug, power cord, or the appliance itself shows any signs of damage.

4. SETUP

1. **Fill the Water Tank:** Detach the 100 ml water tank from the main unit. Open the filling cap and fill the tank with distilled or demineralized water. Close the cap securely and reattach the tank to the steamer until it clicks into place.
2. **Connect to Power:** Plug the power cord into a suitable 16 AMP electrical outlet.

Unique adjustable steam head

gives you the option to steam vertically or horizontally to smoothen creases at an optimum angle.



 
The detachable 100 ml water tank is easily removed for filling with distilled water.

5. OPERATING INSTRUCTIONS


1. **Power On and Heat Up:** Press the power button. The indicator light will flash, indicating the steamer is heating up. The steamer is ready for use in approximately 30 seconds when the light stops flashing and remains steady.
2. **Select Steam Setting:** Your steamer offers two steam settings:
 - **Eco Mode:** For lighter fabrics and to conserve water. Press the steam setting button to select Eco mode.
 - **Max Mode:** For heavier fabrics and stubborn creases, providing up to 28 g/min of continuous steam. Press the steam setting button to select Max mode.
3. **Adjust Steam Head:** The unique adjustable head allows for both vertical and horizontal steaming.

Press the adjustment button to change the angle of the steam head for optimal results on different garment types.

4. **Begin Steaming:** Hold the garment taut with one hand. Press and hold the steam trigger to release steam. Move the steam plate over the fabric, allowing the steam to relax the fibers and remove wrinkles.
5. **Using the Pointed Tip:** For hard-to-reach areas like collars, cuffs, and around buttons, utilize the pointed tip of the steam plate for precise steaming.

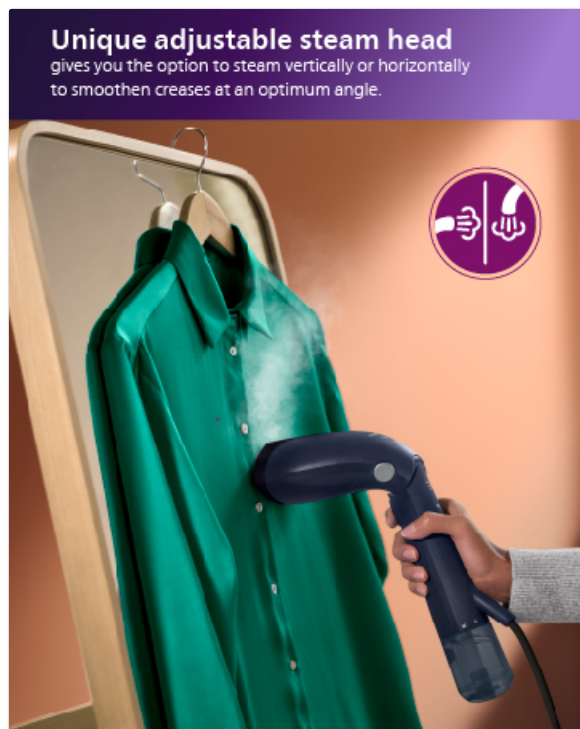

This image illustrates how to adjust the unique steam head of the Philips STH7020/20 steamer, allowing for both vertical and horizontal steaming to effectively remove creases.

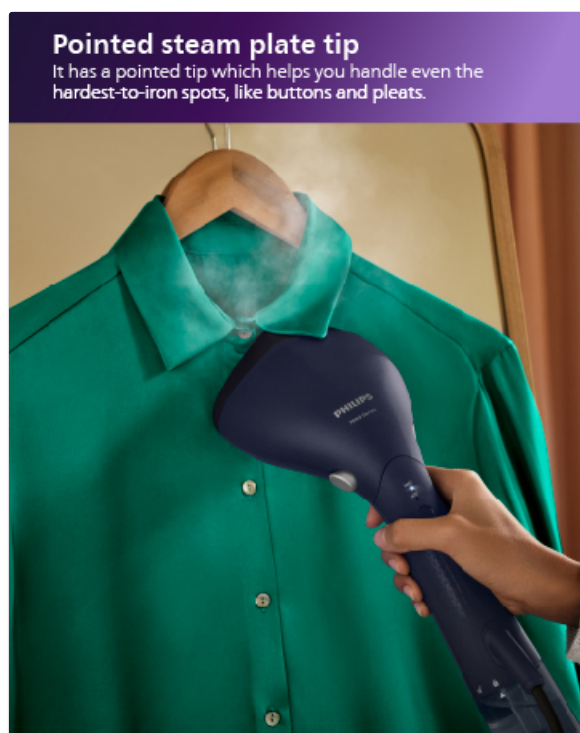 

This image demonstrates the pointed steam plate tip of the Philips STH7020/20 steamer, designed for precise steaming around buttons, collars, and other hard-to-reach areas on garments.

For All types of fabric

No Burn Guarantee



Heavy & Intricate Embroidery work



 
Pre-stitched designer wear



Multiple heavy layering



Heavy or light pleating

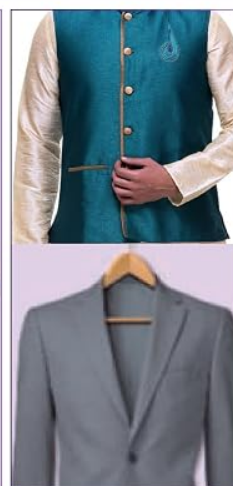

Male Kurtas & Jackets

A visual representation of various fabric types, from heavy embroidery to delicate pleats, illustrating the Philips STH7020/20 steamer's 'No Burn Guarantee' and its suitability for all ironable fabrics.

6. MAINTENANCE

1. **Empty Water Tank:** After each use, unplug the steamer and allow it to cool down. Detach the water tank and empty any remaining water.
2. **Clean Steam Plate:** Wipe the steam plate with a soft, damp cloth to remove any residue. Do not use abrasive cleaners or scouring pads.
3. **Descaling:** Regular descaling is recommended to maintain optimal performance, especially if using tap water (though distilled water is preferred). Refer to the full product manual for detailed descaling instructions.
4. **Storage:** Store the steamer in a dry, safe place, away from direct sunlight and out of reach of children. Ensure the power cord is neatly wrapped. The included pouch can be used for storage.

7. TROUBLESHOOTING

• No Steam:

- Check if the water tank is filled.
- Ensure the steamer is properly plugged into a working power outlet.
- Allow sufficient time (approx. 30 seconds) for the steamer to heat up.

• Water Leakage:

- Do not overfill the water tank.
- Ensure the water tank is securely attached to the main unit.
- Ensure the steam head is not tilted too far downwards during use, which can cause condensation to drip.

• Steamer Not Heating:

- Verify the power connection and try a different outlet.


- If the issue persists, contact customer support.

8. SPECIFICATIONS

Feature	Specification
Brand	Philips
Model Number	STH7020/20
Color	Deep Azur
Wattage	1500 Watts
Voltage	240 Volts
Continuous Steam Output	Up to 28 g/min
Heat-up Time	30 Seconds
Water Tank Capacity	100 Milliliters
Product Dimensions (L x W x H)	15.6L x 15.1W x 35.2H Centimeters
Item Weight	1177 Grams (approx. 1.18 kg)
Included Components	Glove for extra protection, Pouch

A GARMENT STEAMER IS NOT AN IRON.

 THE DIFFERENCE BETWEEN GARMENT STEAMERS AND IRONS

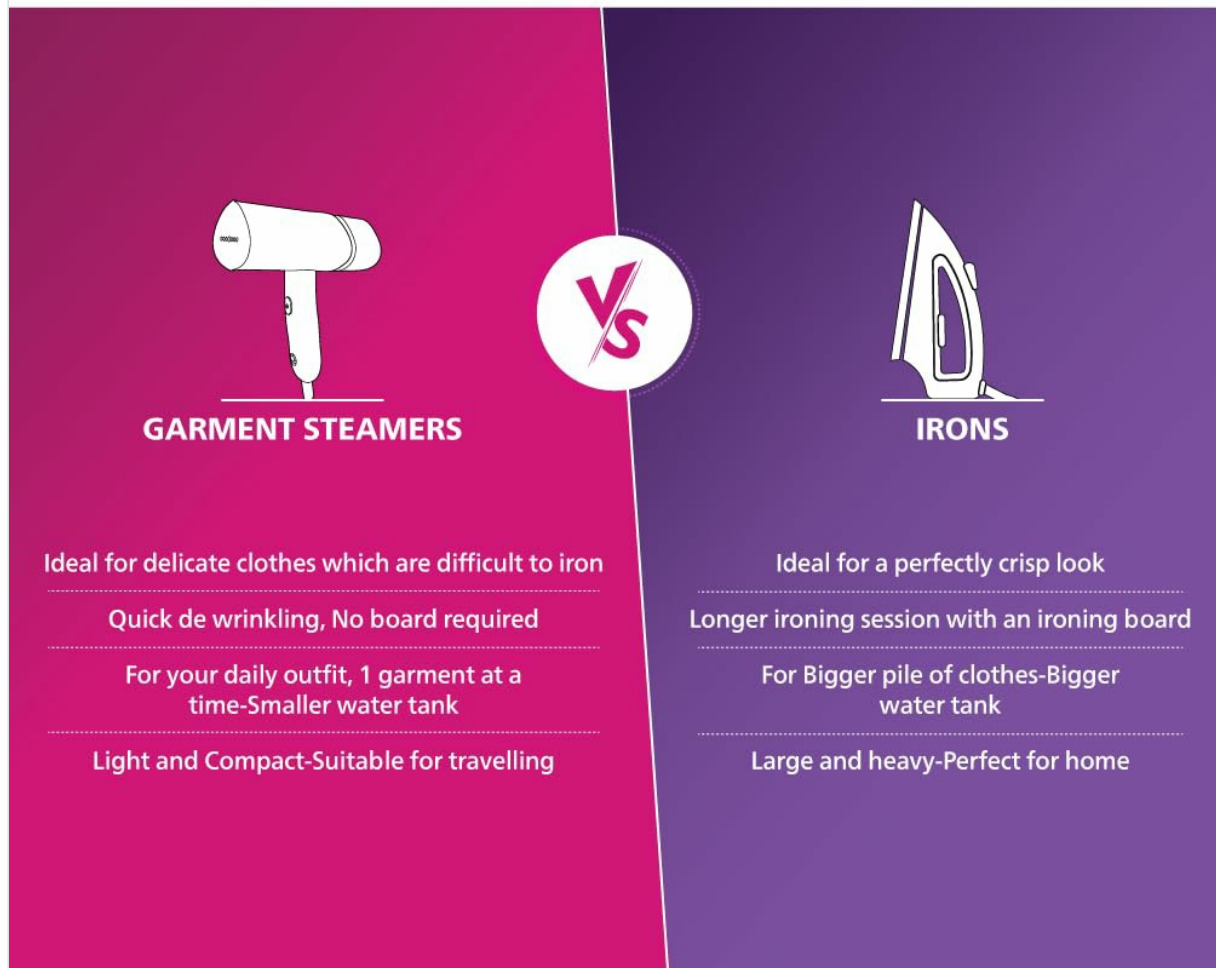

An infographic detailing the differences between garment steamers and traditional irons, explaining when to use each for optimal garment care. It emphasizes the steamer's benefits for delicate clothes and quick de-wrinkling without a board.

9. WARRANTY AND SUPPORT

The Philips STH7020/20 Handheld Garment Steamer comes with a standard manufacturer's warranty. For detailed information regarding warranty terms, service centers, or to register your product, please refer to the warranty card included in the packaging or visit the official Philips website.

For further assistance, you may also contact Philips customer support.