

## Hukën MK-AFD-8ST

# Hukën Dual Basket Air Fryer MK-AFD-8ST User Manual

Model: MK-AFD-8ST

## 1. INTRODUCTION

This manual provides essential information for the safe and efficient operation of your Hukën Dual Basket Air Fryer, model MK-AFD-8ST. This appliance features two independent cooking zones, allowing for simultaneous preparation of different dishes with varied settings. Please read all instructions carefully before first use and retain this manual for future reference.

## 2. IMPORTANT SAFETY INSTRUCTIONS

- Always ensure the appliance is unplugged from the power outlet when not in use, before assembling or disassembling parts, and before cleaning.
- Do not immerse the main unit, cord, or plug in water or other liquids to prevent electrical shock.
- Keep the appliance and its cord out of reach of children. Close supervision is necessary when any appliance is used by or near children.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner. Contact customer support for assistance.
- Place the air fryer on a stable, heat-resistant surface, away from walls and other appliances to allow for adequate air circulation.
- Do not block the air intake or air outlet vents during operation.
- The appliance generates heat and steam during use. Do not touch hot surfaces. Use oven mitts when handling hot components.
- Do not place food directly into the heating chamber. Always use the provided baskets and racks.
- Avoid using metal utensils inside the baskets as they may damage the non-stick coating.
- This appliance is for household use only. Do not use outdoors.

### 3. PACKAGE CONTENTS

---

Verify that all components are present and in good condition upon unpacking:

- Hukën Dual Basket Air Fryer Main Unit
- 2 x Non-stick Cooking Baskets
- 2 x Non-stick Crisper Racks
- 1 x Printed Recipe Book
- User Manual (this document)

### 4. PRODUCT OVERVIEW

---

Familiarize yourself with the main components of your Hukën Dual Basket Air Fryer:



Image: Front view of the Hukën Dual Basket Air Fryer with one basket partially open, revealing food inside.

- **Main Unit:** Houses the heating elements, fans, and control panel.

- **Control Panel:** Digital touch screen for setting time, temperature, and selecting preset functions.
- **Cooking Baskets (x2):** Removable, non-stick baskets for holding food.
- **Crisper Racks (x2):** Insert into the baskets to allow air circulation around food for even cooking.
- **Handles:** Ergonomic handles for safe removal and insertion of baskets.
- **Air Vents:** Located at the back of the unit for proper airflow.

## 5. SETUP AND FIRST USE

1. **Unpack:** Carefully remove all packaging materials, stickers, and labels from the air fryer.
2. **Clean:** Wash the cooking baskets and crisper racks with warm, soapy water. Rinse thoroughly and dry completely. Wipe the exterior of the main unit with a damp cloth.
3. **Placement:** Place the air fryer on a stable, level, heat-resistant surface. Ensure there is at least 6 inches (15 cm) of clear space around the back and sides of the appliance for proper ventilation.
4. **Power Connection:** Plug the power cord into a grounded electrical outlet. The control panel will illuminate briefly.
5. **Initial Run (Optional):** For the first use, it is recommended to run the air fryer empty for about 10-15 minutes at 200°C (390°F) to burn off any manufacturing residues. A slight odor may be present, which is normal and will dissipate.

## 6. OPERATING INSTRUCTIONS

### 6.1. Control Panel Overview



#### **Sin complicaciones**

Cuenta con 10 funciones preestablecidas como freír con aire, asar, hornear y más, o ajusta a tu gusto las temperaturas y tiempos en cada zona de cocción (desde 60° a 200°C)



#### **Tecnología de Cocción Dual**

2 zonas de cocción independientes con canasta, ventilador cíclico y elementos calefactores propios

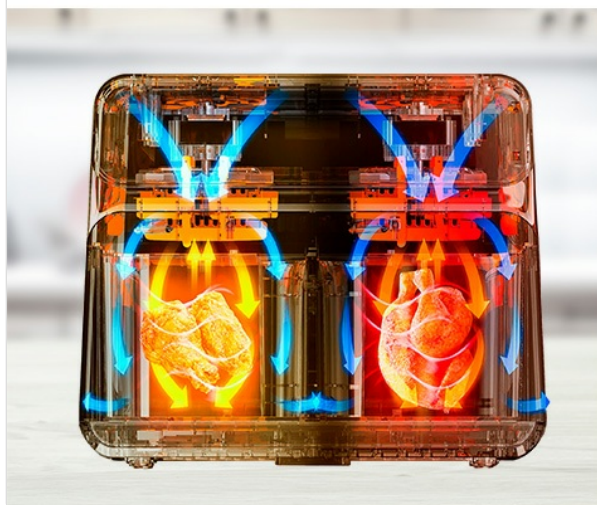


Image: A hand interacting with the digital touch control panel of the air fryer, showing temperature and time settings.

The Hukèn Dual Basket Air Fryer features an intuitive digital touch control panel. Each basket (1 and 2) has independent controls for time and temperature. The panel also includes 10 preset cooking functions.

- **Power Button:** Turns the appliance on/off.

- **Basket Select (1/2):** Tap to select which basket's settings you wish to adjust.
- **Temperature Controls (+/-):** Adjust cooking temperature (60°C to 200°C).
- **Time Controls (+/-):** Adjust cooking time (1 to 60 minutes).
- **Preset Functions:** Icons representing common dishes (e.g., fries, chicken, fish, bake). Tap to select a preset.
- **Start/Pause Button:** Begins or pauses the cooking cycle.
- **Shake Reminder:** Some presets may include a shake reminder icon.

## 6.2. Basic Operation

1. **Prepare Food:** Place your food into the cooking baskets. Ensure the crisper racks are inserted. Do not overfill the baskets to allow for proper air circulation.
2. **Insert Baskets:** Slide the baskets firmly into the main unit until they click into place.
3. **Power On:** Press the power button to activate the control panel.
4. **Select Basket:** Tap the '1' or '2' icon to select the basket you wish to program.
5. **Set Temperature and Time:** Use the temperature (+/-) and time (+/-) buttons to set your desired cooking parameters. Alternatively, select one of the 10 preset functions.
6. **Start Cooking:** Press the Start/Pause button to begin cooking. The fan and heating element will activate.
7. **Shake Reminder:** If applicable, the air fryer will beep and display a 'SHAKE' icon during the cooking cycle. Carefully remove the basket, shake the contents, and reinsert.
8. **Completion:** Once the timer reaches zero, the air fryer will beep, and the heating element will turn off.
9. **Remove Food:** Carefully pull out the baskets using the handles. Place them on a heat-resistant surface. Use tongs to remove food.

## 6.3. Using Dual-Fry Technology

The Hukën Dual Basket Air Fryer allows you to cook two different foods simultaneously with independent settings.



**Menos tiempo cocinando,  
¡más tiempo disfrutando!**  
Prepara 2 distintos platillos al mismo tiempo, de 1 o 2 maneras, en sus 2 canastas independientes



**Gran capacidad de 8L**  
Cuenta con dos canastas, cada una de 4 litros. El diseño de canasta rectangular te permite una mayor capacidad de cocción que las redondas.

**¡TODOS PODEMOS SER CHEFS!**

Image: Diagram illustrating the independent air circulation and heating elements within each of the two cooking zones.



Image: Top view of the air fryer with both baskets pulled out, demonstrating different foods (shrimp and fries) being prepared simultaneously.

1. Load food into both baskets.
2. Press the power button.
3. Tap '1' to select the first basket. Set its desired temperature and time.
4. Tap '2' to select the second basket. Set its desired temperature and time.
5. Press the Start/Pause button. Both baskets will begin cooking independently according to their set programs.
6. The air fryer will alert you when each basket's cooking cycle is complete.

## 6.4. Official Product Video

Your browser does not support the video tag.

Video: An official product video demonstrating the Hukèn Dual Basket Air Fryer's features, including the touch panel operation and dual cooking capabilities.

## 7. MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and extends the lifespan of your air fryer.

1. **Unplug and Cool:** Always unplug the air fryer and allow it to cool completely before cleaning.
2. **Baskets and Racks:** The non-stick cooking baskets and crisper racks are dishwasher safe. Alternatively, wash them with warm, soapy water and a non-abrasive sponge. For stubborn food residue, soak them in warm water for 10-15 minutes before cleaning.
3. **Interior:** Wipe the interior of the air fryer with a damp cloth. Do not use abrasive cleaners or scouring pads.
4. **Exterior:** Clean the exterior of the main unit with a soft, damp cloth. Do not use harsh chemicals or abrasive materials.
5. **Heating Element:** If necessary, gently clean the heating element with a soft brush to remove any food debris. Ensure the appliance is completely cool and unplugged.
6. **Storage:** Store the cleaned and dried air fryer in a cool, dry place.

## 8. TROUBLESHOOTING

Refer to this section for common issues and their solutions:

Problem	Possible Cause	Solution
Air fryer does not turn on.	Not plugged in; power outlet malfunction; appliance malfunction.	Ensure the power cord is securely plugged into a working outlet. Check the circuit breaker. If the issue persists, contact customer support.
Food is not cooked evenly.	Baskets are overfilled; food not shaken/flipped; incorrect temperature/time.	Do not overfill baskets. Shake or flip food halfway through cooking. Adjust temperature and time as needed for specific recipes.
White smoke coming from the appliance.	Grease residue from previous use; high-fat food cooking.	Clean baskets and interior thoroughly after each use. For high-fat foods, drain excess fat from the basket during cooking.
Appliance emits a burning smell.	Food particles stuck on the heating element.	Unplug and allow to cool. Carefully clean the heating element with a soft brush.
Baskets do not slide in smoothly.	Food obstruction; baskets not aligned.	Ensure no food is blocking the path. Align the baskets correctly with the guides.

## 9. SPECIFICATIONS

Feature	Detail
Model Name	MK-AFD-8ST
Brand	Hukën
Capacity	8 Liters (4L + 4L Dual Baskets)
Electrical Power	1700 Watts
Control Method	Touch Digital Panel
Special Feature	Programmable, Dual Cooking Zones
Material (Exterior)	Stainless Steel
Material (Interior)	Stainless Steel
Dishwasher Safe Components	Yes (Baskets and Racks)
Recommended Uses	Air Frying, Roasting, Baking

## 10. WARRANTY AND SUPPORT

---

Your Hukën Dual Basket Air Fryer is covered by a manufacturer's warranty. Please refer to the warranty card included in your package for specific terms and conditions. For technical support, troubleshooting assistance, or to inquire about replacement parts, please contact Hukën customer service through the retailer where the product was purchased or visit the official Hukën website.

Keep your purchase receipt as proof of purchase for warranty claims.