

Torchlet FL123

Torchlet RGB Floor Lamp User Manual

Model: FL123

1. INTRODUCTION

Thank you for choosing the Torchlet RGB Floor Lamp. This manual provides detailed instructions for the assembly, operation, and maintenance of your new floor lamp. Please read this manual thoroughly before use to ensure proper functionality and safety.

The Torchlet RGB Floor Lamp features a classic, modern design with a white fabric shade and a compact base. It offers cutting-edge RGB display technology with 16 million DIY colors, various scene modes, music sync capabilities, and multiple control methods including remote, base buttons, and a mobile application.

2. WHAT'S IN THE BOX

Carefully unpack all components and ensure all items listed below are present:

- 1 x Fabric Shade
- 1 x Remote Control
- 1 x Adapter
- 1 x LED Bulb (pre-installed or separate)
- Assembly Rods/Poles (sectional)
- Base Unit
- User Manual (this document)



Figure 2.1: Included components of the Torchlet RGB Floor Lamp.

If any parts are missing or damaged, please contact Torchlet customer support.

3. SETUP INSTRUCTIONS

3.1. Assembly

1. **Unpack Components:** Carefully remove all parts from the packaging.
2. **Assemble the Base:** Attach the lowest pole section to the circular base unit. Ensure it is securely tightened.
3. **Connect Pole Sections:** Screw the remaining pole sections together, ensuring the LED strip cable runs freely through the center.
4. **Attach Fabric Shade:** Carefully slide the fabric shade over the assembled pole. Ensure the shade is oriented correctly and fits snugly over the top and bottom rings. Some stretching may be required to achieve a taut fit.
5. **Secure the Shade:** Secure the fabric shade to the top and bottom rings using the provided fasteners or tension

mechanisms.



Figure 3.1: Step-by-step assembly guide for the Torchlet Floor Lamp.

3.2. Initial Power On

1. **Connect Power:** Plug the power adapter into the lamp's base and then into a standard electrical outlet.
2. **Activate:** The lamp should illuminate. If not, use the remote control or the base button to turn it on.

4. OPERATING INSTRUCTIONS

4.1. Control Methods

Your Torchlet RGB Floor Lamp can be controlled using three primary methods:

- **Remote Control:** The included remote allows for basic functions like power on/off, color selection, brightness adjustment, and scene mode changes.
- **Base Buttons:** The lamp's base features physical buttons for quick access to power and basic color/mode cycling.

- **Mobile App ("duoCo StripX"):** For full functionality, download the "duoCo StripX" app from your device's app store. The app enables advanced features such as 16 million DIY colors, custom scene modes, music sync, and timer settings.
- **Voice Control:** The lamp supports voice control via Amazon Alexa and Google Home when connected through the "duoCo StripX" app.



Figure 4.1: The Torchlet Floor Lamp can be controlled via remote, app, or voice commands.



Figure 4.2: Overview of the three control methods for the lamp.

For a visual demonstration of the lamp's features and control methods, please watch the official product video below:

Your browser does not support the video tag.

Video 4.1: Official demonstration of the Torchlet Color Changing Floor Lamp, showcasing voice control, music mode, color mode, adjustable brightness, and smart timer features.

4.2. Color and Scene Modes

The Torchlet RGB Floor Lamp offers extensive customization for lighting:

- **16 Million DIY Colors:** Use the mobile app to select from a vast spectrum of colors to create your ideal ambiance.
- **Static and Dynamic Scene Modes:** Choose from a variety of pre-set scenes or create your own to match different moods and occasions.
- **Music Rhythm Mode:** The lamp can sync with music or other sounds, creating dynamic lighting effects that respond to the rhythm.

DESIGN OF THE FUTURE



Stable Base



Music function



Remote Control



Memory Function

Height:
58 Inch

Diameter:
9 Inch



Figure 4.3: Create your own DIY light shows with 16 million colors.

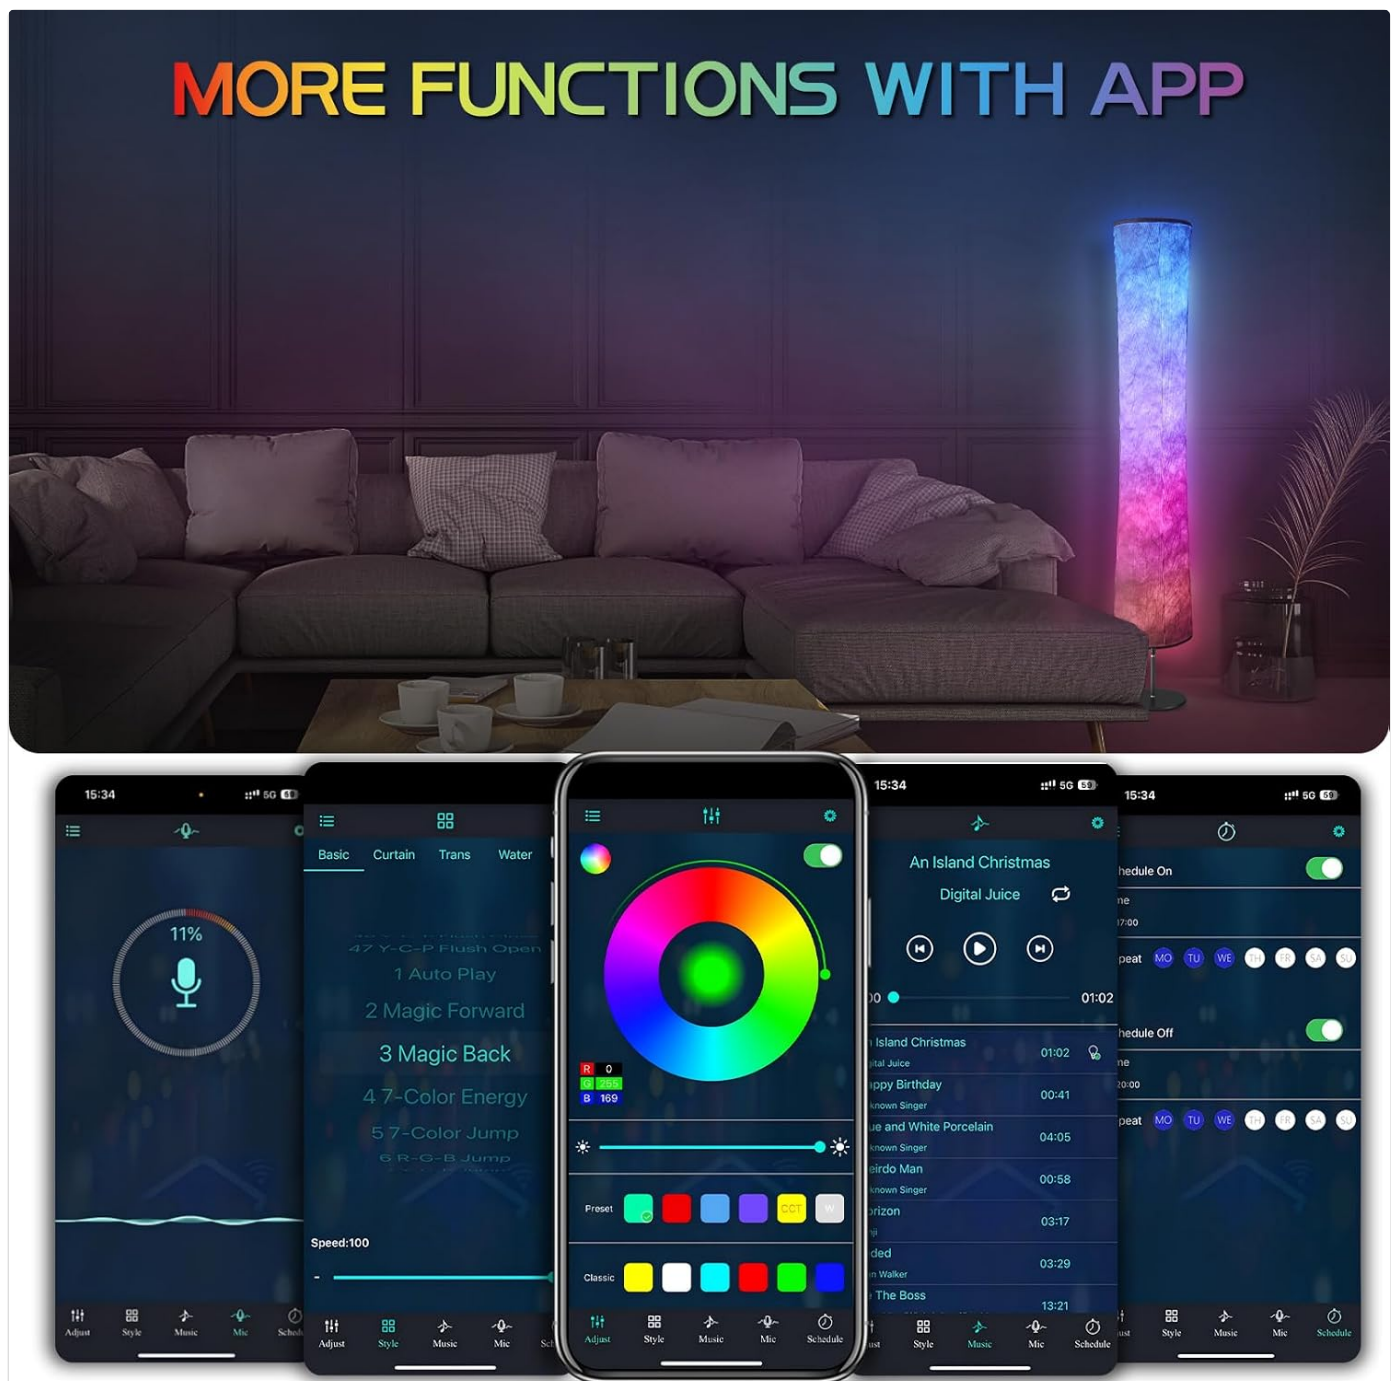


Figure 4.4: Experience the Music Rhythm Mode for immersive lighting.

ADJUST THE COLOR ACCORDING TO YOUR NEEDS



Figure 4.5: Explore more functions and customization options with the mobile app.



Figure 4.6: Adjust the color according to your specific needs and preferences.

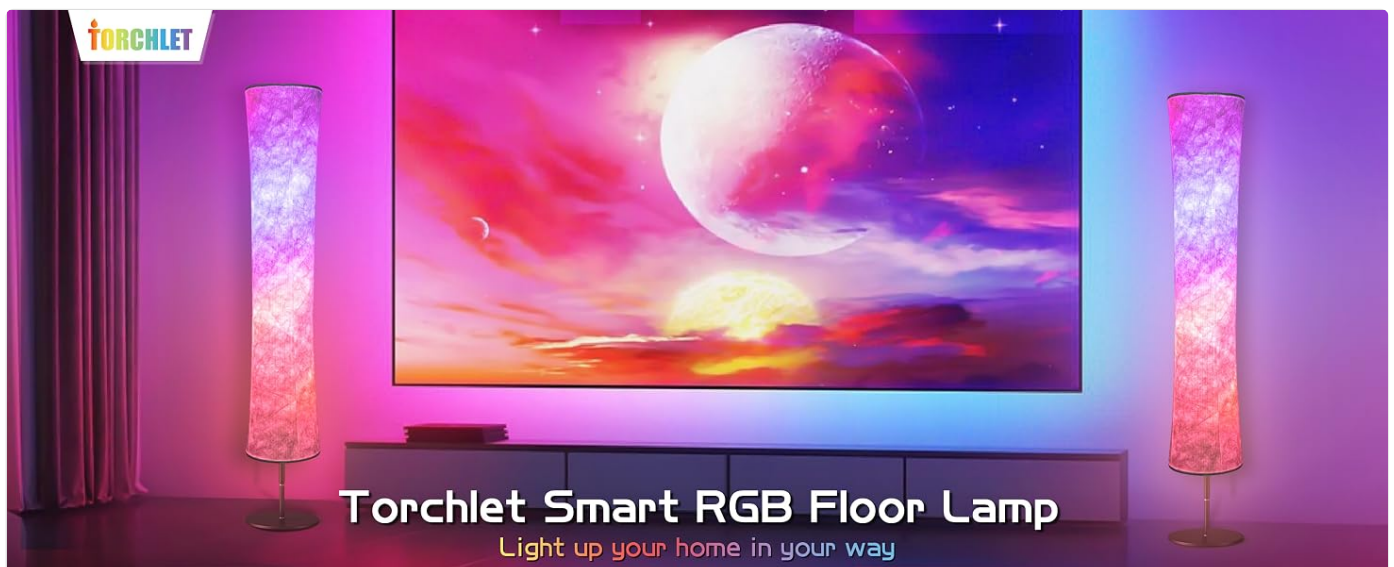


Figure 4.7: The lamp offers adjustable color temperature, brightness, and RGB lighting settings.



Figure 4.8: Adapt the lighting for various festival scenes and special occasions.



Figure 4.9: Enjoy dynamic rhythm dancing lights that respond to sound.



Figure 4.10: Access over 16 million colors and 213+ scene modes for ultimate customization.



Figure 4.11: Easily customize your room's lighting to suit any mood or activity.

4.3. Smart Timer

Utilize the "duoCo StripX" app to set schedules and timers for your lamp. This allows you to automatically turn the lamp on or off at specific times, enhancing convenience and energy efficiency.

5. MAINTENANCE

- **Cleaning:** To clean the fabric shade, gently wipe it with a soft, dry cloth. For the base and pole, use a slightly damp cloth and dry immediately. Do not use abrasive cleaners or solvents.
- **Bulb Replacement:** The LED bulb is integrated and not user-replaceable. If the light source fails, please contact Torchlet customer support.
- **Storage:** If storing the lamp for an extended period, disassemble it and store all components in their original packaging in a cool, dry place.

6. TROUBLESHOOTING

Refer to the table below for common issues and their solutions:

Issue	Possible Cause	Solution
Lamp does not turn on.	No power, loose connection, remote battery dead.	Check power outlet, ensure all connections are secure. Replace remote battery.
Remote control not responding.	Battery low/dead, remote out of range, interference.	Replace remote battery. Ensure remote is pointed at the lamp's receiver and within range. Reduce interference from other devices.
App cannot connect to the lamp.	Bluetooth not enabled, incorrect pairing mode, app issue.	Ensure Bluetooth is enabled on your device. Follow app instructions for pairing mode. Restart the app or your device.
Colors are not accurate or lamp flashes.	Firmware issue, internal component malfunction.	Try resetting the lamp by unplugging it for a few minutes. If the issue persists, contact customer support.

Issue	Possible Cause	Solution
Fabric shade appears damaged or torn.	Manufacturing defect, damage during assembly/handling.	Inspect for damage upon arrival. If damaged, contact customer support for replacement.

If you encounter an issue not listed here or if the suggested solutions do not resolve the problem, please contact Torchlet customer support for further assistance.

7. SPECIFICATIONS

Feature	Detail
Brand	Torchlet
Model Number	FL123
Product Dimensions	9.1"D x 9.1"W x 61"H
Item Weight	3.3 Pounds
Lamp Type	Floor Lamp
Shade Material	Fabric
Shade Color	White
Light Source Type	LED
Wattage	11 Watt-hours
Brightness	1500 Lumen
Control Method	App, Remote, Base Buttons
Connectivity Technology	Bluetooth
Special Features	Color Changing, Dimmable, Adjustable Color Temperature, Music Sync
Power Source	AC
Assembly Required	Yes
Indoor/Outdoor Usage	Indoor

8. WARRANTY AND SUPPORT

Torchlet products are designed for quality and durability. For specific warranty information, please refer to the documentation included with your purchase or visit the official Torchlet website.

For additional support, frequently asked questions, or to download the official user guide in PDF format, please visit the following link:

[Download Official User Guide \(PDF\)](#)

You can also visit the [Torchlet Store on Amazon](#) for more product information and customer service contacts.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question