

Etekcit EKS-C302-KUS

Etekcit EKS-C302-KUS Digital Food Kitchen Scale Instruction Manual

Model: EKS-C302-KUS | Brand: Etekcit

1. INTRODUCTION

Thank you for choosing the Etekcit EKS-C302-KUS Digital Food Kitchen Scale. This manual provides essential information for the safe and efficient operation of your new scale. Please read all instructions before use and retain this manual for future reference.

Package Contents:

- 1 x Digital Kitchen Scale
- 3 x AAA 1.5V DC Batteries (Pre-Installed)
- 1 x Quick Start Guide

2. SETUP

Battery Installation:

The Etekcit EKS-C302-KUS scale comes with 3 AAA 1.5V DC batteries pre-installed. If you need to replace them:

1. Locate the battery compartment on the underside of the scale.
2. Open the battery compartment cover.
3. Insert 3 new AAA batteries, ensuring correct polarity (+/-).
4. Close the battery compartment cover securely.

Warning: Do not mix new and used batteries to power the device.



Figure 2.1: Battery compartment for AAA batteries. These batteries are easy to replace.

Placement:

Place the scale on a hard, flat, and stable surface to ensure accurate measurements. Avoid soft or uneven surfaces.

3. OPERATING INSTRUCTIONS

Power On/Off:

- To turn on: Press the **Z/T ON/OFF** button. The display will show "18888" then "0 g" (or the last used unit).
- To turn off: Press and hold the **Z/T ON/OFF** button for 2 seconds. The scale also features an automatic shut-off after 3 minutes of inactivity to conserve battery life.

Unit Conversion:

To change the unit of measurement (g, oz, lb:oz, fl'oz (water/milk), mL (water/milk)), press the **UNIT** button. The display will cycle through the available units.

5 Measuring Units

Weigh either solid ingredients or liquid ingredients such as water and milk.



Figure 3.1: The scale supports 5 measuring units: ounces, pounds:ounces, fluid ounces (for water/milk), grams, and milliliters (for water/milk).

Tare Function (Zero Out Weight):

The tare function allows you to subtract the weight of a container or previously added ingredients, so you can measure subsequent items accurately.

1. Place an empty container on the scale. The display will show its weight.
2. Press the **Z/T ON/OFF** button. The display will reset to "0 g" (or the current unit).
3. Add the item you wish to weigh into the container. The display will show only the weight of the added item.

Zero Out the Weight

Remove the weight of any container with the Zero/Tare Function.



Figure 3.2: Step-by-step guide to using the Zero/Tare function to measure ingredients accurately in a container.

Accurate Weighing:

The scale measures in precise 1-gram increments, with a minimum measurement of 2 grams and a maximum capacity of 5000 grams (11 lbs).

Accuracy Down to the Gram

Measure items in increments of 1 gram for increased accuracy.

Max Measurement	5000 g
Min Measurement	2 g



Figure 3.3: The scale provides accurate measurements down to the gram, with a maximum capacity of 5000g and minimum of 2g.

4. MAINTENANCE

Cleaning:

The scale features a sleek acrylic surface, making it easy to clean. Wipe the surface with a damp cloth. Do not immerse the scale in water or use abrasive cleaners.

Easy to Clean



Figure 4.1: The sleek surface of the scale allows for quick and easy cleaning.

5. TROUBLESHOOTING

Common Issues:

- **Inaccurate Readings:** Ensure the scale is placed on a hard, flat, and stable surface. Check battery levels.
- **Display Not Turning On:** Verify that the batteries are correctly installed and have sufficient charge. Replace batteries if necessary.
- **Scale Not Responding:** Remove and reinsert batteries to perform a soft reset.

6. SPECIFICATIONS

Feature	Detail
Brand	Etekcity

Model Number	EKS-C302-KUS
Color	Matte Black
Weight Capacity	176 oz / 5000 g / 11 lbs
Measurement Increments	1 g
Minimum Measurement	2 g
Units	g / oz / lb:oz / ml (Milk & Water)
Auto-Off	3 Minutes
Power	3 x AAA 1.5V DC batteries (included)
Product Dimensions	8.0 x 6.1 x 0.7 inches / 203 x 155.5 x 17.5 mm
Material	Acrylic, Acrylonitrile Butadiene Styrene (ABS Platform, Sleek Acrylic Surface)
Display Type	VA



Figure 6.1: The large platform allows for measuring items without obstructing the display.

Upgraded Materials

The Digital Kitchen Scale features an upgraded ABS platform and a sleek acrylic surface.



Figure 6.2: The scale features an upgraded ABS platform and a sleek acrylic surface for durability and ease of use.

7. WARRANTY AND SUPPORT

For warranty information or customer support, please refer to the Quick Start Guide included in your package or visit the official Etekcity website. Keep your purchase receipt for warranty claims.