



Manuals.plus /

- › Ingco /
- › INGCO 1200W High Pressure Washer (Model RM) Instruction Manual

Ingco RM

INGCO 1200W High Pressure Washer (Model RM) Instruction Manual

Model: RM
Brand: Ingco

1. INTRODUCTION

This manual provides essential information for the safe and effective operation, maintenance, and troubleshooting of your INGCO 1200W High Pressure Washer, Model RM. Please read this manual thoroughly before using the product.

2. SAFETY INFORMATION

Always follow basic safety precautions to reduce the risk of fire, electric shock, and personal injury. Keep the work area clean and well-lit. Do not operate the pressure washer in explosive atmospheres. Ensure all connections are secure before operation. Wear appropriate personal protective equipment, including eye protection. Never direct the spray at people, animals, or electrical equipment. Disconnect power before performing any maintenance.

3. PACKAGE CONTENTS

Verify that all items listed below are present in the package:

- INGCO Pressure Washer Unit
- 1 set Unique Design Spray Gun
- 3m High Pressure Hose



Image: INGCO 1200W High Pressure Washer main unit, high-pressure hose, and spray gun.

4. PRODUCT OVERVIEW

The INGCO 1200W High Pressure Washer is designed for efficient cleaning tasks. Key features include:

- **Powerful Motor:** 1200 watts for effective cleaning performance.
- **High Pressure Output:** Up to 1300 PSI (90 Bar) for tackling stubborn dirt.
- **Efficient Flow Rate:** 5.5 liters per minute for thorough cleaning.
- **Auto Stop System:** Automatically shuts off the pump when the trigger is not engaged, conserving energy and extending pump life.
- **Lightweight Design:** Easy to transport and maneuver for various cleaning applications.
- **Included Accessories:** Comes with a unique design spray gun and a 3-meter high-pressure hose.



Image: Front view of the INGCO pressure washer unit, showing the power switch and water inlet.



Image: The 3-meter high-pressure hose and the unique design spray gun.

5. SETUP

1. **Unpack:** Carefully remove all components from the packaging.
2. **Connect High-Pressure Hose:** Attach one end of the high-pressure hose to the pressure washer unit and the other end to the spray gun. Ensure connections are tight.
3. **Connect Water Supply:** Connect a garden hose (not included) to the water inlet of the pressure washer. Ensure the water supply is clean and free of debris.
4. **Connect Power:** Plug the power cord into a suitable grounded electrical outlet.
5. **Purge Air:** Before turning on the power, turn on the water supply and squeeze the spray gun trigger to allow water to flow through the system, purging any air. Continue until a steady stream of water emerges from the nozzle.

6. OPERATING INSTRUCTIONS

1. **Start the Washer:** After purging air, turn the power switch to the "ON" position. The motor will start.
2. **Begin Cleaning:** Aim the spray gun at the surface to be cleaned, maintaining a safe distance. Squeeze the trigger to start the high-pressure spray.
3. **Adjust Spray:** The spray gun may allow for adjustment of the spray pattern (e.g., from a narrow jet to a wider fan). Refer to the spray gun's specific instructions for adjustment.
4. **Auto Stop Feature:** When the trigger is released, the auto-stop system will temporarily shut off the pump, reducing noise and extending motor life. The pump will restart when the trigger is squeezed again.
5. **Shut Down:** To stop operation, release the trigger, turn the power switch to "OFF," and turn off the water supply. Squeeze the trigger one last time to release any remaining pressure in the system.



Image: An individual using the INGCO pressure washer to clean a paved patio surface.



Image: An individual using the INGCO pressure washer to clean a car wheel and tire.

7. MAINTENANCE

- **Cleaning:** After each use, wipe down the exterior of the pressure washer with a damp cloth.
- **Nozzle Cleaning:** If the nozzle becomes clogged, use the provided nozzle cleaning tool (if applicable) or a thin wire to clear any obstructions.
- **Water Filter:** Regularly check and clean the water inlet filter to prevent debris from entering the pump.
- **Storage:** Store the pressure washer in a dry, frost-free environment. Disconnect all hoses and drain any remaining water from the pump and hoses to prevent damage from freezing.

8. TROUBLESHOOTING

This section addresses common issues you might encounter. For problems not listed here, contact customer support.

| Problem | Possible Cause | Solution |
|----------------------|--|--|
| Motor does not start | No power supply; Power switch off; Thermal overload activated. | Check power connection and outlet; Turn power switch ON; Allow motor to cool down. |
| Low pressure | Insufficient water supply; Clogged nozzle; Air in pump. | Ensure full water flow; Clean nozzle; Purge air from system (see Setup). |
| Water leaks | Loose connections; Damaged O-rings. | Tighten all hose connections; Inspect and replace damaged O-rings. |

9. SPECIFICATIONS

| Specification | Value |
|--------------------|----------------------------|
| Brand | Ingco |
| Model Number | RM |
| Power Source | Corded Electric |
| Power (Motor) | 1200 Watts |
| Maximum Pressure | 1300 PSI (90 Bar) |
| Maximum Flow Rate | 5.5 Liters Per Minute |
| Hose Length | 3 Metres |
| Item Weight | 4.5 Kilograms |
| Product Dimensions | 15L x 10W x 5H Centimeters |
| Color | Multicolor |
| Specification Met | CSA |

10. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the documentation included with your purchase or contact INGCO customer service directly. Keep your purchase receipt as proof of purchase.



Image: INGCO brand logo.