

Haam Electric HMFL12D7S-22

Haam Electric HMFL12D7S-22 Front Load Washer and Dryer User Manual

Model: HMFL12D7S-22 | Brand: Haam Electric

1. INTRODUCTION

Thank you for choosing the Haam Electric HMFL12D7S-22 Front Load Washer and Dryer. This appliance combines washing and drying capabilities in a single unit, designed for efficient and convenient laundry care. Featuring an inverter motor, 12 kg capacity, and multiple wash programs, this machine is built with high-quality ABS and stainless steel materials for durability and performance. Please read this manual thoroughly before operating the appliance to ensure safe and optimal use.

2. SAFETY INSTRUCTIONS

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, or injury to persons.

- Read all instructions before using the appliance.
- Ensure the appliance is properly grounded.
- Do not wash or dry articles that have been previously cleaned in, washed in, soaked in, or spotted with gasoline, dry-cleaning solvents, or other flammable or explosive substances.
- Do not allow children to play on or in the appliance. Close supervision is necessary when the appliance is used near children.
- Before the appliance is removed from service or discarded, remove the door to the washing/drying compartment.
- Do not reach into the appliance if the tub or agitator is moving.
- Do not install or store this appliance where it will be exposed to the weather.
- Do not tamper with controls.
- Do not repair or replace any part of the appliance or attempt any servicing unless specifically recommended in this manual.
- Always disconnect the appliance from the power supply before cleaning or performing maintenance.

This appliance features a **Child Lock** function to prevent accidental operation by children.

3. PRODUCT OVERVIEW

The Haam Electric HMFL12D7S-22 is a front-loading washer and dryer combination unit. Key components include the main control panel, detergent dispenser, and the stainless steel drum.



Figure 3.1: Front view of the Haam Electric HMFL12D7S-22 Washer and Dryer. This image displays the appliance's silver finish, the large front-loading door, and the control panel located at the top.



Figure 3.2: Interior view of the stainless steel drum. The drum features a textured surface designed for effective washing and drying, ensuring durability and hygiene.

Control Panel Features:

- **LED Display:** Provides clear information on cycle status, time remaining, and selected options.
- **Program Selector Dial:** Used to choose from 14 available wash and dry programs.
- **Function Buttons:** For selecting options such as water temperature control, spin speed, delay start, and child lock.

4. SETUP AND INSTALLATION

Proper installation is crucial for the safe and efficient operation of your appliance. It is recommended to have the appliance installed by a qualified technician.

4.1 Unpacking

- Remove all packaging materials, including the transport bolts at the rear of the machine. Keep these bolts for future transport if needed.
- Inspect the appliance for any damage incurred during transit.

4.2 Location

- Place the appliance on a firm, level floor.
- Ensure adequate space around the machine for ventilation and maintenance.
- Avoid direct sunlight or extreme temperatures.

4.3 Connections

- **Water Supply:** Connect the inlet hose to a cold water tap with a 3/4-inch thread. Ensure connections are tight to prevent leaks.
- **Drainage:** Position the drain hose into a standpipe or secure it over the edge of a sink, ensuring it is not kinked.
- **Electrical Connection:** Plug the power cord into a grounded 240V electrical outlet. Do not use extension cords.

5. OPERATING INSTRUCTIONS

This section guides you through the basic operation of your washer and dryer.

5.1 Before Each Wash/Dry Cycle

- Sort laundry by fabric type, color, and degree of soiling.
- Check pockets for small items that could damage the machine.
- Load laundry into the drum, ensuring not to overload (maximum 12 kg for washing).
- Add appropriate detergent and fabric softener to the dispenser.

5.2 Starting a Cycle

1. Close the loading door securely.
2. Turn the program selector dial to choose one of the 14 available programs (e.g., Cotton, Synthetics, Delicates, 45-minute daily wash program).
3. Adjust additional settings using the function buttons, such as water temperature control, rotating speed control (up to 1400 RPM), or delay start.
4. Press the Start/Pause button to begin the cycle. The LED display will show the remaining time.

5.3 Special Features

- **Child Lock:** Activate this feature to prevent accidental changes to settings during operation. Refer to the control panel diagram for activation instructions.
- **Delay Start:** Program the machine to start a cycle at a later time.
- **Inverter Motor:** Provides quiet, efficient, and durable operation for both washing and drying.
- **Auto Dry:** Select this cycle option for automatic drying after washing.

6. MAINTENANCE AND CARE

Regular maintenance ensures the longevity and optimal performance of your appliance.

6.1 Cleaning the Exterior

- Wipe the exterior surfaces with a soft, damp cloth. Do not use abrasive cleaners.

6.2 Cleaning the Detergent Dispenser

- Remove the dispenser drawer and rinse it under running water to remove any detergent residue.
- Clean the dispenser housing with a brush if necessary.

6.3 Cleaning the Drum

- Run a maintenance wash cycle (e.g., a hot wash with no laundry and a descaling agent) periodically to prevent odor and residue buildup.

6.4 Cleaning the Drain Filter

- Locate the drain filter, usually at the bottom front of the machine.
- Place a shallow container underneath to catch any water.
- Unscrew and remove the filter, clean any lint or debris, then reinsert and tighten.

7. TROUBLESHOOTING

Before contacting customer service, please refer to the following table for common issues and their solutions.

Problem	Possible Cause	Solution
Machine does not start	Power cord not plugged in; door not closed properly; child lock activated.	Check power connection; ensure door is latched; deactivate child lock.
Water not filling	Water tap closed; inlet hose kinked or blocked.	Open water tap; straighten hose; clean filter in inlet hose.
Water not draining	Drain hose kinked or blocked; drain filter clogged.	Straighten drain hose; clean drain filter.
Excessive vibration/noise	Appliance not level; transport bolts not removed; uneven load.	Adjust leveling feet; ensure transport bolts are removed; redistribute laundry.

8. SPECIFICATIONS

Detailed technical specifications for the Haam Electric HMFL12D7S-22.

Feature	Specification
Model Number	HMFL12D7S-22
Brand	Haam Electric
Capacity (Washing)	12 kg
Access Location	Front Load

Feature	Specification
Motor Type	Inverter Motor
Drum Material	Stainless Steel
Maximum Rotational Speed	1400 RPM
Number of Programs	14
Special Features	Child Lock, LED Display, Delay Start, Water Temperature Control, Rotating Speed Control
Voltage	240 Volts
Annual Energy Consumption	208 Kilowatt Hours
Noise Level	25 Decibels
Product Dimensions (L x W x H)	66 x 59.5 x 84.5 cm
Item Weight	33 kg
Material Type	ABS, Stainless Steel
Color	Silver

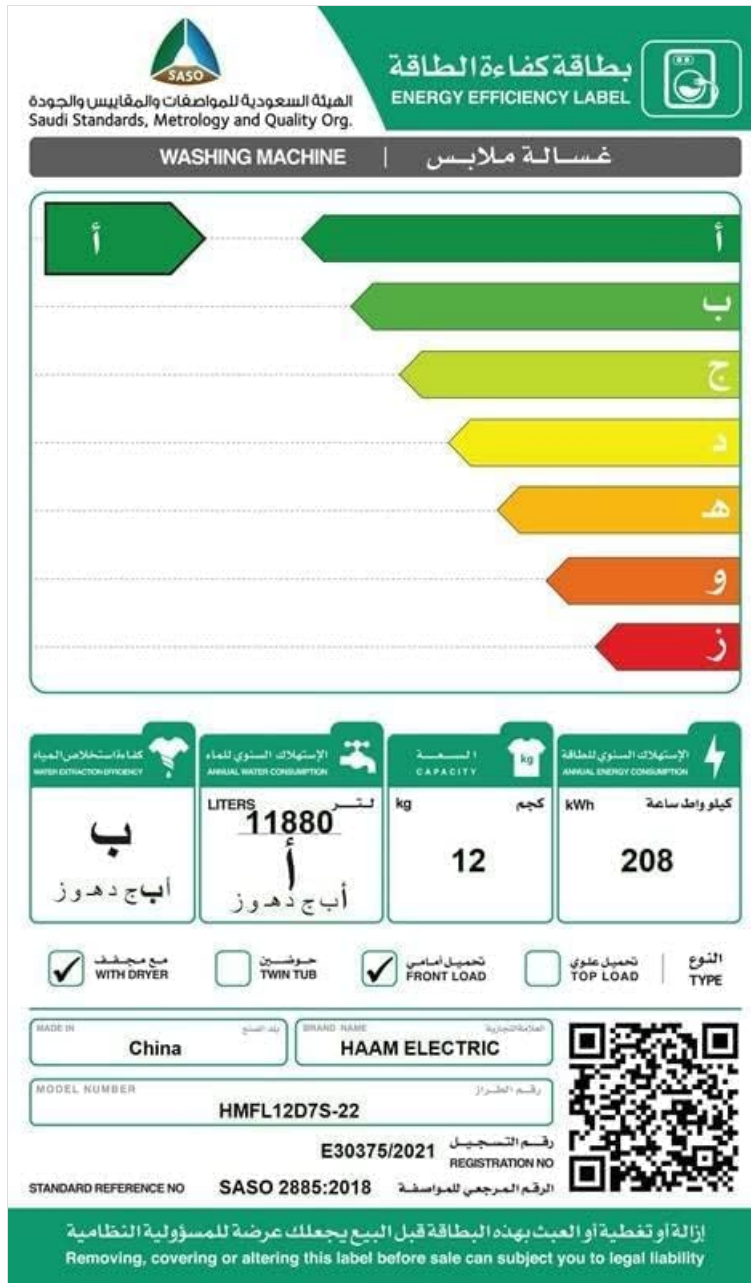


Figure 8.1: Energy Efficiency Label for the Haam Electric HMFL12D7S-22. This label provides details on annual energy consumption (11880 liters), water consumption (208 kWh), and overall energy efficiency rating. For verification, visit: [sfs.gov.sa Certificate Authentication](https://sfs.gov.sa/CertificateAuthentication)

9. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation provided with your purchase or contact Haam Electric customer service directly. Ensure you have your model number (HMFL12D7S-22) and purchase date available when seeking support.