

[manuals.plus](#) /

› [ZZB](#) /

› ZZB YQ10S Android 14 Tablet User Manual

ZZB YQ10S

ZZB YQ10S Android 14 Tablet User Manual

Model: YQ10S | Brand: ZZB



1. INTRODUCTION

This manual provides essential information for the proper use and maintenance of your ZZB YQ10S Android 14 Tablet. Please read these instructions carefully before operating your device to ensure optimal performance and longevity.



2. PACKAGE CONTENTS

Verify that all items are present in your product packaging:

- ZZB YQ10S Android 14 Tablet
- Type-C Cable
- User Manual (this document)

3. PRODUCT FEATURES

3.1 Display

The tablet features a 10.1-inch HD touch display with a resolution of 1280x800 pixels and a 178-degree viewing angle. This IPS screen technology provides clear and vibrant visuals for various applications.



Image 3.1: The tablet's 10.1-inch HD IPS display with 1280x800 resolution.

3.2 Performance and Storage

Equipped with the Android 14 operating system and a quad-core processor, the tablet includes 8GB of RAM (with 6GB of expandable memory) for efficient multitasking. It offers 64GB of internal storage, expandable up to 1TB via a microSD card slot.

3.3 Cameras

The tablet features a 2MP front-facing camera for video calls and selfies, and an 8MP rear-facing camera for capturing photos and videos.

Real multi-window play with apps

- You implement multi-window capabilities on mobile devices
- Supports multiple applications to run at the same time.
You can watch a movie and chat at the same time
- Android Bar system tool, you can unlock your favorite apps by yourself



Image 3.2: Overview of the tablet's front (2MP) and rear (8MP) cameras.

3.4 Battery

A 6000mAh battery provides power for extended use, supporting up to 12 hours of web browsing or 6 hours of video playback.

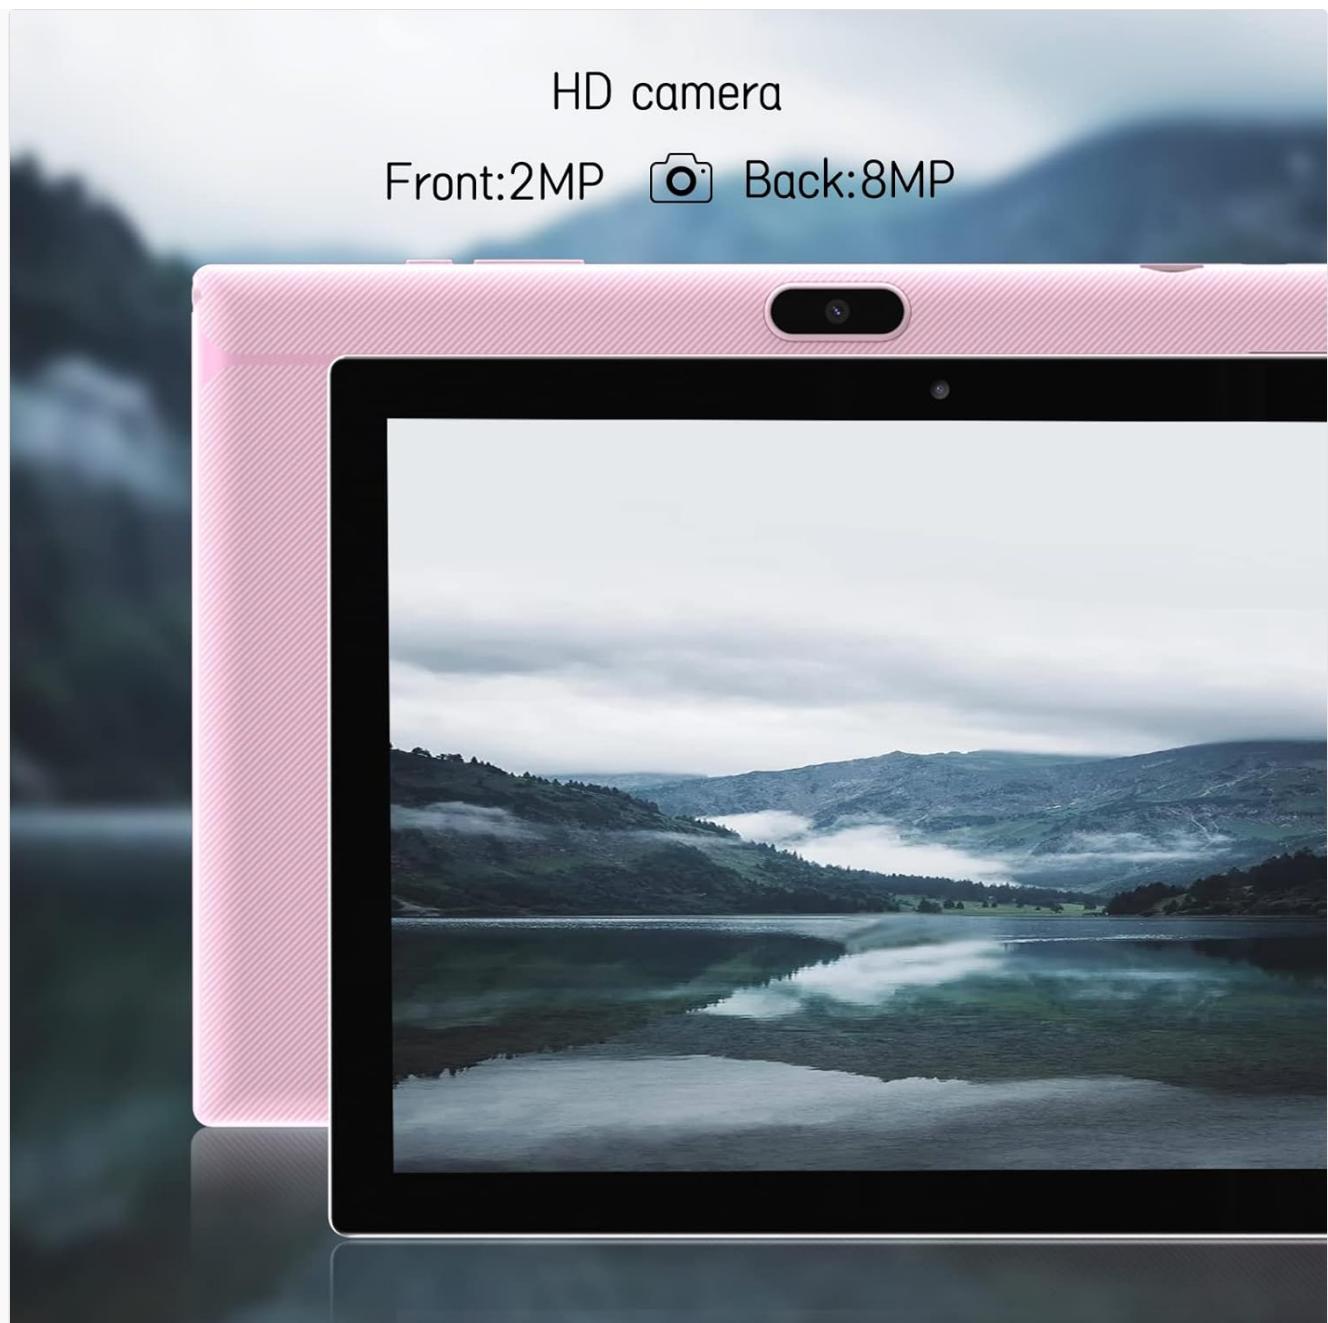


Image 3.3: Visual representation of the tablet's 6000mAh battery capacity.

3.5 Connectivity

The device supports WiFi6 for fast internet access and Bluetooth for connecting to wireless accessories.

4. SETUP

4.1 Initial Charging

Before first use, fully charge the tablet using the provided Type-C cable and a compatible power adapter (not included). The battery indicator on the screen will show charging status.

4.2 Powering On/Off

- To power on: Press and hold the power button located on the side of the tablet until the screen illuminates.
- To power off: Press and hold the power button, then select 'Power off' from the on-screen options.
- To restart: Press and hold the power button, then select 'Restart' from the on-screen options.

4.3 Initial Configuration

Upon first startup, follow the on-screen prompts to:

1. Select your preferred language.
2. Connect to a Wi-Fi network.
3. Sign in with your Google account or create a new one.
4. Review and accept terms and conditions.

5. OPERATING INSTRUCTIONS

5.1 Basic Navigation

Navigate the tablet using touch gestures:

- **Tap:** Select an item or open an application.
- **Swipe:** Scroll through pages or lists.
- **Pinch:** Zoom in or out on images and web pages.
- **Long Press:** Access contextual menus or move icons.

5.2 Connecting to Wi-Fi

1. Go to **Settings > Network & internet > Wi-Fi**.
2. Toggle Wi-Fi on.
3. Select your desired network from the list and enter the password if prompted.

5.3 Bluetooth Pairing

1. Go to **Settings > Connected devices > Bluetooth**.
2. Toggle Bluetooth on.
3. Ensure your Bluetooth device is in pairing mode.
4. Select the device from the 'Available devices' list to pair.

5.4 Installing Applications

Applications can be downloaded and installed from the Google Play Store. Open the Play Store app, search for your desired application, and follow the installation prompts.

5.5 Multi-Window Functionality

The Android 14 operating system supports multi-window capabilities, allowing you to run multiple applications simultaneously. This enables activities such as watching a video while chatting.

ENJOY THE SOUNDS OF NATURE

Let you listen to music and watch movies can enjoy high-quality audio-visual

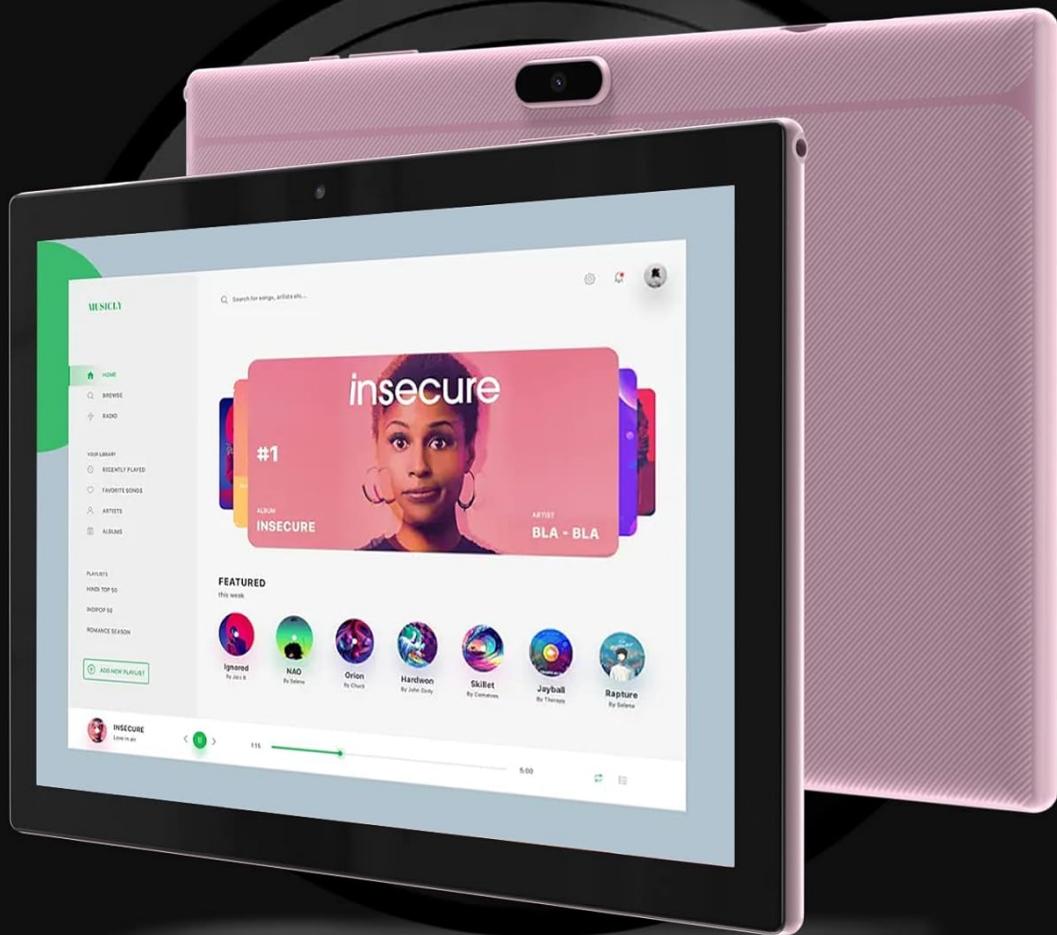


Image 5.1: Example of multi-window functionality on the tablet.

6. MAINTENANCE

6.1 Cleaning

Use a soft, lint-free cloth to clean the screen and body of the tablet. Avoid using harsh chemicals or abrasive materials that could damage the surfaces.

6.2 Battery Care

- Avoid extreme temperatures, which can degrade battery life.
- Do not leave the tablet fully discharged for extended periods.
- Use only the provided or certified charging accessories.

6.3 Software Updates

Regularly check for and install software updates to ensure your tablet has the latest features, security patches, and performance improvements. Go to **Settings > System > System update**.

7. TROUBLESHOOTING

If you encounter issues with your tablet, refer to the following common solutions:

7.1 Tablet Not Powering On or Charging

- Ensure the tablet has been charged for at least 30 minutes using the provided Type-C cable and a functional power adapter.
- Try a different power outlet or USB port.
- Perform a forced restart by holding the power button for 10-15 seconds.

7.2 Slow Performance

- Close unnecessary background applications.
- Clear cache data for frequently used apps (**Settings > Apps > [App Name] > Storage & cache > Clear cache**).
- Ensure sufficient free storage space.
- Restart the tablet.

7.3 Wi-Fi Connectivity Issues

- Ensure Wi-Fi is enabled on the tablet.
- Restart your Wi-Fi router.
- Forget the network and reconnect (**Settings > Network & internet > Wi-Fi > [Network Name] > Forget**).

8. SPECIFICATIONS

Feature	Specification
Model Name	YQ10S
Operating System	Android 14
Screen Size	10.1 Inches
Screen Resolution	1280x800 (HD IPS)
Processor	Quad-Core, 1.5 GHz
RAM	8GB (including 6GB expandable)
Internal Storage	64 GB
Expandable Storage	Up to 1TB via microSD card
Rear Camera	8 MP
Front Camera	2 MP
Battery Capacity	6000mAh
Average Battery Life	6-12 Hours (usage dependent)

Wireless Type	WiFi6 (802.11bgn)
Bluetooth	Supported
Dimensions (LxWxH)	10 x 6 x 0.35 inches
Item Weight	0.085 ounces
Color	Pink

9. WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the documentation provided with your purchase or contact ZZB customer service directly. Keep your proof of purchase for warranty claims.

© 2025 ZZB. All rights reserved.

Related Documents - YQ10S

 <p>ユーザマニュアル 10.1インチタブレットPC YQ10S</p>	<p>SCIENTIA YQ10S 10.1-inch Tablet PC User Manual</p> <p>Comprehensive user manual for the SCIENTIA YQ10S 10.1-inch Tablet PC, detailing product features, setup, connectivity, and specifications. Includes guidance on charging, Wi-Fi setup, computer connection, and FCC compliance.</p>
 <p>ユーザマニュアル 10.1インチタブレットPC YQ10S</p>	<p>YQ10S 10.1-inch Tablet PC User Manual</p> <p>Comprehensive user manual for the YQ10S 10.1-inch Tablet PC, covering setup, charging, connectivity, and specifications. Learn how to use your device effectively.</p>
 <p>ユーザマニュアル 10.1インチタブレットPC YQ10S</p>	<p>SCIENTIA YQ10S 10.1-inch Tablet PC User Manual</p> <p>User manual for the SCIENTIA YQ10S 10.1-inch Tablet PC, covering product overview, charging, Wi-Fi setup, computer connection, specifications, and compliance information.</p>



[SonarPen Compatible Devices List](#)

A comprehensive list of devices compatible with SonarPen, including Apple, Android, and Nintendo Switch devices. Find the right SonarPen model for your device.



[SonarPen Compatible Devices: A Comprehensive Guide](#)

Discover which Apple, Android, Windows, and Chromebook devices are compatible with the SonarPen stylus. This guide lists supported models across numerous brands, ensuring you find the perfect match for your digital drawing and note-taking needs.



[SonarPen Device Compatibility Guide - Apple, Android, Windows, Chromebook, Nintendo Switch](#)

Comprehensive guide to SonarPen compatibility across Apple iOS/iPadOS, Android OS, Windows 10/11, Chromebook, and Nintendo Switch devices. Learn about required adapters and calibration for optimal performance.