

[Manuals.plus](#) /

› [Satisfyer](#) /

› Satisfyer Rotator Plug 2+ Connect App Instruction Manual

Satisfyer 4003160

Satisfyer Rotator Plug 2+ Connect App Instruction Manual

Model: 4003160

INTRODUCTION

This manual provides essential information for the safe and effective use of your Satisfyer Rotator Plug 2+ Connect App. Please read these instructions carefully before first use and retain them for future reference.



Image: The Satisfyer Rotator Plug 2+ Connect App, showcasing its design and key features like app control, vibration, and rotation.

The Satisfyer Rotator Plug 2+ Connect App is designed for internal stimulation, featuring powerful vibrations and rotating pearl chains. It is made from skin-friendly silicone and is waterproof (IPX7), allowing for easy cleaning and use in various environments.

PRODUCT FEATURES

PRODUCT FEATURES



Image: A detailed diagram illustrating the various features of the Rotator Plug 2+ Connect App, including its shape, material, and control points.

- **Bulbous Shape and Rounded Tip:** Designed for comfortable insertion and stimulation.
- **Rotating Pearl Chains:** Provides unique internal sensations.
- **10 Vibration Programs:** Offers a variety of intensity and pattern options.
- **Connect App Compatibility:** Allows for advanced control and customization via the Satisfyer Connect App.
- **Skin-Friendly Silicone:** Ensures a safe and comfortable experience.
- **Waterproof (IPX7):** Suitable for use in water and easy to clean.
- **Rechargeable Battery:** Convenient and eco-friendly power source.
- **Wide Base:** For safe and easy removal.

SETUP

1. Charging the Device

Before first use, fully charge your Satisfyer Rotator Plug 2+ Connect App. Locate the magnetic charging contacts on the base of the device. Connect the included USB magnetic charging cable to these contacts and plug the USB end into a standard USB power adapter (not included) or a computer's USB port.



Image: The base of the device, indicating the magnetic charging points.

- A full charge typically takes approximately 2-3 hours.
- The LED indicator on the device will show charging status (e.g., blinking while charging, solid when fully charged). Refer to the quick start guide for specific LED behavior.

2. Connecting to the Satisfyer Connect App

The Satisfyer Connect App enhances your experience by offering remote control, custom vibration patterns, and more. The app is available for free on iOS and Android devices.



The advertisement features a woman's face in the background, looking upwards. In the foreground, three smartphones display the Satisfyer Connect App interface. The app's main screen shows various controls like 'PROGRAM PLAY', 'LIVE CONTROL', 'AMBIENT SOUND', 'MUSIC VOICE', and 'REMOTICA STORIES'. To the right, a grid of icons highlights key features: Chat Function, Vibration Creator, Remote Control, Playlist Stimulation, 100% Data Security, O-Booster, Free App, Ambient Stimulation, and Remotyca Stories. At the bottom, there are logos for CES Twice Picks Winner, CES Innovation Awards 2021, Bluetooth, and download links for the App Store and Google Play.

Image: The Satisfyer Connect App interface, demonstrating its features and control capabilities.

1. Download the "Satisfyer Connect" app from the Apple App Store or Google Play Store.
2. Ensure your device is charged and Bluetooth is enabled on your smartphone.
3. Turn on your Satisfyer Rotator Plug 2+ (refer to the Operating section for power instructions).
4. Open the Satisfyer Connect App and follow the on-screen instructions to pair your device. The app will guide you through the connection process.

Note: For optimal connectivity, ensure your device is within Bluetooth range of your smartphone.

OPERATING THE DEVICE

1. Basic On-Device Control

Your Satisfyer Rotator Plug 2+ has a control button, typically located on the base or side. Press and hold this button to power the device on or off. Short presses will cycle through the available vibration programs and rotation settings.

- **Power On/Off:** Press and hold the control button for 2-3 seconds.
- **Change Programs:** Short press the control button to switch between 10 vibration programs and rotation modes.

2. App Control

Once connected to the Satisfyer Connect App, you can access a wider range of functions and customize your experience.

- **Remote Control:** Control vibration intensity and rotation speed directly from your smartphone.
- **Vibration Creator:** Design and save your own unique vibration patterns.
- **Playlist Stimulation:** Sync vibrations to music or audio.
- **Ambient Stimulation:** Use your phone's microphone to translate sounds into vibrations.
- **Partner Control:** Share control of your device with a partner via the app (requires both users to have the app and be connected).



Image: An internal diagram illustrating the rotating pearl chains and vibration motors within the device.

MAINTENANCE

1. Cleaning

To ensure hygiene and prolong the lifespan of your device, clean it thoroughly before and after each use.

- Wash the device with warm water and a mild, toy-specific cleaner or antibacterial soap.
- Rinse thoroughly with clean water.
- Dry completely with a lint-free cloth or allow it to air dry.
- Do not use cleaners containing alcohol, petroleum, or acetone, as these can damage the silicone material.

The device is IPX7 waterproof, meaning it can be submerged in water up to 1 meter for 30 minutes. This allows for easy cleaning under running water.

2. Storage

Store your Satisfyer Rotator Plug 2+ in a clean, dry, and dust-free environment, away from direct sunlight and extreme temperatures. Keep it separate from other toys made of different materials to prevent material degradation.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Device does not turn on.	Low battery.	Charge the device fully using the magnetic USB cable.
Device does not vibrate/rotate.	Device is off or in standby mode.	Press and hold the control button to turn on. Check app settings if using app control.
App connection issues.	Bluetooth not enabled, device out of range, app not updated.	Ensure Bluetooth is on, device is close to phone, and app is updated. Restart both device and app.
Weak vibrations/rotation.	Low battery.	Recharge the device.

If you experience persistent issues not covered here, please contact Satisfyer customer support.

SPECIFICATIONS

- Model Number:** 4003160
- Material:** Skin-friendly Silicone
- Color:** Black
- Dimensions (L x W x H):** 5.04 x 2.17 x 1.5 inches
- Weight:** 6 ounces
- Waterproof Rating:** IPX7 (submersible up to 1 meter for 30 minutes)
- Battery:** 1 Lithium Polymer battery (rechargeable)
- Connectivity:** Bluetooth (for Satisfyer Connect App)
- Manufacturer:** Satisfyer

WARRANTY

Satisfyer offers a **15-year product protection** on this device, ensuring long-lasting satisfaction and quality. This warranty covers manufacturing defects under normal use. Please retain your proof of purchase for warranty claims.

For detailed warranty terms and conditions, please refer to the official Satisfyer website or contact customer support.

SUPPORT

For further assistance, product information, or technical support, please visit the official Satisfyer website or contact their customer service team.

Official Website: www.satisfyer.com

Amazon Store: [Visit the Satisfyer Store on Amazon](#)

Legal Disclaimer: The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by EIS GmbH is under license. Apple, the Apple logo and Apple Watch are trademarks of Apple Inc., The Android name and the logo are trademarks and property of Google LLC.