

[Manuals.plus](#) /

› [Finishing Touch Flawless](#) /

› Finishing Touch Flawless Underarm Hair Removal Electric Razor Device Instruction Manual

Finishing Touch Flawless 022600999898

Finishing Touch Flawless Underarm Hair Removal Electric Razor Device

Model: 022600999898

Brand: Finishing Touch Flawless

INTRODUCTION

The Finishing Touch Flawless Underarm Hair Removal Electric Razor Device is specifically designed for the sensitive underarm area, providing a gentle and effective hair removal solution. Its contoured design and unique blade technologies work to prevent nicks, bumps, and ingrown hairs, ensuring a smooth and comfortable experience. This cordless and rechargeable device is suitable for both wet and dry use, offering convenience for at-home or on-the-go grooming.



Image: The Finishing Touch Flawless Underarm device shown alongside its retail packaging.

Before



After

Image: A visual comparison showing an underarm before and after using the device, highlighting smooth results.

SAFETY INFORMATION

For external use only. If irritation occurs, discontinue use.

PACKAGE CONTENTS

- Finishing Touch Flawless Underarm Hair Removal Device
- Protective Safety Cap
- Cleaning Brush
- Charging Cable (USB)



★ **On-the-go design**

Protective safety cap

No replacement blades needed

Includes cleaning brush ★

Image: The device displayed with its protective cap and cleaning brush, illustrating its portable design.

SETUP

Charging the Device

The Finishing Touch Flawless Underarm device is rechargeable. Before first use, or when the battery is low, connect the charging cable to the device and a suitable USB power source. The LED indicator will show charging status. Allow sufficient time for a full charge to ensure optimal performance.

Precise & ready anytime



Built-in LED light



Rechargeable



Image: The device with its charging port visible, indicating its rechargeable nature and built-in LED light.

OPERATING INSTRUCTIONS

The device can be used on dry skin or in the shower for wet hair removal. For best results, ensure skin is clean and free of oils or lotions.



Image: Text indicating the device's suitability for both wet and dry use, and that no shaving cream is needed.

How to Use:

1. **Turn On:** Slide the power switch to the "ON" position. The built-in LED light will illuminate, helping to reveal fine hairs.
2. **Positioning:** Gently press the device flat against the underarm area. The contoured head is designed to follow the natural curves of your body.
3. **Hair Removal:** Use short, gentle strokes to remove hair. Move the device in small circular motions or against the direction of hair growth for optimal results. Avoid applying excessive pressure.
4. **Power Off & Clean:** After use, slide the power switch to the "OFF" position. Clean the head with the provided cleaning brush and rinse under running water as instructed in the Maintenance section.

1 Turn on



2 Gently press flat against underarm



3 Use short strokes to remove hair



4 Power off; clean head with brush then rinse



Image: A visual four-step guide demonstrating the proper technique for using the device, from turning it on to cleaning.

Remove underarm hair instantly & painlessly



Image: A woman demonstrating the use of the device on her underarm, highlighting its ease of use.

MAINTENANCE AND CLEANING

Regular cleaning ensures the longevity and optimal performance of your device.

Cleaning the Shaver Head:

- Ensure the device is turned OFF before cleaning.
- Gently twist and pull the shaver head to remove it from the main body.
- Use the provided cleaning brush to remove any trapped hairs from the blades and the interior of the shaver head.
- Rinse the shaver head under running water. Ensure all hair debris is washed away. Do not submerge the main body of the device in water.
- Allow the shaver head to air dry completely before reattaching it to the device.
- Periodically wipe the main body of the device with a soft, damp cloth.

Storage:

Store the device in a cool, dry place, away from direct sunlight and extreme temperatures. Always replace the protective safety cap when not in use to protect the shaver head.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Device not turning on.	Battery is low or depleted.	Charge the device fully using the provided charging cable.
Poor hair removal performance.	Shaver head is clogged with hair or debris. Blades may be dull.	Clean the shaver head thoroughly as per maintenance instructions. Ensure the device is used with gentle, short strokes. If performance does not improve, contact customer support.
Skin irritation after use.	Excessive pressure applied. Skin not properly prepared. Individual skin sensitivity.	Use gentle pressure. Ensure skin is clean and dry (or wet, depending on preference) before use. If irritation persists, discontinue use and consult a dermatologist.

SPECIFICATIONS

Model Number: 022600999898

UPC: 022600999898

Power Source: Battery Powered (1 Lithium Ion battery included)

Special Feature: Cordless, Wet/Dry Use, Built-in LED Light

Manufacturer: Church & Dwight

Package Dimensions: 9.92 x 4.29 x 1.73 inches

Item Weight: 8.15 ounces

WARRANTY AND SUPPORT

For warranty information or product support, please visit the official Finishing Touch Flawless website or contact their customer service department. Keep your purchase receipt as proof of purchase.

You can find more information and contact details on the [Finishing Touch Flawless Store on Amazon](#).