

[Manuals.plus](#) /

› [TOMY](#) /

› TOMY Toomies Peppa Pig Boat Adventure Bath Toy Set Instruction Manual

TOMY E73453

TOMY Toomies Peppa Pig Boat Adventure Bath Toy Set Instruction Manual

Model: E73453

[Introduction](#)

[What's
Included](#)

[Setup](#)

[Operating Instructions](#)

[Maintenance](#)

[Troubleshooting](#)

[Specifications](#)

[Warranty & Support](#)

1. INTRODUCTION

The TOMY Toomies Peppa Pig Boat Adventure Bath Toy Set is designed to provide engaging water play for toddlers aged 18 months and up. This set encourages imaginative play and helps develop fine motor skills through various interactive features. It includes two unique boats and five Peppa Pig characters, all designed for fun in the bathtub or pool without requiring batteries.



Figure 1: Complete Peppa Pig Boat Adventure Bath Toy Set.

2. WHAT'S INCLUDED

Your Peppa Pig Boat Adventure Bath Toy Set contains the following items:

- 1x Pull & Go Paddle Boat (yellow)
- 1x Grandpa Pig's Splash & Pour Boat (blue and yellow)
- 5x Water Squirter Characters: Peppa Pig, George, Mummy Pig, Daddy Pig, and Grandpa Pig



Figure 2: All components included in the set.

3. SETUP

1. **Unpack:** Carefully remove all components from the packaging. Ensure all five character squirts and both boats are present.
2. **Initial Rinse:** Before first use, rinse all toys thoroughly with clean water.
3. **Placement:** The toys are designed for use in a bathtub or shallow pool. Ensure the play area is safe and supervised.

4. OPERATING INSTRUCTIONS

4.1. Pull & Go Paddle Boat

- Place the bright yellow paddle boat in the water.
- Gently pull the yellow hoop at the end of the drawstring located at the front of the boat.
- Release the hoop and observe as the spring-loaded paddles at the rear of the boat rotate, propelling the boat across the water.

- Two character squirters can be seated in the boat's purple seats.



Figure 3: Operating the Pull & Go Paddle Boat.

4.2. Grandpa Pig's Splash & Pour Boat

- This blue and yellow boat features multiple interactive parts.
- The boat's components can be lifted out: one part acts as a shower, another as a sprinkler, and a third has a water-powered paddle that spins when water is poured over it.
- Water can be poured into the boat and then drained through the spout at the bow.
- Two character squirters can be placed in the boat's designated spots.



Figure 4: Interacting with Grandpa Pig's Splash & Pour Boat.

4.3. Water Squirter Characters

- Submerge any of the five Peppa Pig characters (Peppa Pig, George, Mummy Pig, Daddy Pig, Grandpa Pig) underwater to fill them with water.
- Squeeze the character to squirt water for interactive play.



Figure 5: Peppa Pig characters ready for squirting fun.

5. MAINTENANCE

- **Draining:** After each use, ensure all water is drained from the toys, especially the squirter characters and the boats. Squeeze the squirter multiple times to remove all internal water.
- **Air Drying:** Leave all toys to air dry completely in a well-ventilated area to prevent mold and mildew growth.
- **Cleaning:** Periodically wipe down the toys with a mild anti-bacterial solution or wipes. Rinse thoroughly with clean water after using any cleaning agents.
- **Storage:** Store the dry toys in a clean, dry place away from direct sunlight when not in use.

6. TROUBLESHOOTING

6.1. Paddle Boat Not Moving

- **Issue:** The paddle boat's propeller does not spin or moves slowly.
- **Solution:** Ensure the drawstring is pulled fully and released quickly. Check for any debris or hair caught

in the propeller mechanism and carefully remove it.

6.2. Squirter Characters Not Squirting Water

- **Issue:** Characters do not fill with water or do not squirt effectively.
- **Solution:** Ensure the character is fully submerged underwater to allow it to fill. Squeeze firmly to expel water. If blockages occur, rinse thoroughly under running water.

6.3. Mold or Mildew Growth

- **Issue:** Visible mold or mildew on toys.
- **Solution:** This indicates incomplete drying. Clean the affected areas with a diluted bleach solution (1 part bleach to 10 parts water) or a commercial mold remover. Rinse thoroughly and ensure complete air drying after cleaning. Always ensure toys are completely dry before storage.

7. SPECIFICATIONS

Feature	Detail
Brand	TOMY
Model Number	E73453
Age Range	18 Months and Up
Material Type	Plastic
Material Type Free	Lead Free, Phthalate Free, BPA Free
Operation Mode	Manual (No Batteries Required)
Included Components	2 Boats, 5 Squirter Characters
Item Dimensions	11.88 x 6 x 10.25 inches

8. WARRANTY & SUPPORT

For warranty information or product support, please refer to the packaging or contact TOMY customer service directly. Contact details can typically be found on the official TOMY website or on the product's retail page.