

## LELO 82351

# LELO IDA Wave Dual Stimulation Massager User Manual

Model: 82351

## INTRODUCTION

---

The LELO IDA Wave is an innovative dual stimulation massager designed for enhanced pleasure and exploration. It combines advanced technology with a user-friendly design, offering a range of customizable settings through its dedicated app. This manual provides essential information on how to set up, operate, maintain, and troubleshoot your IDA Wave device.

## WHAT'S IN THE BOX

---

Upon unboxing your LELO IDA Wave, please ensure all the following components are present:

**IDA™ Wave**  
dual stimulation massager



**MANUAL**  
how to use guide



**WARRANTY CARD**  
verifies product authenticity



**CHARGING CORD**  
USB cable



**MOISTURIZER SACHET**  
water-based lubricant  
5 ml / 0.17 fl. oz.



**SATIN POUCH**  
for storage

Image: All components included with the LELO IDA Wave.

- LELO IDA Wave Device
- User Manual
- Warranty Registration Card
- USB Charging Cable
- LELO Moisturizer Sachet (water-based lubricant)
- Satin Storage Pouch

## KEY FEATURES

The LELO IDA Wave is equipped with several features designed to enhance your experience:

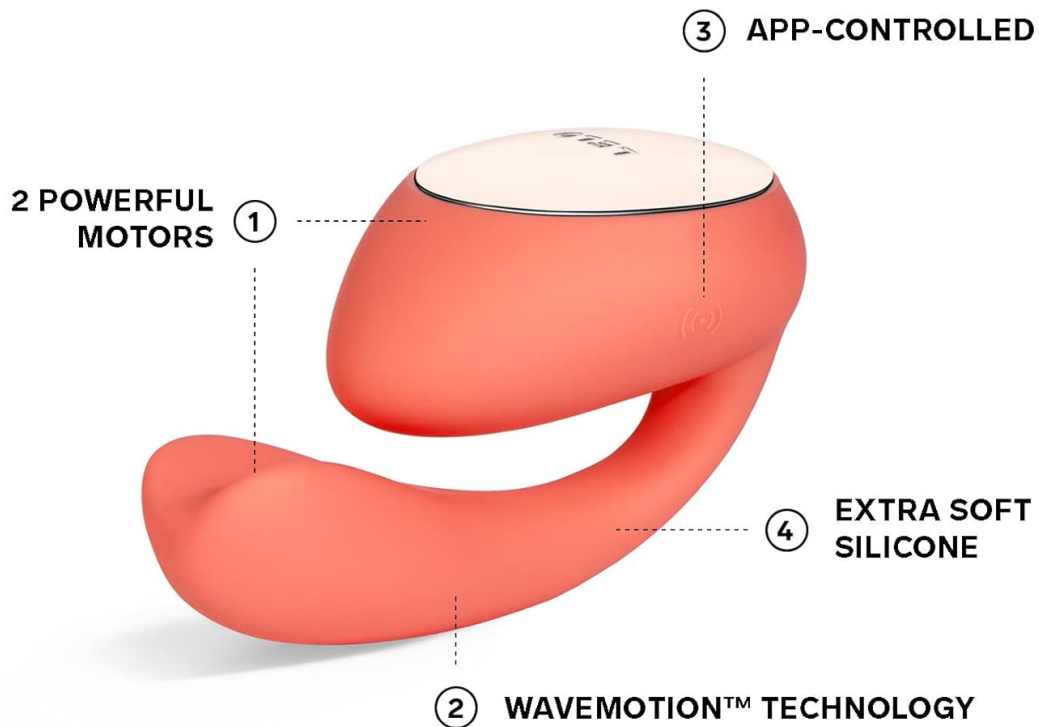


Image: Visual representation of the IDA Wave's core features.

- **WaveMotion Technology:** Features a rotating, insertable tail that mimics a finger-like massage motion for targeted stimulation.
- **App-Controlled:** Connects via Bluetooth to the LELO app, unlocking additional pleasure settings and control options.
- **Dual Power:** Two powerful motors work in tandem to provide deep vibrations for comprehensive stimulation.
- **Extra Soft Silicone:** Crafted from body-safe silicone that is soft to the touch, ensuring comfort during use.
- **Waterproof Design:** Fully submersible, allowing for use in the bath or shower for versatile enjoyment and easy cleaning.
- **10 Vibration Settings:** Offers a wide range of intensities, from gentle murmurs to satisfying pulses.
- **Long-Lasting Charge:** Designed for extended use on a single charge.

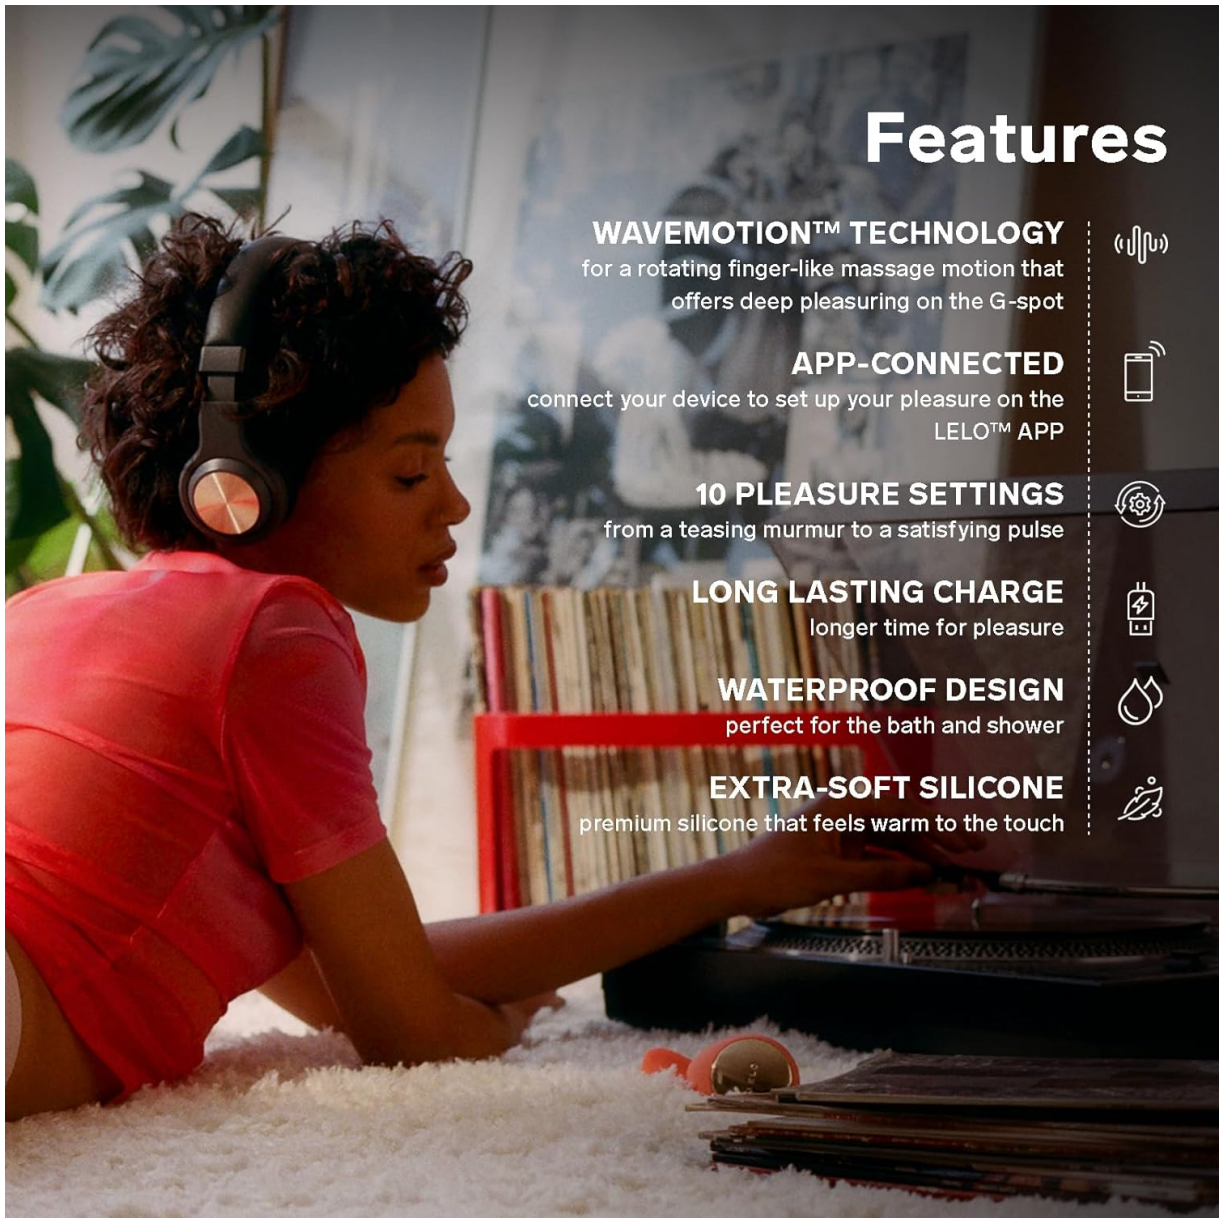


Image: Summary of the IDA Wave's main attributes.

## SETUP

Before using your LELO IDA Wave for the first time, please follow these setup instructions:

1. **Initial Charge:** Connect the provided USB charging cable to the charging port on your IDA Wave. Plug the other end into a USB power adapter (not included) or a computer USB port. Charge the device for 2 hours before its first use. The LED lights will indicate the charging status.
2. **Download the LELO App:** For full functionality and access to all 10 pleasure settings, download the official LELO app on your smartphone. Search for "LELO" in your device's app store.

## OPERATING INSTRUCTIONS

Operating your LELO IDA Wave is straightforward. You can control it directly on the device or via the LELO app.

# How to use

## BEFORE FIRST USE

charge your device for 2 hours

## TO TURN IT ON

press the (( )) button

## THE LED LIGHTS WILL BLINK

to indicate the battery level

## TO SWITCH BETWEEN 10 PLEASURE SETTINGS

press the (( )) button

## TO USE THE APP

activate bluetooth on your phone and open the LELO™ APP

## TO TURN IT OFF

press center button for 3 seconds



Image: Step-by-step guide for operating the IDA Wave.

## Basic Device Control

- **To Turn On:** Press the `(( ))` button located on the device.
- **To Check Battery Level:** The LED lights will blink to indicate the current battery level.
- **To Switch Pleasure Settings:** Press the `(( ))` button repeatedly to cycle through the 10 available pleasure settings.
- **To Turn Off:** Press and hold the center button for 3 seconds.

## App Control

For an enhanced and customizable experience, use the LELO app:

1. **Activate Bluetooth:** Ensure Bluetooth is enabled on your smartphone.
2. **Open LELO App:** Launch the LELO application on your device.
3. **Connect to IDA Wave:** Follow the in-app instructions to pair your IDA Wave. Once connected, you can explore additional settings and control the device remotely.

We recommend using a premium water-based lubricant for added comfort during use. Experiment with different positions to find what satisfies you most.



## MAINTENANCE

Proper care and maintenance will ensure the longevity of your LELO IDA Wave:

- **Cleaning:** Always clean your IDA Wave thoroughly after each use. We recommend using LELO Premium Cleaning Spray. Simply spray the device and gently wipe it clean with a lint-free cloth. If the spray is not available, lukewarm water and mild soap can be used. Rinse thoroughly and pat dry.
- **Storage:** Store your IDA Wave in the provided satin pouch to protect it from dust and damage. Keep it in a cool, dry place away from direct sunlight and extreme temperatures.
- **Charging:** Recharge the device when the battery is low to maintain optimal performance. Avoid overcharging for extended periods.

## TROUBLESHOOTING

If you encounter any issues with your LELO IDA Wave, please refer to the following common solutions:

Problem	Possible Cause	Solution
Device does not turn on.	Low battery.	Charge the device for at least 2 hours.
App connection issues.	Bluetooth not enabled, app not updated, or device not paired correctly.	Ensure Bluetooth is on. Restart the app and your device. Try re-pairing the device within the app settings. Ensure the app is updated to the latest version.
Device does not stay in place during use.	Anatomical fit or insufficient lubrication.	Experiment with different positions. Ensure adequate water-based lubricant is used. The design may not be universally suitable for all anatomies.
Vibrations are weak or inconsistent.	Low battery or temporary software glitch.	Recharge the device fully. Turn the device off and on again.

If the issue persists after trying these steps, please contact LELO customer support for further assistance.

## SPECIFICATIONS

- **Product Dimensions:** 2.48 x 2.2 x 3.66 inches
- **Weight:** 3.63 ounces
- **Model Number:** 82351
- **Battery:** 1 Lithium Ion battery (required)
- **Color:** Coral Red
- **Material:** Silicone, Acrylonitrile Butadiene Styrene (ABS)
- **Manufacturer:** Lelo

- **Country of Origin:** China

## WARRANTY AND SUPPORT

---

LELO stands behind the quality of its products. Your IDA Wave comes with:

- **1-Year LELO Warranty:** Covers manufacturing defects and ensures proper functioning of the device under normal use.
- **10-Year Quality Guarantee:** A testament to LELO's commitment to durable and high-quality products.

For warranty claims, technical support, or any questions regarding your LELO IDA Wave, please visit the official LELO website or contact their customer service department. Keep your warranty registration card for reference.

---