

Uten B0B2WC7H63

Uten Air Fryer 6.9 QT Instruction Manual

MODEL: B0B2WC7H63

1. Important Safety Instructions

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons, including the following:

- Read all instructions before operating the appliance.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electric shock, do not immerse cord, plugs, or the main unit in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner. Contact customer service for assistance.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to 'off', then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- Ensure the air fryer basket is properly inserted and locked before operation.
- Avoid placing food directly on the heating element.

2. Product Overview

The Uten 6.9 QT Air Fryer is designed for healthy cooking, utilizing 360° hot air circulation to prepare a variety of meals with significantly less oil. Its large capacity and intuitive digital touchscreen make it suitable for family use.

Key Features:

- **Large Capacity:** 6.9 Quarts (6.5 Liters) basket, suitable for 6-8 people.
- **8-in-1 Preset Programs:** Smart touchscreen with dedicated settings for Chips, Chicken, Steak, Shrimp, Meat, Cake, Pizza, and Fish.
- **Temperature Control:** Adjustable temperature range from 180°F to 400°F (80°C to 200°C).
- **Timer Function:** Cooking timer adjustable up to 30 minutes.
- **Healthy Cooking:** Circulates hot air to reduce oil usage by up to 80%.
- **Durable Materials:** Constructed with food-grade 304 stainless steel, PFOA-free & BPA-free nonstick coating.
- **Easy to Clean:** Removable fryer basket is dishwasher-safe.
- **Safety Features:** Built-in overheat protection and auto-off sensors.

Components:

- Main Unit with LED Digital Touchscreen
- Removable Fryer Basket
- Crisper Plate (inside the basket)



Figure 2.1: The Uten 6.9 QT Air Fryer, showcasing its sleek design and digital display.

LARGE CAPACITY

Suitable for dining for 6-12 people.



Figure 2.2: The large 6.9 QT (6.5L) capacity basket, ideal for preparing meals for families or gatherings.

3. Setup

3.1 Unpacking

- Remove all packaging materials, stickers, and labels from the appliance.
- Remove the fryer basket and crisper plate from the main unit.

3.2 Initial Cleaning

- Wash the fryer basket and crisper plate with hot water, dish soap, and a non-abrasive sponge. These parts are also dishwasher-safe.
- Wipe the inside and outside of the appliance with a damp cloth.

- Ensure all parts are completely dry before use.



Figure 3.1: The removable fryer basket and crisper plate are designed for easy cleaning and are dishwasher-safe.

3.3 Placement

- Place the appliance on a stable, horizontal, and heat-resistant surface.
- Ensure there is at least 4 inches (10 cm) of free space on the back and sides of the appliance, and 4 inches (10 cm) above it.
- Do not place the appliance against a wall or other appliances.

3.4 Power Connection

- Plug the power cord into a grounded wall outlet.

4. Operating Instructions

The Uten Air Fryer features an intuitive LED digital touchscreen for easy operation. Follow these steps to prepare your meals.

4.1 Powering On/Off

- To power on, press the power icon () on the touchscreen. The display will light up.
- To power off, press and hold the power icon () until the display turns off.

4.2 Using the Digital Touchscreen

The touchscreen allows you to select preset programs, adjust temperature, and set the cooking time.



Figure 4.1: The digital touchscreen displays preset cooking options and controls for temperature and time.

4.3 Selecting Preset Programs

- After powering on, press the 'Menu' icon (often represented by a grid or multiple dots) to cycle through the 8 preset programs: Chips, Chicken, Steak, Shrimp, Meat, Cake, Pizza, and Fish.
- Once your desired program is highlighted, the air fryer will automatically set a recommended temperature and time.

4.4 Adjusting Temperature and Time

- Use the temperature up/down arrows (often represented by a thermometer icon with arrows) to adjust the temperature in 10-degree increments. The range is 180°F to 400°F (80°C to 200°C).
- Use the time up/down arrows (often represented by a clock icon with arrows) to adjust the cooking time. The maximum time is 30 minutes.

Temperature Control & Save Time



Figure 4.2: Close-up of the digital control panel, highlighting the temperature and time adjustment buttons.

4.5 Cooking Process

1. Place your food in the fryer basket, ensuring it does not exceed the MAX fill line.
2. Slide the fryer basket back into the main unit until it clicks into place.
3. Select your desired preset program or manually set the temperature and time.
4. Press the 'Start/Pause' icon (often represented by a play/pause symbol) to begin cooking.
5. For even cooking, some foods may require shaking or turning halfway through the cooking cycle. The air fryer may beep to remind you. Carefully remove the basket, shake/turn the food, and reinsert the basket. The cooking will resume automatically.
6. Once the timer reaches zero, the appliance will beep and automatically shut off.
7. Carefully pull out the fryer basket and transfer the cooked food to a plate.

360° High Speed Air Circulation Uniform Heating

No oil added & Healthy & delicious



Figure 4.3: The air fryer uses 360° hot air circulation to ensure food is cooked evenly and thoroughly.

Your browser does not support the video tag.

Video 4.1: This video demonstrates the preparation of food, placing it into the Uten Air Fryer, setting the cooking parameters using the touchscreen, and the resulting cooked shrimp. It also highlights the ease of cleaning the basket.

5. Maintenance

Proper maintenance ensures the longevity and optimal performance of your Uten Air Fryer.

5.1 Cleaning

- Always unplug the appliance and allow it to cool completely before cleaning.
- **Fryer Basket and Crisper Plate:** These parts are dishwasher-safe. Alternatively, wash them with hot water, dish soap, and a non-abrasive sponge. The nonstick coating prevents food from sticking, making cleaning easy.

- **Main Unit:** Wipe the exterior with a damp cloth. Do not immerse the main unit in water or any other liquid.
- Do not use abrasive cleaning materials or harsh detergents, as they may damage the nonstick coating or the appliance's finish.

5.2 Storage

- Ensure the appliance is clean and dry before storing.
- Store the air fryer in a cool, dry place.

6. Troubleshooting

If you encounter any issues with your Uten Air Fryer, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Air fryer does not turn on.	Appliance not plugged in.	Ensure the power cord is securely plugged into a grounded outlet.
Food is not cooked evenly.	Too much food in the basket; food not shaken/turned.	Do not overfill the basket. Shake or turn food halfway through cooking.
White smoke coming from the appliance.	Grease residue from previous use; fatty food being cooked.	Clean the basket and crisper plate thoroughly after each use. For fatty foods, drain excess oil from the basket.
Food is not crispy.	Insufficient cooking time or temperature; food not properly dried.	Increase cooking time or temperature. Pat food dry before air frying.

7. Specifications

Feature	Specification
Brand	Uten
Model Name	Air Fryer xl
ASIN	B0B2WC7H63
UPC	744252634544
Capacity	6.9 Quarts (6.5 Liters)
Product Dimensions (D x W x H)	16.2"D x 13.9"W x 13.9"H
Material	Stainless Steel
Wattage	1700 watts

Feature	Specification
Control Method	Touch
Special Features	Temperature Control, Nonstick Coating
Dishwasher Safe Parts	Yes (Fryer Basket, Crisper Plate)
Recommended Uses	Bake, Broil, Dehydrate, Roast, Air Fry

8. Warranty and Support

For warranty information and customer support, please refer to the documentation included with your purchase or visit the official Uten website. Keep your purchase receipt as proof of purchase for any warranty claims.

© 2023 Uten. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question