#### Manuals+

Q & A | Deep Search | Upload

#### manuals.plus /

- Coolfire /
- Coolfire Wooden Vibrating Alarm Clock 1735PK User Manual

#### Coolfire 1735PK

# Coolfire Wooden Vibrating Alarm Clock 1735PK User Manual

Model: 1735PK

#### INTRODUCTION

Thank you for purchasing the Coolfire Wooden Vibrating Alarm Clock, Model 1735PK. This digital alarm clock is designed to provide a reliable wake-up experience, especially for heavy sleepers, through its vibrating shaker and clear display. It also features temperature and humidity monitoring, and a USB charging port. Please read this manual carefully to ensure proper setup and operation of your device.

#### IMPORTANT SAFETY INFORMATION

- Keep the device away from water and high humidity environments.
- Do not expose the device to direct sunlight or extreme temperatures.
- Use only the provided power adapter.
- Do not attempt to disassemble or repair the device yourself. Contact qualified service personnel.
- Keep out of reach of children.

#### PACKAGE CONTENTS

Please check that all items are present in your package:

- Coolfire Wooden Vibrating Alarm Clock (1735PK)
- · Vibrating Shaker
- Power Adapter
- · User Manual (this document)



Image: The Coolfire Wooden Vibrating Alarm Clock, its vibrating shaker, and a phone connected for charging. The clock displays 11:33, 60% RH, and 68°F.

# PRODUCT OVERVIEW

# **Alarm Clock Unit**

- **Digital Display:** Shows time, temperature, humidity, and alarm status.
- **Control Buttons:** Located on the back or top for setting time, alarms, and other functions. (Specific button names/functions will be detailed in 'Operating Instructions').

# **Vibrating Shaker**

- Vibration Unit: Connects to the main clock unit to provide tactile alarm.
- Wake-up Mode Switch: Allows selection between Vibrate Only, Sound Only, or Both Vibrate & Sound.
- USB Charging Port: Located on the shaker for charging external devices.



Image: A close-up view of the vibrating shaker, highlighting its "Earthquake Extra Strength Vibration" feature. The shaker is black and oval-shaped.

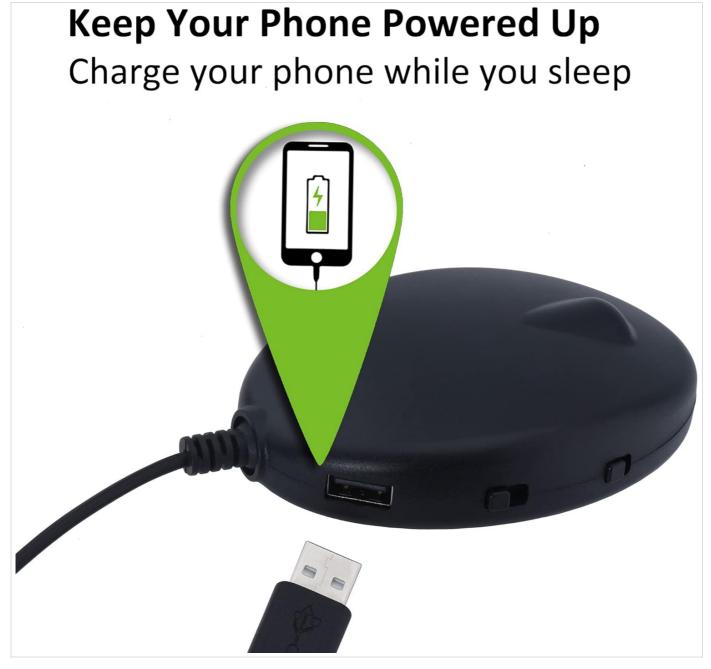


Image: The underside of the vibrating shaker showing a switch for selecting three wake-up modes: 1. Vibrate Only, 2. Sound Only, 3. Both Vibrate & Sound. A USB port is also visible.

#### **SETUP INSTRUCTIONS**

- 1. **Connect Power:** Plug the provided power adapter into the DC input port on the back of the alarm clock. Then, plug the adapter into a standard wall outlet. The display will light up.
- 2. **Connect Vibrating Shaker:** Plug the cable from the vibrating shaker into the designated port on the back of the alarm clock.
- 3. **Position Shaker:** Place the vibrating shaker under your pillow or mattress for optimal vibration transfer.

#### **OPERATING INSTRUCTIONS**

# **Setting Time and Date**

(Assume standard button functions like SET, UP, DOWN, or MODE buttons. Specific button names are not provided in the input, so generic terms are used.)

- 1. Press and hold the SET button (or similar) to enter time setting mode. The hour digits will flash.
- 2. Use the UP and DOWN buttons to adjust the hour.
- 3. Press SET again to move to minute setting. Adjust minutes with UP and DOWN.
- 4. Continue pressing SET to cycle through year, month, and day settings, adjusting each with UP and DOWN.
- 5. Press SET one last time or wait a few seconds for the settings to save and exit the setting mode.

#### **Setting Alarms**

The clock typically supports multiple alarms (e.g., AL1, AL2). Refer to the specific buttons on your device, often labeled ALARM or AL1/AL2.

- 1. Press the ALARM button (or AL1/AL2) to select an alarm. The alarm time will flash.
- 2. Press and hold the ALARM button to enter alarm setting mode. The hour digits will flash.
- 3. Use the UP and DOWN buttons to adjust the alarm hour.
- 4. Press ALARM again to move to minute setting. Adjust minutes with UP and DOWN.
- 5. Press **ALARM** one last time or wait a few seconds to save and activate the alarm. An alarm icon will appear on the display.
- 6. To turn off an active alarm, press any button when it sounds. To disable an alarm completely, press the **ALARM** button until the alarm icon disappears.

#### **Choosing Wake-Up Modes (Vibrating Shaker)**

The vibrating shaker offers three distinct wake-up modes. Select your preferred mode using the switch located on the shaker unit.

- 1. Vibrate Only: The shaker will vibrate without producing sound. Ideal for waking up without disturbing others.
- 2. Sound Only: The alarm clock will produce an audible sound without vibration.
- 3. Both Vibrate & Sound: The shaker will vibrate, and the alarm clock will produce an audible sound simultaneously.



Image: The underside of the vibrating shaker showing a switch for selecting three wake-up modes: 1. Vibrate Only, 2. Sound Only, 3. Both Vibrate & Sound. A USB port is also visible.

# **Adjusting Display Brightness**

The display brightness can usually be adjusted to suit your preference. Look for a dedicated BRIGHTNESS button or a function accessible via the SET or MODE button.

1. Press the **BRIGHTNESS** button (or similar) repeatedly to cycle through different brightness levels (e.g., High, Medium, Low, Off).

# **Temperature and Humidity Display**

The clock automatically displays the current room temperature and humidity. No specific setting is required for this feature.

# **Using the USB Charging Port**

A USB charging port is integrated into the vibrating shaker unit, allowing you to charge your mobile devices overnight.

1. Connect your device's USB charging cable to the USB port on the vibrating shaker.

- 2. Connect the other end of the cable to your smartphone or other USB-powered device.
- 3. Ensure the alarm clock is powered on for the USB charging port to function.



Image: A close-up view of the vibrating shaker, highlighting its "Earthquake Extra Strength Vibration" feature. The shaker is black and oval-shaped. The USB port is visible on the side.

#### MAINTENANCE

- Cleaning: Wipe the clock and shaker with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- Storage: If storing the device for an extended period, disconnect it from power and store it in a cool, dry place.

# **TROUBLESHOOTING**

Problem	Possible Cause	Solution
Clock display is off.	No power connection.	Ensure the power adapter is securely plugged into the clock and the wall outlet.
Alarm does not sound/vibrate.	Alarm not set or disabled. Incorrect wake-up mode selected. Shaker not connected.	Verify alarm is set and active (alarm icon visible). Check the wake-up mode switch on the shaker. Ensure the shaker is properly connected to the clock.
USB charging not working.	Clock not powered. Cable issue. Device not compatible.	Ensure the alarm clock is powered on. Try a different USB cable. Confirm your device is compatible with standard USB charging.

Problem	Possible Cause	Solution
Incorrect time/date.	Time/date not set correctly after power loss or initial setup.	Follow the "Setting Time and Date" instructions to reset.

#### **SPECIFICATIONS**

• Brand: Coolfire

Model Number: 1735PKDisplay Type: Digital

• Material: Wood

• Product Dimensions: 2.3 x 4 x 1 inches

Item Weight: 14.4 ouncesOperation Mode: Electrical

• Features: Alarm Clock, Vibrating Shaker, Temperature Display, Humidity Display, USB Charging Port

• UPC: 724268990346

# WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the contact details provided with your purchase or visit the official Coolfire website. Keep your proof of purchase for warranty claims.

You can visit the Coolfire store on Amazon for more information:Coolfire Store



© 2023 Coolfire. All rights reserved.

#### **Related Documents - 1735PK**

	CoolFire Solar Watch Charger IM#SC2A - User Guide User guide for the CoolFire Solar Watch Charger (IM#SC2A), providing instructions on setup, charging, and maintenance for Eco Solar Watches. Features UV-Free 40,000 LUX white light for faster, safer charging.
INDOKIN'	
COOLFIRE Z80 NEX	Innokin Coolfire Z80 NEX Quick Guide - User Manual A quick guide to the Innokin Coolfire Z80 NEX vaping device, covering components, setup, operation, safety precautions, and specifications.
Quick Guide	



#### Alesis Product Brochure 06: Comprehensive Audio Gear for Musicians & Studios

Explore Alesis' extensive range of audio products, including synthesizers, recorders, amplifiers, mixers, and effects. Discover innovative solutions for music creation and performance.



#### Positive List of Conform ECIGARETTE Products

This document, dated July 28, 2023, presents a comprehensive positive list of electronic cigarette products that conform to regulatory standards. It details a wide array of products submitted by various international manufacturers and brands, including disposable e-cigarettes, rechargeable systems, refillable devices, and kit packs.