

ECONTROLLY AKB76037603

ECONTROLLY AKB76037603 Remote Control User Manual

For LG TV Models: 55UP7000PUA, 65UP7000PUA, 43UP7000PUA, 50UP7000PUA, 43UP7500PSF, 50UP7500PSF, 50UP7550PSF, and others.

1. INTRODUCTION

This manual provides instructions for the ECONTROLLY AKB76037603 replacement remote control. This remote is designed to be compatible with various LG TV models, offering a direct replacement for your original remote. The remote control operates using infrared (IR) technology and requires no programming. Simply insert batteries to begin use.

2. PACKAGE CONTENTS

- 1 x ECONTROLLY AKB76037603 IR Remote Control

Note: Batteries and additional instructions are not included in the package.

3. SETUP

3.1 Battery Installation

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards or outwards to open it.
3. Insert two (2) AAA alkaline batteries, ensuring the positive (+) and negative (-) terminals match the diagrams inside the compartment.
4. Close the battery compartment cover by sliding it back into place until it clicks securely.



Image: Back view of the remote control, highlighting the battery compartment. This is where you will insert the AAA batteries.

3.2 First Use

After installing the batteries, the remote control is ready for immediate use. No programming or pairing is required. Point the remote directly at your LG TV and press the desired function button.

4. OPERATING INSTRUCTIONS

The ECONTROLLY AKB76037603 remote control features standard buttons for navigating your LG TV. Below is a general overview of common button functions:







Image: Front view of the remote control, displaying all buttons and their labels.

Common Button Functions

Button	Function
Power ()	Turns the TV on or off.
Number Buttons (0-9)	Direct channel selection.
Volume Up/Down	Adjusts the TV volume.
Mute	Mutes or unmutes the TV audio.
Channel Up/Down	Changes the TV channel.
Input/Source	Selects the input source (HDMI, AV, etc.).
Home (⬆)	Accesses the TV's home screen or smart features.
Navigation (Up, Down, Left, Right, OK)	Navigates menus and selects options.
Back/Return	Goes back to the previous screen or menu.
Netflix, Prime Video, Disney+, Movies	Direct access buttons for streaming services.
Play, Pause, Stop, Fast Forward, Rewind	Media playback controls.
Guide	Displays the electronic program guide.

5. MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the remote control. Do not use liquid cleaners or abrasive materials.
- **Battery Replacement:** Replace batteries when the remote's response becomes sluggish or stops working. Always replace both batteries at the same time with new AAA alkaline batteries.
- **Storage:** If the remote control will not be used for an extended period, remove the batteries to prevent leakage and potential damage.
- **Avoid Exposure:** Keep the remote control away from direct sunlight, heat sources, and moisture.

6. TROUBLESHOOTING

6.1 Remote Not Responding

- **Check Batteries:** Ensure batteries are inserted correctly with the correct polarity (+/-).
- **Replace Batteries:** Install fresh AAA alkaline batteries.
- **Line of Sight:** Make sure there is a clear line of sight between the remote control and the TV's IR receiver. Obstructions can block the signal.
- **Distance:** Ensure you are within the effective operating range of the TV's IR receiver.
- **Interference:** Strong light sources (like direct sunlight or fluorescent lights) can sometimes interfere with IR signals. Try operating the remote in a different lighting condition.

6.2 Specific Buttons Not Working

- **Clean Buttons:** Ensure there is no dirt or debris lodged around the buttons.
- **Test Other Functions:** If only a few buttons are unresponsive, it might indicate a specific issue with those buttons. If the remote is generally unresponsive, refer to "Remote Not Responding" above.

7. SPECIFICATIONS

Feature	Detail
Model Number	AKB76037603 (Replaces AKB76037606)
Brand	ECONTROLLY
Compatibility	LG TV models including 55UP7000PUA, 65UP7000PUA, 43UP7000PUA, 50UP7000PUA, 43UP7500PSF, 50UP7500PSF, 50UP7550PSF, 70UP7550PSC, 75UP7500PSC, 55UP7500PSF, 55UP7550PSF, 65UP7500PSF, 65UP7550PSF, 70UP7500PSC.
Power Source	2 x AAA Batteries (not included)
Material	ABS Environmental protection material
Dimensions	Approximately 2 x 0.65 x 7 inches
Item Weight	Approximately 1 ounce
Special Feature	Ergonomic design

8. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the seller or manufacturer's official channels. This product is a replacement remote control and typically carries a limited warranty from the seller. Please retain your purchase receipt for any warranty claims.

© 2023 ECONTROLLY. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for

conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question