

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

Manuals.plus /

- › [Bayer Chic 2000](#) /
- › Bayer Chic 2000 Linus Duo Doll Stroller Instruction Manual - Model 690-62

Bayer Chic 2000 690-62

Bayer Chic 2000 Linus Duo Doll Stroller Instruction Manual

Model: 690-62



1. INTRODUCTION

Thank you for choosing the Bayer Chic 2000 Linus Duo Doll Stroller. This modern twin doll stroller is designed for children aged 36 months to 8 years, offering versatile play options with its adjustable features. This manual provides essential information for safe assembly, operation, and maintenance of your doll stroller.

Please read these instructions carefully before assembly and use, and retain them for future reference.

2. SAFETY INFORMATION

- **WARNING:** Contains small parts. Not suitable for children under 3 years of age due to choking hazard.
- Adult supervision is recommended during assembly and play.
- Ensure all locking mechanisms are securely engaged before allowing a child to play with the stroller.
- Regularly inspect the stroller for any signs of damage or wear. Discontinue use if any parts are broken or missing.
- Keep packaging materials away from children to prevent suffocation.

3. PRODUCT FEATURES


The Bayer Chic 2000 Linus Duo Doll Stroller offers a range of features designed for interactive play:


- **Modern Design:** Stylish doll stroller with a robust frame.
- **Adjustable Handle:** The handle is height-adjustable from approximately 50 cm to 82 cm to suit various child heights. It can also be pivoted for dual-direction pushing.
- **Reversible Sport Seats:** Two removable sport seats can be adjusted to a lying position and placed in multiple configurations:
 - Forward-facing (dolls face away from the child)
 - Rear-facing (dolls face the child)
 - Face-to-face (dolls face each other)

- **Swivel Front Wheels:** For easy maneuverability and turning.
- **Large Storage Net:** A spacious net under the seats for carrying doll accessories.
- **Foldable Frame:** The frame can be folded flat for convenient storage and transport.
- **Safety Bar and Harness:** Each sport seat includes a safety bar and harness for securing dolls.
- **Adjustable Canopy:** Provides flexible protection from sun and wind.
- **Compatibility:** Suitable for dolls up to 50 cm in height.

UNSERE PRODUKTE

bis ins letzte Detail durchdacht





<div style="background-color: #f4a460; padding: 5px; margin-bottom: 5px;"> <input checked="" type="checkbox"/> Schwenkbarer & höhenverstellbarer Schiebegriff (50-82 cm) </div> <div style="background-color: #f4a460; padding: 5px; margin-bottom: 5px;"> <input checked="" type="checkbox"/> Leicht zu manövrieren dank schwenkbarer Vorderräder </div> <div style="background-color: #f4a460; padding: 5px; margin-bottom: 5px;"> <input checked="" type="checkbox"/> Face-to-Face-Sitzoption </div> <div style="background-color: #f4a460; padding: 5px; margin-bottom: 5px;"> <input checked="" type="checkbox"/> Sicherheitsgurte im Sportsitz </div> <div style="background-color: #f4a460; padding: 5px;"> <input checked="" type="checkbox"/> Platzsparend verstaubar dank kompaktem Klappmechanismus </div>	<div style="background-color: #333; color: white; padding: 10px; text-align: center; font-weight: bold; font-size: 1.2em;">ANDERE</div> <div style="background-color: #666; padding: 5px; margin-bottom: 5px;"> <input type="checkbox"/> Fester Griff ohne Anpassungsmöglichkeit </div> <div style="background-color: #666; padding: 5px; margin-bottom: 5px;"> <input type="checkbox"/> Schwerfällige Handhabung aufgrund starrer Räder </div> <div style="background-color: #666; padding: 5px; margin-bottom: 5px;"> <input type="checkbox"/> Keine Flexibilität für unterschiedliche Spielmöglichkeiten </div> <div style="background-color: #666; padding: 5px; margin-bottom: 5px;"> <input type="checkbox"/> Puppen fallen leicht heraus </div> <div style="background-color: #666; padding: 5px;"> <input type="checkbox"/> Sperrig und platzraubend </div>
---	---

Image 3.1: This diagram highlights the stroller's flexible features, including adjustable seats, height-adjustable handle, and swivel wheels, allowing for various play configurations.



Image 3.2: An infographic illustrating key features such as the adjustable canopy, reversible seats for face-to-face or forward-facing positions, a large storage net, safety harnesses, a height-adjustable and pivotable handle, swivel front wheels for easy maneuvering, and a foldable design for space-saving storage.

4. ASSEMBLY INSTRUCTIONS

The Bayer Chic 2000 Linus Duo Doll Stroller requires assembly. Please follow these steps carefully:

1. **Unpack Components:** Carefully remove all parts from the packaging. Verify that all components are present according to the packing list (not provided in this manual, refer to product packaging).
2. **Unfold the Frame:** Locate the main frame. Release any transport locks and unfold the frame until it clicks into place, ensuring it is stable.

3. **Attach Wheels:**

- Attach the front swivel wheels by pushing them into the designated slots until they lock securely.
- Attach the rear wheels in the same manner.

4. **Install Seats:**

- Position the two sport seats onto the frame. Ensure they are correctly oriented (forward-facing, rear-facing, or face-to-face) as desired.
- Secure each seat to the frame using the provided attachment points until they click into place.

5. **Attach Canopies and Safety Bars:**

- Attach the canopies to the top of each seat.
- Attach the safety bars to the front of each seat.

6. **Final Check:** Before use, ensure all parts are securely attached and locked.



Image 4.1: A fully assembled Bayer Chic 2000 Linus Duo Doll Stroller, showcasing its overall structure and design with both seats in a forward-facing configuration.

5. OPERATING INSTRUCTIONS

5.1. Adjusting the Handlebar Height

To adjust the handlebar height (from 50 cm to 82 cm), locate the adjustment buttons or levers on the sides of the handle. Press these buttons and simultaneously raise or lower the handle to the desired height. Release the buttons to lock the handle in place. Ensure it is securely locked before use.

5.2. Pivoting the Handlebar

The handlebar can be pivoted to allow pushing the stroller from either side. Locate the pivot mechanism near the base of the handlebar. Engage the release mechanism, rotate the handle to the opposite side, and ensure it locks securely into position.

5.3. Adjusting and Reversing the Seats

The two sport seats offer multiple configurations:

- **Reclining the Seats:** To adjust the seat backrest to a lying position, locate the recline mechanism (usually a lever or strap) on the back of each seat. Adjust to the desired angle and ensure it is locked.
- **Changing Seat Direction:** To reverse a seat (e.g., from forward-facing to rear-facing or face-to-face), first unlatch the seat from the frame. Carefully lift the seat, rotate it to the desired orientation, and re-attach it to the frame until it clicks securely into place. Repeat for the second seat if necessary.



Image 5.1: The doll stroller with both seats configured in a forward-facing position, allowing dolls to view the path ahead.



Image 5.2: The doll stroller with both seats configured in a rear-facing position, allowing the child to interact with their dolls.



Image 5.3: The doll stroller with seats configured face-to-face, enabling dolls to interact with each other.

5.4. Using the Swivel Wheels

The front wheels are designed to swivel for enhanced maneuverability. For straight-line pushing, the swivel function can typically be locked by engaging a lever near each front wheel. Unlock for easier turning.

5.5. Folding the Stroller for Storage

To fold the stroller for compact storage or transport:

1. Remove any dolls or accessories from the storage net.
2. If possible, remove the seats from the frame for a more compact fold, or ensure they are in their most compact position.
3. Locate the folding mechanisms (usually levers or buttons on the frame). Engage these mechanisms and carefully fold the frame until it is flat.
4. Secure any automatic locking clips to keep the stroller folded.

6. MAINTENANCE

- **Cleaning:** Wipe plastic and metal parts with a damp cloth and mild soap. Fabric parts (polyester) can be spot cleaned. Do not machine wash or tumble dry.
- **Storage:** Store the stroller in a clean, dry place away from direct sunlight and extreme temperatures to prevent material degradation.
- **Inspection:** Periodically check all screws, bolts, and locking mechanisms to ensure they are tight and functioning correctly.
- **Lubrication:** If wheels or folding mechanisms become stiff, apply a small amount of silicone-based lubricant (avoid oil-based lubricants that can attract dirt).

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Stroller is difficult to push or turn.	Swivel wheels are locked, or wheels are dirty/damaged.	Unlock swivel wheels. Clean wheels and axles. If damaged, contact support.
Handlebar does not adjust or lock.	Adjustment buttons/levers are not fully engaged or mechanism is obstructed.	Ensure buttons are fully pressed. Check for obstructions. Do not force.
Seats do not attach securely.	Seats are not correctly aligned with attachment points or debris is present.	Re-align seats and push firmly until a click is heard. Clear any debris from attachment points.
Stroller frame does not fold flat.	Folding mechanisms are not fully released or seats are obstructing.	Ensure all folding levers are engaged. Remove seats if they hinder folding.

8. SPECIFICATIONS

- **Model Number:** 690-62
- **Recommended Age:** 36 months - 8 years
- **Compatible Doll Size:** Up to 50 cm
- **Product Dimensions (L x W x H):** 80 cm x 41 cm x 79 cm
- **Item Weight:** 4.94 kg
- **Handlebar Height Adjustment:** Approx. 50 cm - 82 cm
- **Main Materials:** Polyester, Plastic, Steel (Alloy Steel frame)
- **Wheel Type:** Swivel
- **Assembly Required:** Yes
- **Batteries Required/Included:** No

VIELSEITIG EINSETZBAR:



Für Puppen
bis 50 cm



Image 8.1: This image provides a visual representation of the stroller's dimensions (80 cm length, 41 cm width, 79 cm height) and indicates its compatibility with dolls up to 50 cm.

9. WARRANTY AND SUPPORT

For warranty information, please refer to the documentation included with your purchase or contact the retailer. Bayer Chic 2000 products are designed for durability and quality. If you encounter any issues or require replacement parts, please contact Bayer Chic 2000 customer service or your point of purchase.

Please note that spare parts availability information is not provided in the product data.

