

Mycket Ocs-14

Mycket Digital Luggage Scale User Manual

Model: Ocs-14

INTRODUCTION

Thank you for choosing the Mycket Digital Luggage Scale. This portable and highly accurate scale is designed to help you weigh your luggage, parcels, or other items with ease, preventing unexpected overweight baggage fees. Its compact design and user-friendly features make it an ideal companion for travel, fishing, shopping, and home use. Please read this manual carefully before using the device to ensure proper operation and to maximize its lifespan.

SAFETY INFORMATION

- Do not immerse the scale in water or other liquids.
- Avoid dropping the scale or subjecting it to strong impacts.
- Do not exceed the maximum weight capacity of 50 kg (110 lb).
- Keep the scale away from extreme temperatures and direct sunlight.
- Remove the battery if the scale will not be used for an extended period.
- This device is for personal use and not intended for commercial or legal trade.

PRODUCT OVERVIEW

Familiarize yourself with the components of your Mycket Digital Luggage Scale:



Figure 1: Mycket Digital Luggage Scale with key features highlighted. This image shows the LCD screen, the power/unit button, the strong nylon strap, and icons representing Auto Weight Locking, Auto Off, LCD Display, Tare Function, Low Battery Alert, Overload Tips, 50KG Bearing Capacity, and Long Lasting Battery.

- **LCD Display:** Large, backlit screen for clear weight readings.
- **Power/Unit Button:** Used to turn the scale on/off and switch between weight units.
- **Strong Nylon Strap:** Durable strap with a metal hook for securely attaching items to be weighed.
- **Ergonomic Handle:** Designed for comfortable single or two-hand operation.

SETUP

The Mycket Digital Luggage Scale requires one CR2032 battery (not included in some packages) for operation. Please ensure the battery is correctly installed before first use.

1. Locate the battery compartment on the back of the scale.
2. Open the battery cover.
3. Insert one CR2032 battery, ensuring the positive (+) side faces upwards.
4. Close the battery cover securely.

Your scale is now ready for use.

OPERATING INSTRUCTIONS

1. Turning On/Off

- **To Turn On:** Short press the **Power/Unit Button** (*power icon*). The display will light up and show "0.00".
- **To Turn Off:** The scale will automatically turn off after 60 seconds of inactivity to conserve battery. To manually turn off, long press the **Power/Unit Button** until the display turns off.

2. Changing Weight Units

The scale supports four weight units: pounds (lb), grams (g), ounces (oz), and kilograms (kg).



Figure 2: The scale's display showing the four available weight units: grams (g), ounces (oz), kilograms (kg), and pounds (lb).

- While the scale is on and displaying "0.00", short press the **Power/Unit Button** to cycle through the units (kg → lb → g → oz → kg).
- Select your desired unit before weighing.

3. Weighing Luggage

Ensure the scale is turned on and set to your preferred unit.



Figure 3: Proper weighing techniques. The top image shows single-hand operation for lighter items (0-15 kg), while the bottom image illustrates two-hand operation for heavier items (15-50 kg) to ensure stability and accuracy.

1. Attach the scale's strap to the handle of the item you wish to weigh. Ensure the connection is secure.
2. Lift the scale and the attached item smoothly and steadily.
 - For lighter items (0-15 kg), single-hand operation is sufficient.
 - For heavier items (15-50 kg), use both hands to lift the scale for better stability and accuracy.
3. Hold the item steady until the weight reading stabilizes and locks on the display. The display will typically show a "HOLD" indicator.
4. Once the weight is locked, you can lower the item and read the final measurement.

4. Tare Function

The tare function allows you to weigh items in a container by subtracting the container's weight.

1. Turn on the scale and attach the empty container (e.g., a basket or bag) to the strap.
2. Wait for the weight to stabilize.
3. Short press the **Power/Unit Button**. The display will reset to "0.00", indicating the container's weight has been tared.
4. Now, place the items you wish to weigh inside the container. The display will show only the net weight of the items.

5. Overload Indication

If the weight exceeds the maximum capacity of 50 kg (110 lb), the display will show "O-Ld" (Overload). Remove the item immediately to prevent damage to the scale.

6. Low Battery Indication

When the battery is low, the display will show "Lo". Replace the CR2032 battery as soon as possible to ensure accurate readings.

MAINTENANCE

- Clean the scale with a soft, damp cloth. Do not use abrasive cleaners or immerse in water.
- Store the scale in a cool, dry place when not in use.
- Avoid exposing the scale to extreme temperatures or humidity.
- If the scale will not be used for a long period, remove the battery to prevent leakage.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Scale does not turn on.	Battery is dead or incorrectly installed.	Replace the battery (CR2032) or ensure it is installed with correct polarity.
"Lo" displayed.	Low battery.	Replace the battery (CR2032).
"O-Ld" displayed.	Overload.	The item being weighed exceeds 50 kg (110 lb). Remove the item immediately.
Inaccurate readings.	Unstable weighing, low battery, or scale not zeroed.	Ensure the item is held steady. Replace battery if "Lo" is displayed. Turn off and on again to re-zero.

SPECIFICATIONS

Feature	Detail
Model Number	Ocs-14
Maximum Capacity	50 kg / 110 lb
Accuracy Deviation	Not more than 0.1 lb
Weight Units	kg, lb, g, oz
Display Type	LCD with Backlight

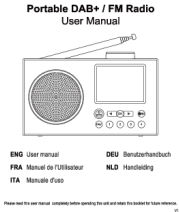
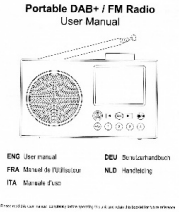




Feature	Detail
Power Source	1 x CR2032 Battery
Auto-Off	60 seconds of inactivity
Material	Polypropylene
Color	Silver
Product Dimensions	5.7 x 3.7 x 15.6 cm (2.24 x 1.46 x 6.14 inches)
Item Weight	59 g (2.08 oz)



Figure 4: Dimensions of the Mycket Digital Luggage Scale. The diagram indicates a length of 5.41 cm, a height of 14.81 cm (including the strap), and a width of 3 cm.

WARRANTY AND SUPPORT

Mycket products are manufactured to high-quality standards. For any questions, issues, or support needs regarding your Mycket Digital Luggage Scale, please contact the seller or Mycket customer service through the platform where you purchased the product. Please retain your proof of purchase for warranty claims.

	<p>Mycket Portable DAB/FM Radio User Manual</p> <p>Comprehensive user manual for the Mycket Portable DAB/FM Radio, covering setup, operation, features like Bluetooth connectivity, alarms, FM/DAB tuning, and specifications.</p>
	<p>Portable DAB+ / FM Radio User Manual - Operation and Specifications</p> <p>Comprehensive user manual for the mycket Portable DAB+ / FM Radio with Bluetooth. Includes setup, operation, system settings, specifications, and troubleshooting.</p>
	<p>VEVOR OCS-L Crane Scale User Manual and Specifications</p> <p>Official user manual and specifications for the VEVOR OCS-L Crane Scale, covering installation, operation, safety guidelines, troubleshooting, and care instructions.</p>
	<p>VEVOR OCS-O Crane Scale User Manual and Specifications</p> <p>Comprehensive user manual for the VEVOR OCS-O Crane Scale, covering operation, safety, specifications, button functions, troubleshooting, and manufacturer details. Includes FCC and WEEE compliance information.</p>
	<p>VEVOR OCS-S Crane Scale User Manual and Specifications</p> <p>Comprehensive user manual for the VEVOR OCS-S Crane Scale, covering operation, setup, safety guidelines, specifications, and troubleshooting. Learn how to use your digital hanging scale effectively.</p>
	<p>VEVOR OCS-L Electronic Scale User Manual and Specifications</p> <p>Comprehensive user manual and specifications for the VEVOR OCS-L Electronic Scale, covering operation, safety guidelines, troubleshooting, and care instructions.</p>