

FLEXISPOT E6 Essential (ET365)

FLEXISPOT E6 Essential (ET365) Electric Standing Desk User Manual

Model: E6 Essential (ET365) | Brand: FLEXISPOT

1. INTRODUCTION

This manual provides comprehensive instructions for the assembly, operation, maintenance, and troubleshooting of your FLEXISPOT E6 Essential (ET365) Electric Standing Desk. Please read this manual thoroughly before use to ensure safe and efficient operation.

2. SAFETY INFORMATION

- Ensure the desk is loaded within the recommended maximum weight limit of 220 lbs (100 kg) to maintain stability and prevent damage.
- Adjust the desk height according to individual user heights to utilize the 3-stage lift system's full range and ensure optimal stability.
- Keep children and pets away from the desk during operation.
- Avoid placing liquids directly on the control panel or near electrical components.
- Do not disassemble or modify the desk's electrical components. Contact customer support for service.
- Ensure all cables are properly managed to prevent tripping hazards and damage during height adjustments.

3. PACKAGE CONTENTS

Your FLEXISPOT E6 Essential desk ships in two boxes. Please verify all components are present before beginning assembly.

Included Components:

- Desktop (One-Piece Maple Top, 48"x30")
- Desk Frame (White)
- Dual Motor Lift System

- Control Panel with Memory Presets
- Assembly Hardware (screws, wrenches, cable clips)
- Power Adapter and Cables
- Instruction Manual



Image: All components of the FLEXISPOT E6 Essential desk laid out for assembly, including the desktop, frame parts, control panel, and tools.

4. SETUP AND ASSEMBLY

Assembly typically requires one person and takes approximately 1 hour. Follow the steps below for a smooth setup.

4.1 Unboxing and Preparation

1. Carefully open both boxes and remove all components.
2. Place the desktop upside down on a soft, clean surface (e.g., carpet or a blanket) to prevent scratches.
3. Verify all parts against the package contents list.

4.2 Frame Assembly

1. Attach the lifting columns to the crossbeams using the provided screws and tools. Ensure screws are aligned with square holes and tightened securely.
2. Connect the feet to the bottom of the lifting columns.
3. Adjust the frame width to match your 48"x30" desktop.

Video: FLEXISPOT E6 Essential Standing Desk Installation Guide. This video demonstrates the step-by-step assembly process for the desk frame and desktop attachment.

Video: Official installation guide for the FLEXISPOT E6 Essential desk, detailing frame assembly and desktop attachment.

4.3 Desktop Attachment

1. Center the assembled frame onto the underside of the desktop.
2. Secure the frame to the desktop using the provided screws. Pre-drilled holes may be present; if not, carefully drill pilot holes.
3. Attach the control panel to the underside of the desktop, ensuring it is flush with the edge.

WHOLE-PIECE TOP



Image: Close-up view of the intelligent keypad control panel with LED display and memory presets, located on the underside of the desktop.

4.4 Cable Management

1. Connect the dual motors, control panel, and power adapter according to the labels.
2. Utilize the built-in cable management tray and magnetic cover cloth to organize and conceal all wires.
3. Ensure cables have enough slack to accommodate full height adjustment without tension.

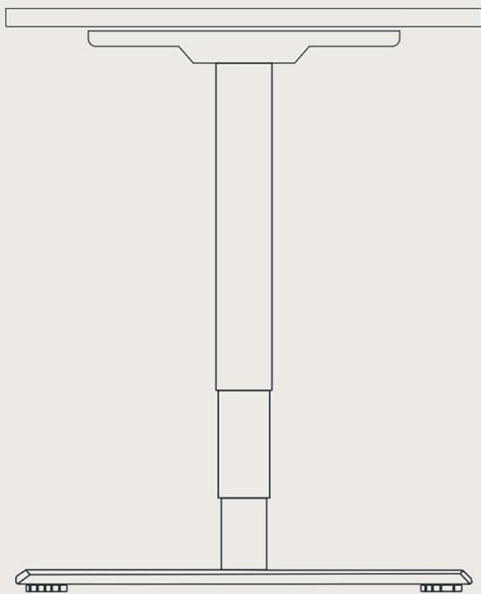 
DIMENSIONS



Desktop

48"-30" diameter

Can hold one 27 inch computers.



Desk Frame

TALL

40"-48.8" for the extra

MEDIUM

31.4"-39.9" for adults

SHORT

23.6"-31.1" for kids

Image: Underside view of the FLEXISPOT E6 desk showing organized cables within the cable management system.

5. OPERATING INSTRUCTIONS

5.1 Height Adjustment

- Use the **Up (▲)** and **Down (▼)** arrow buttons on the control panel to manually adjust the desk height. The LED display will show the current height.
- The desk features a 3-stage lift system, allowing height adjustments from 23.6" to 48.8".

5.2 Memory Presets

- The control panel has four memory buttons (1, 2, 3, 4) to save your preferred sitting and standing heights.
- To save a height: Adjust the desk to your desired height, then press the **M** button followed by one of the number buttons (1-4). The display will confirm the setting.
- To recall a saved height: Simply press the corresponding number button (1-4). The desk will automatically move to the saved position.

5.3 Anti-Collision System

- The desk is equipped with an anti-collision system that detects obstacles during height adjustment. If an obstacle is detected, the desk will stop and reverse slightly to prevent damage.
- Collision sensitivity can typically be adjusted via the control panel settings (refer to the full manual for detailed instructions).



Image: Diagram illustrating the anti-collision system of the FLEXISPOT E6 desk, showing it stopping upon encountering an obstacle.

6. KEY FEATURES

- **Spacious One-Piece Desktop:** A 48"x30" whole-piece maple desktop provides ample space for multiple monitors and accessories.
- **3-Stage Dual Motor Lift System:** Offers a wide height adjustment range from 23.6" to 48.8" with smooth and quiet operation (under 50 dB).
- **High Load Capacity:** Supports up to 220 lbs (100 kg), accommodating various office equipment.
- **Programmable Control Panel:** Features an LED display and four memory presets for quick height adjustments.
- **Robust Construction:** Built with a strong steel structure for enhanced stability and durability.
- **FSC-Certified Desktop:** Tabletop made from responsibly sourced wood.

WHOLE-PIECE TOP



Image: Detailed view of the intelligent keypad, highlighting the LED display, memory presets, and up/down controls.



Image: Visual representation of the desk's 220 lbs maximum load capacity, showing two 110 lbs weights on the desktop.

7. MAINTENANCE

- Regularly check all screws and bolts to ensure they are tight.
- Clean the desktop surface with a soft, damp cloth. Avoid harsh chemicals.
- Keep the electrical components dry and free from dust.
- Inspect cables periodically for any signs of wear or damage.

8. TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Desk not moving	Power cable disconnected; overload; motor error.	Check power connections; reduce load; reset the desk (refer to full manual for reset procedure).
Uneven height adjustment	Uneven load; foot pads not adjusted.	Distribute weight evenly; adjust foot pads for balance.
Noise during operation	Loose screws; normal motor sound.	Tighten all screws; slight motor sound is normal (under 50 dB).

9. SPECIFICATIONS

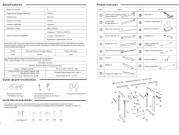 
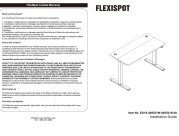 

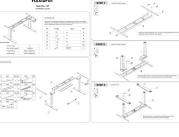 


Brand	FLEXISPOT
Model Name	E6 Essential
Model Number	ET365
Desktop Dimensions	48"D x 30"W (47.5"D x 29.5"W actual)
Height Adjustment Range	23.6" to 48.8"
Lift System	3-Stage Dual Motor
Maximum Weight Capacity	220 lbs (100 kg)
Noise Level	Under 50 dB
Desktop Material	FSC-Certified Maple Wood
Frame Material	Metal (White Frame)

10. WARRANTY AND SUPPORT

FLEXISPOT offers the following warranty for your E6 Essential Electric Standing Desk:

- **5-Year Coverage:** Desk frame and motor.
- **2-Year Coverage:** Control panel and electronics.

For any assistance, questions, or warranty claims, please contact FLEXISPOT customer support through their official website or the retailer where the product was purchased.

	<p>FlexiSpot E2Q Electric Standing Desk: Installation Guide and Specifications</p> <p>Comprehensive installation guide and specifications for the FlexiSpot E2Q electric standing desk. Learn how to assemble, operate, and troubleshoot your adjustable height desk.</p>
	<p>FlexiSpot EG1S/EG1W/EG1B Series Height-Adjustable Desk: Installation Guide & Limited Warranty</p> <p>Comprehensive installation guide and limited warranty details for FlexiSpot EG1S, EG1W, and EG1B series height-adjustable desks, covering setup, specifications, troubleshooting, and warranty coverage.</p>
	<p>FlexiSpot M7L-US Computer Riser Installation Guide and Warranty</p> <p>Official installation guide and limited warranty information for the FlexiSpot M7L-US Sit-Stand Desktop Workstation. Learn how to assemble, use, and understand the warranty terms for your FlexiSpot computer riser.</p>
	<p>FlexiSpot E7 Operation Instructions</p> <p>User manual for the FlexiSpot E7 height adjustable desk controller, detailing its functions, buttons, memory presets, child lock, USB charging, collision prevention, and troubleshooting.</p>
	<p>FlexiSpot E4B/E4W Electric Standing Desk User Manual</p> <p>Comprehensive user manual for the FlexiSpot E4B/E4W electric standing desk, covering specifications, assembly instructions, keypad operation, troubleshooting, and warranty information.</p>
	<p>FlexiSpot M1B/M1W Sit-Stand Desk Converter Installation Guide</p> <p>Step-by-step installation guide for the FlexiSpot M1B/M1W sit-stand desk converter, including specifications, parts list, safety warnings, and assembly instructions.</p>