

[manuals.plus](#) /› [DMR](#) /› [DMR-DO-55A Semi-Automatic 5 kg Spin Dryer User Manual](#)

DMR DMR-DO-55A

DMR-DO-55A Semi-Automatic 5 kg Spin Dryer

User Instruction Manual

Brand: DMR | Model: DMR-DO-55A

1. INTRODUCTION

Thank you for choosing the DMR-DO-55A Semi-Automatic 5 kg Spin Dryer. This appliance is designed to efficiently remove excess water from your laundry through a powerful spinning action, significantly reducing drying time. Please read this manual carefully before operating the dryer to ensure safe and optimal performance. This dryer is intended for spin-drying only and does not include a washing function.

2. SAFETY INSTRUCTIONS

- Always ensure the dryer is placed on a stable, level surface to prevent excessive vibration during operation.
- Do not overload the dryer. The maximum capacity is 5 kg. Overloading can lead to inefficient drying and damage to the motor.
- Ensure the lid is securely closed before starting the spin cycle.
- Keep hands and loose clothing away from the spinning drum.
- Do not attempt to stop the drum manually during operation.
- Unplug the dryer from the power outlet before cleaning or performing any maintenance.
- This dryer performs spin-drying only, removing 80-90% of water. Clothes will still require air drying or sunlight for complete dryness. It is not a hot air dryer.
- Do not use the appliance if the power cord or plug is damaged. Contact authorized service personnel for repairs.
- Keep out of reach of children.

3. PRODUCT OVERVIEW

3.1 Key Features

- Semi-Automatic Spin Dryer with 5 kg capacity.
- Powerful 320W motor for efficient spin drying.

- Achieves 80-90% water removal from clothes.
- Durable plastic construction.
- Portable and lightweight design.
- Plug and Play operation, no complex installation required.
- Equipped with a 5-minute spin timer.

3.2 Components



Figure 1: Front view of the DMR-DO-55A Semi-Automatic Spin Dryer.



Figure 2: Top view of the dryer with the outer lid open, revealing the inner cover.



Figure 3: Close-up of the spin timer knob, typically located on the top panel.



Figure 4: View of the inner spinning tub where laundry is placed.



Figure 5: The drain hose, used to expel water after the spin cycle.

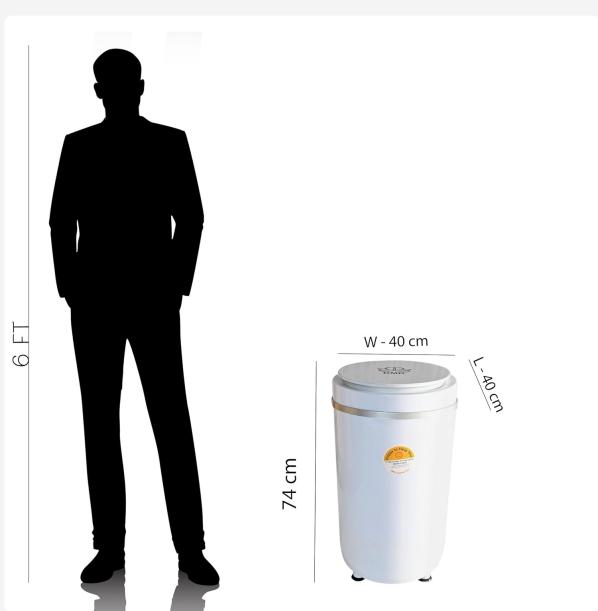


Figure 6: Product dimensions: 74 cm (Height), 40 cm (Width), 40 cm (Length).

4. SETUP

The DMR-DO-55A Spin Dryer is designed for "Plug and Play" convenience, requiring no complex installation. Follow these simple steps:

- 1. Unpacking:** Carefully remove the dryer from its packaging. Ensure all included components are present: 1 Dryer unit, 1 Inlet Pipe, 1 Cover for Dryer Tub, and this Product Manual cum warranty card.
- 2. Placement:** Place the dryer on a firm, flat, and stable surface. Ensure there is adequate space around the unit for ventilation and operation. Avoid placing it on uneven ground or soft carpets, which can cause excessive vibration.
- 3. Drainage:** Position the drain hose (Figure 5) to direct expelled water into a sink, drain, or bucket. Ensure the hose is not kinked or blocked.
- 4. Power Connection:** Plug the power cord into a standard 220 Volts AC power outlet.

5. OPERATING INSTRUCTIONS

Follow these steps to operate your DMR-DO-55A Spin Dryer:

- Load Laundry:** Open both the outer lid and the inner cover (Figure 2). Place your wet laundry evenly inside the spinning tub (Figure 4). Do not exceed the 5 kg capacity. For best results and to minimize vibration, distribute the clothes as evenly as possible around the drum.
- Secure Covers:** Place the cover for the dryer tub over the laundry and close both the inner cover and the outer lid securely. The dryer will not operate if the lid is not properly closed.
- Set Timer:** Turn the spin timer knob (Figure 3) clockwise to your desired spin time. The maximum spin time is 5 minutes. For most loads, 3-5 minutes is sufficient. The dryer will start automatically once the timer is set.
- Spin Cycle:** The dryer will spin at high speed, extracting water from the clothes. Water will be expelled through the drain hose.
- Completion:** Once the timer reaches zero, the dryer will automatically stop. Wait for the drum to come to a complete stop before opening the lid.
- Remove Laundry:** Open the lids and carefully remove your spin-dried laundry.

Note: This spin dryer removes approximately 80-90% of water. Clothes will still be damp and require further drying in open air or sunlight for complete dryness. This is not a hot air dryer.

6. MAINTENANCE

Regular maintenance ensures the longevity and efficient operation of your spin dryer:

- Cleaning the Tub:** After each use, wipe the inside of the spinning tub with a clean, damp cloth to remove any lint or residue.
- Exterior Cleaning:** Clean the exterior of the dryer with a soft, damp cloth. Do not use abrasive cleaners or solvents.
- Drain Hose:** Periodically check the drain hose for any blockages or kinks. Ensure it is clear for proper water drainage.
- Storage:** If storing the dryer for an extended period, ensure it is clean and dry. Store in a cool, dry place away from direct sunlight.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Dryer does not start.	<ul style="list-style-type: none">Not plugged in.Lid not securely closed.Timer not set.	<ul style="list-style-type: none">Ensure power cord is firmly plugged into a working outlet.Close the outer lid and inner cover completely.Turn the timer knob to the desired spin duration.
Excessive vibration or shaking.	<ul style="list-style-type: none">Uneven load distribution.Dryer not on a level surface.Overloaded.	<ul style="list-style-type: none">Stop the dryer, open the lid, and redistribute the laundry evenly in the tub.Ensure the dryer is placed on a firm, level surface.Reduce the amount of laundry to within the 5 kg capacity.

Problem	Possible Cause	Solution
Water not draining.	<ul style="list-style-type: none"> • Drain hose kinked or blocked. • Drain hose positioned too high. 	<ul style="list-style-type: none"> • Check the drain hose for any kinks or obstructions and clear them. • Ensure the drain hose is positioned lower than the dryer's drain outlet for gravity drainage.
Clothes still very wet after spin.	<ul style="list-style-type: none"> • Load too large or uneven. • Spin cycle too short. 	<ul style="list-style-type: none"> • Reduce load size and ensure even distribution. • Increase spin time up to the maximum 5 minutes. • Remember, this is a spin dryer, not a hot air dryer; clothes will still require air drying.

8. SPECIFICATIONS

Attribute	Detail
Brand	DMR
Model	DMR-DO-55A
Type	Semi-Automatic Spin Dryer (Drying Only)
Capacity	5 Kilograms
Motor Wattage	320 Watts
Voltage	220 Volts
Material	Plastic
Color	White
Form Factor	Top Load
Item Weight	7 kg 500 g
Item Dimensions (LxWxH)	38 x 38 x 69 Centimeters
Included Components	1 Dryer, 1 Inlet Pipe, 1 Cover for Dryer Tub, Product Manual cum warranty card

9. WARRANTY AND SUPPORT

Your DMR-DO-55A Semi-Automatic Spin Dryer comes with a **1 Year Free Spare Supply Warranty**. This warranty covers the supply of spare parts for a period of one year from the date of purchase.

For any service, support, or warranty claims, please contact the manufacturer/importer directly:

Manufacturer/Importer: Importer Lakshmi Electronics

Contact Numbers: 77758 11000 / 77759 11000

Please retain your purchase receipt and the product manual (which serves as your warranty card) for future reference and warranty claims.

© 2024 DMR. All rights reserved.

For more information, visit the [DMR Store on Amazon](#).