

## Reebok RV-ELE-U9-PCIC-BC

# Reebok Elements Digital Watch RV-ELE-U9-PCIC-BC User Manual

Model: RV-ELE-U9-PCIC-BC

[Introduction](#)   [Setup](#)   [Operating](#)   [Maintenance](#)   [Troubleshooting](#)   [Specifications](#)   [Warranty & Support](#)

## 1. INTRODUCTION

Thank you for choosing the Reebok Elements Digital Watch, model RV-ELE-U9-PCIC-BC. This manual provides essential information for the proper setup, operation, and maintenance of your watch. Please read these instructions carefully to ensure optimal performance and longevity of your device.

This digital watch is designed for everyday use, featuring a clear display, multiple functions, and water resistance up to 100 meters. Its durable construction with a silicone band and ABS case ensures comfort and resilience.

## 2. SETUP

### 2.1 Initial Power-On and Time Setting

Your watch comes with a pre-installed battery. Upon first use, the display should be active. If the display is blank, press any button to activate it. To set the time and date:

1. Press and hold the **MODE** button until the time display starts flashing, indicating setup mode.
2. Use the **ADJ** button to cycle through the settings (hours, minutes, year, month, day).
3. Use the **START/PAUSE** button to adjust the selected value.
4. Once all settings are correct, press the **MODE** button again to exit setup mode.

### 2.2 Adjusting the Watch Strap

The silicone strap is designed for a comfortable fit. Adjust the buckle to secure the watch snugly on your wrist. Ensure it is not too tight to avoid discomfort, nor too loose to prevent movement during activity.



Image: The Reebok Elements Digital Watch displayed on a wrist, showing the digital time and the silicone strap.

### **3. OPERATING THE WATCH**

#### **3.1 Button Functions**



Image: A close-up view of the Reebok Elements Digital Watch face, highlighting the labeled buttons: SET/LIGHT, MODE, START/PAUSE, and ADJ.

- **SET/LIGHT Button:** Press briefly to activate the backlight. Hold to enter or confirm settings in certain modes.
- **MODE Button:** Press to cycle through different modes: Time Display, Stopwatch, Alarm. Hold to enter time/date setting mode.
- **START/PAUSE Button:** Used to start/stop functions in Stopwatch mode or to increment values in setting modes.
- **ADJ Button:** Used to adjust or select items in setting modes.

### 3.2 Modes of Operation

- **Time Display Mode:** Shows the current time (hours, minutes, seconds) and date. This is the default display.
- **Stopwatch Mode:**
  - a. From Time Display, press **MODE** once to enter Stopwatch mode.
  - b. Press **START/PAUSE** to begin timing.
  - c. Press **START/PAUSE** again to pause.
  - d. Press **ADJ** to reset the stopwatch to zero.
- **Alarm Mode:**
  - a. From Stopwatch mode, press **MODE** once to enter Alarm mode.

- b. Hold **MODE** until the alarm time flashes.
- c. Use **ADJ** to select hours or minutes, and **START/PAUSE** to adjust the values.
- d. Press **MODE** to confirm and exit.
- e. Press **START/PAUSE** to toggle the alarm on/off.

## 4. MAINTENANCE

---

### 4.1 Cleaning Your Watch

To maintain the appearance of your watch, wipe it regularly with a soft, damp cloth. Avoid using harsh chemicals, solvents, or abrasive cleaners, as these can damage the watch's finish and materials.

### 4.2 Water Resistance

This watch is water resistant up to 100 meters (10 ATM). This means it is suitable for swimming, showering, and snorkeling. However, it is not recommended for scuba diving. Do not operate buttons while the watch is submerged in water, as this can compromise the water resistance seal.



Image: The rear view of the Reebok Elements Digital Watch, displaying the stainless steel case back with water resistance markings.

### 4.3 Battery Replacement

The watch uses a Silver Oxide battery. When the display becomes dim or functions become erratic, it may be time to replace the battery. Battery replacement should ideally be performed by a qualified watch technician to ensure the water resistance seal is properly maintained.

## 5. TROUBLESHOOTING

- **Display is blank or dim:** The battery may be low or depleted. Consider professional battery replacement.
- **Time is incorrect:** Re-enter the time setting mode and adjust the time and date as described in Section 2.1. Ensure the correct AM/PM setting if applicable.
- **Buttons are unresponsive:** Ensure the watch is not in a locked mode (if applicable, though this model does not feature a lock). If the issue persists, a low battery could be the cause.
- **Water inside the watch:** If moisture appears inside the watch, immediately take it to a qualified service center. Do not attempt to open the watch yourself, as this will void the warranty and may cause further damage.

## 6. SPECIFICATIONS

<b>Model Number</b>	RV-ELE-U9-PCIC-BC
<b>Brand</b>	Reebok
<b>Display Type</b>	Digital
<b>Case Material</b>	Acrylonitrile Butadiene Styrene (ABS)
<b>Band Material</b>	Silicone
<b>Closure Type</b>	Buckle
<b>Water Resistance Depth</b>	100 Metres (10 ATM)
<b>Product Dimensions</b>	4.35 x 2.2 x 1.35 cm (43 x 22 x 13 Millimeters)
<b>Item Weight</b>	50 g
<b>Battery Cell Type</b>	Silver Oxide
<b>Target Audience</b>	Unisex

## 7. WARRANTY AND SUPPORT

### 7.1 Warranty Information

This Reebok Elements Digital Watch comes with a Limited Warranty. Please refer to the warranty card included with your purchase for specific terms, conditions, and duration of coverage. The warranty typically covers manufacturing defects but does not cover damage caused by misuse, accidents, unauthorized repairs, or normal wear and tear.

### 7.2 Customer Support

For any questions, service, or support regarding your Reebok watch, please contact the manufacturer or importer directly:

- **Manufacturer:** Time Network Limited
- **Importer/Packer:** Bizotico, 3rd Floor, RT Nagar Main Road, Bangalore, India - 560032

- **Email:** [customercare@bizotico.com](mailto:customercare@bizotico.com)
- **Phone:** +91 80 2353 5166

When contacting support, please have your watch model number (RV-ELE-U9-PCIC-BC) and proof of purchase readily available.