



[Manuals.plus](#) /

› [Beurer](#) /

› Beurer HS 50 Ocean Hair Straightener User Manual

Beurer HS 50 Ocean (59400)

Beurer HS 50 Ocean Hair Straightener User Manual

Model: HS 50 Ocean (59400)

1. INTRODUCTION

Thank you for choosing the Beurer HS 50 Ocean Hair Straightener. This device is designed to provide smooth, shiny hair with its ceramic keratin coating and versatile styling options. Please read this instruction manual carefully before first use and keep it for future reference. It contains important information regarding safety, operation, maintenance, and troubleshooting.



Figure 1.1: Beurer HS 50 Ocean Hair Straightener. This image shows the teal-colored hair straightener with its LED display and control buttons, along with its packaging in the background.

2. SAFETY INSTRUCTIONS

WARNING: This appliance heats up to high temperatures. To avoid burns, do not touch the heating plates during use. Keep out of reach of children. Do not use near water or flammable materials. Always unplug after use.

- Always ensure the voltage indicated on the appliance corresponds to your local mains voltage before connecting.
- Do not use the appliance in a bathroom or near water (e.g., bathtub, shower, washbasin).
- Never immerse the appliance in water or other liquids.
- Do not use the appliance with wet hands.
- Unplug the appliance immediately after use and before cleaning.
- Allow the appliance to cool down completely before storing.
- Do not leave the appliance unattended when plugged in.
- Keep the power cord away from hot surfaces.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent, or similarly qualified persons in order to avoid a hazard.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning

use of the appliance in a safe way and understand the hazards involved.

3. PRODUCT OVERVIEW

3.1 Components

- Ceramic Keratin Coated Heating Plates
- LED Temperature Display
- Temperature Control Buttons (+/-)
- Power Button
- Swivel Cord (360°)
- Transport Lock
- Hanging Loop

3.2 Key Features

- **Ceramic Keratin Coating:** Ensures smooth gliding through hair, providing flexibility and shine.
- **Variable Temperature Settings:** Adjustable from 120°C to 220°C to suit all hair types. The selected temperature is shown on the LED display.
- **Automatic Shut-off:** The device automatically turns off after 30 minutes of inactivity for safety.
- **Spring-Mounted Heating Plates:** Adapt optimally to each hair strand, allowing for versatile styling (straight, curly, or wavy).
- **Temperature Lock:** Prevents accidental temperature changes during use.
- **Transport Lock:** Keeps the heating plates closed for safe and easy storage and transport.

4. SETUP

1. **Unpacking:** Carefully remove the hair straightener from its packaging.
2. **Initial Inspection:** Check the appliance for any visible damage. Do not use if damaged.
3. **Placement:** Place the straightener on a heat-resistant, flat surface during use.
4. **Connecting to Power:** Plug the power cord into a suitable electrical outlet.

5. OPERATING INSTRUCTIONS

5.1 Turning On/Off

- To turn on, press and hold the power button until the LED display illuminates.
- To turn off, press and hold the power button again until the display turns off.

5.2 Temperature Adjustment

- Once powered on, use the '+' and '-' buttons to adjust the temperature.
- The temperature can be set between 120°C and 220°C in increments.
- The LED display will show the current temperature setting.
- Allow a few moments for the straightener to reach the desired temperature. The availability indicator will signal when it's ready.



Niveaux de température variables

le fer à lisser peut être réglé entre 120° et 220° C

Figure 5.1: Variable Temperature Levels. The image highlights the LED display showing '180°C' and the plus/minus buttons for temperature adjustment, indicating the range of 120°C to 220°C.

5.3 Temperature Lock

- To lock the selected temperature, press the power button briefly. A lock icon will appear on the display.
- To unlock, press the power button briefly again.

5.4 Styling Tips

- Ensure hair is clean, dry, and tangle-free before styling.
- For straightening, take a small section of hair and place it between the heating plates. Gently glide the straightener from roots to ends.
- For curling or waving, rotate the straightener 180 degrees as you glide it down the hair section.
- The spring-mounted plates ensure even pressure and optimal contact with the hair.



Style parfait et polyvalent

les plaques chauffantes s'adaptent de manière optimale à chaque mèche de cheveux

Figure 5.2: Versatile Styling. This image shows a woman using the straightener to style her hair, emphasizing how the plates adapt for various styles.



Articulation à 360°

pour un coiffage flexible et une application confortable

Figure 5.3: 360° Articulation. The image highlights the swivel cord, allowing for flexible styling and comfortable application without tangling the cord.

5.5 Automatic Shut-off

- For your safety, the Beurer HS 50 Ocean Hair Straightener is equipped with an automatic shut-off function.
- If the appliance is not used for approximately 30 minutes, it will automatically turn off.
- To resume use, simply turn the appliance back on.



Figure 5.4: Automatic Shut-off. This image visually confirms the automatic shut-off feature after 30 minutes of inactivity.

6. MAINTENANCE AND CARE

6.1 Cleaning

1. Always unplug the appliance and allow it to cool down completely before cleaning.
2. Wipe the heating plates and the exterior of the appliance with a soft, damp cloth.
3. Do not use abrasive cleaners or harsh chemicals, as these can damage the coating and surface.
4. Ensure no water enters the appliance.

6.2 Storage

- After cleaning and ensuring the appliance is cool, engage the transport lock to keep the plates closed.
- Store the hair straightener in a dry place, away from direct sunlight and moisture.
- You can use the hanging loop for convenient storage.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Appliance does not turn on.	Not plugged in correctly; Power outlet issue; Appliance malfunction.	Check power connection; Try a different outlet; Contact customer support if issue persists.
Appliance not heating up.	Not turned on; Temperature not set; Malfunction.	Ensure appliance is on; Adjust temperature using +/- buttons; Contact customer support.
Automatic shut-off activates too soon.	Appliance was inactive for 30 minutes.	This is a safety feature. Turn the appliance back on to continue use.
Temperature display is not working.	Malfunction.	Unplug and plug back in. If issue persists, contact customer support.

8. SPECIFICATIONS



Figure 8.1: Product Dimensions and Key Features. This image provides a visual summary of the straightener's dimensions (35.4 cm length) and lists key features like fast heating, temperature range, auto shut-off, plate lock, 360° swivel, and product dimensions.

Specification	Value
Model Name	HS 50 Ocean
Model Number	59400
Brand	Beurer
Material	Ceramic
Color	Ocean
Dimensions (L x W x H)	29.3 x 3.2 x 3.2 cm (Product); 35.4 x 8.6 x 5.6 cm (Packaging)
Item Weight	470 Grams
Power Source	Corded Electric
Temperature Range	120°C to 220°C
Automatic Shut-off	After 30 minutes
Hair Type Compatibility	All hair types
Country of Origin	China

9. WARRANTY AND SUPPORT

Beurer products are designed for reliability and durability. For information regarding warranty terms and conditions, please refer to the warranty card included with your product or visit the official Beurer website. For technical support, spare parts, or service inquiries, please contact Beurer customer service through their official channels.

Please retain your proof of purchase for any warranty claims.