

[Manuals.plus](#) /

› [ASHATA](#) /

› ASHATA Mini Sport DV Camcorder User Manual

## ASHATA ASHATAwrz6mgqent

# ASHATA Mini Sport DV Camcorder User Manual

Model: ASHATAwrz6mgqent

## INTRODUCTION

This manual provides comprehensive instructions for the ASHATA Mini Sport DV Camcorder. Please read this manual carefully before using the device to ensure proper operation and to maximize its performance. This portable action camera is designed for capturing high-definition video and photos during various outdoor activities.



## PACKAGE CONTENTS

Please verify that all items listed below are included in your package:

- 1 x Sport DV Camera
- 1 x Camera Holder
- 1 x Bike Mount
- 1 x Car Mount
- 1 x USB Charging Cable
- 1 x Strap
- 1 x User Manual (this document)



Image: All components included in the ASHATA Mini Sport DV Camcorder package, including the camera, various mounts, and accessories.

## PRODUCT OVERVIEW

The ASHATA Mini Sport DV Camcorder features a cylindrical design with a wide-angle lens. Key components include:

- **Lens:** 120-degree wide-angle lens for broad field of view.
- **Power/Mode Button:** Controls power and switches between video/photo modes.
- **Record/Shutter Button:** Initiates recording or takes photos.
- **Indicator Lights:** Provide status feedback (e.g., power, recording, charging).

- **Micro SD Card Slot:** For storage of recorded media.
- **USB Port:** For charging and data transfer.



Image: A detailed view of the ASHATA Mini Sport DV Camcorder with its end cap removed, revealing the Micro SD card slot and USB charging port.

## SETUP

### 1. Charging the Battery

Before first use, fully charge the camera's built-in 600mAh lithium battery. Connect the camera to a USB power source (e.g., computer USB port or USB wall adapter) using the provided USB charging cable. The indicator light will show charging status and turn off when fully charged. Charging typically takes about 2 hours.

### 2. Inserting a Micro SD Card

The camera requires a Micro SD card (not included) for storing videos and photos. It supports cards from 2GB to 32GB. Ensure the card is formatted to FAT32 before use. Carefully insert the Micro SD card into the designated slot until it clicks into place. To remove, gently push the card in again until it springs out.

### 3. Mounting the Camera

The camera comes with various mounts for different applications:

- **Camera Holder:** Use this base holder to attach the camera to other mounts.
- **Bike Mount:** Securely attach the camera to bicycle handlebars or frames.
- **Car Mount:** For in-vehicle recording.

Attach the camera to the desired mount by aligning the camera's base with the mount's connector and securing it firmly. Ensure the camera is stable before use.



Image: The ASHATA Mini Sport DV Camcorder mounted on its camera holder, ready for attachment to other accessories like bike or car mounts.

## OPERATING INSTRUCTIONS

### Power On/Off

- **To Power On:** Press and hold the Power/Mode button until the indicator light illuminates.
- **To Power Off:** Press and hold the Power/Mode button until the indicator light turns off.

### Recording Video

The camera supports 1080P (1920x1080 at 30fps) and 720P (1280x720 at 30fps) video resolutions.

1. Ensure the camera is powered on.
2. Press the Power/Mode button to select the desired video resolution (if applicable, some models may have a physical switch for this).
3. Press the Record/Shutter button once to start recording. The indicator light will change to indicate recording is in progress.
4. Press the Record/Shutter button again to stop recording. The indicator light will revert to standby

mode.



Image: The ASHATA Mini Sport DV Camcorder attached to a cyclist's helmet, demonstrating its use during outdoor sports activities.

## Taking Photos

The camera can also capture still images in JPG format.

1. Ensure the camera is powered on and in photo mode (if applicable).
2. Press the Record/Shutter button once to take a photo. The indicator light may flash briefly.

## Connecting to a Computer

To access recorded files, connect the camera to your computer using the USB cable. The camera will appear as a removable disk drive. You can then transfer or view your files. Compatible operating systems include Windows 2000/XP/Vista/Windows 7 and OS X OS 10.3.6 or above.

## MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the camera body. For the lens, use a specialized lens cleaning cloth and solution. Avoid abrasive materials or harsh chemicals.

- **Storage:** Store the camera in a cool, dry place away from direct sunlight and extreme temperatures. If storing for extended periods, ensure the battery is partially charged (around 50%) to prolong its lifespan.
- **Water Resistance:** The camera features an IPX-4 waterproof aluminum alloy shell, suitable for various outdoor conditions. However, it is not designed for submersion in water. Avoid exposing the USB port and SD card slot to moisture when the cap is open.

## TROUBLESHOOTING

**Camera does not power on or light flashes but no operation:**

This often indicates an issue with the Micro SD card. Ensure the card is within the supported capacity (2-32GB) and is of good quality. Try reformatting the card or using a different, known-good card.

**Poor video or photo quality:**

Ensure the lens is clean and free from smudges or dust. Verify that you are recording in the desired resolution (1080P for best quality). Ensure sufficient lighting in the recording environment.

**Battery not charging:**

Check the USB cable and power source. Ensure the cable is securely connected to both the camera and the power adapter/computer. Try a different USB port or power adapter.

**Camera not recognized by computer:**

Ensure the camera is powered on when connected. Try a different USB port on your computer. Verify your computer's operating system meets the system requirements (Windows 2000/XP/Vista/Windows 7, OS X OS 10.3.6 or above).

## SPECIFICATIONS

| Feature                 | Specification                                     |
|-------------------------|---------------------------------------------------|
| Lens Angle              | 120 degrees (A+ grade high-resolution wide angle) |
| Video Resolution        | 1920x1080P @ 30fps / 1280x720P @ 30fps            |
| Video Format            | AVI                                               |
| Photo Format            | JPG                                               |
| Photo Sensor Technology | CMOS                                              |
| Power Supply            | DC 5V                                             |
| Battery                 | Built-in 600mAh Li-battery                        |
| Charging Time           | Approximately 2 hours                             |
| Material                | Aluminum alloy (IPX-4 waterproof shell)           |
| Dimensions (H x D)      | Approx. 9 x 3 cm (3.54 x 1.18 in)                 |
| Weight                  | 325g (11.46 oz)                                   |
| Flash Memory Type       | Micro SD (supports 2-32GB)                        |
| Connectivity            | USB                                               |

## WARRANTY AND SUPPORT

---

ASHATA guarantees the product is brand new. For any problems or inquiries regarding your Mini Sport DV Camcorder, please contact ASHATA customer service. We are committed to providing satisfactory assistance.

For further support, please refer to the contact information provided with your purchase or visit the official ASHATA store page on Amazon: [ASHATA Store](#)

---