

Nobis A13 V ROUND

Nobis A13 V ROUND Pellet Stove User Manual

Model: A13 V ROUND | Brand: Nobis

1. INTRODUCTION

This manual provides essential information for the safe and efficient installation, operation, and maintenance of your Nobis A13 V ROUND pellet stove. Please read this manual thoroughly before using the appliance and keep it for future reference. Proper use and maintenance will ensure optimal performance and longevity of your pellet stove.

2. SAFETY INSTRUCTIONS

Always adhere to local building codes and regulations regarding the installation and operation of solid fuel burning appliances. Failure to do so may result in fire, property damage, personal injury, or death.

- **Installation:** Must be performed by a qualified technician. Ensure proper ventilation and clearances to combustible materials.
- **Fuel:** Use only high-quality wood pellets as specified by the manufacturer. Do not burn garbage, cardboard, or any other materials.
- **Operation:** Never leave the stove unattended during operation. Keep children and pets away from the hot surfaces.
- **Maintenance:** Regular cleaning and inspection are crucial. Disconnect power before performing any maintenance.
- **Fire Safety:** Keep a fire extinguisher readily available. Do not store flammable materials near the stove.

3. SETUP AND INSTALLATION

Proper installation is critical for the safe and efficient operation of your pellet stove. It is highly recommended that installation be carried out by a certified professional.

3.1 Unpacking

Carefully remove the stove from its packaging. Inspect for any damage that may have occurred during transit. Report any damage to your dealer immediately.

3.2 Placement and Clearances

The Nobis A13 V ROUND pellet stove requires specific clearances from combustible materials to prevent fire hazards. Refer to the diagram below for minimum distances. Ensure the floor beneath the stove is non-combustible or adequately protected.



Image: The Nobis A13 V ROUND pellet stove, showcasing its sleek black and bronze design with a visible flame through the front glass. This image illustrates the compact and modern appearance of the unit, suitable for various indoor settings.

- **Rear Clearance:** 10 cm
- **Side Clearance:** 15 cm
- **Front Clearance:** 100 cm (from glass)
- **Top Clearance:** 30 cm

3.3 Flue Gas Connection

Connect the stove to a suitable chimney or flue system according to local regulations. Ensure all connections are sealed properly to prevent leaks. The flue pipe should be made of appropriate materials and sized correctly for the stove's output.

3.4 Electrical Connection

The stove requires a standard electrical outlet (230V, 50Hz). Ensure the outlet is properly grounded and dedicated if possible. Do not use extension cords.

4. OPERATING INSTRUCTIONS

Familiarize yourself with the control panel and its functions before operating the stove.

4.1 Control Panel Overview

The control panel typically includes buttons for power, temperature adjustment, fan speed, and menu navigation. Refer to the specific diagram in your stove's packaging for exact button layout and functions.

4.2 Initial Start-up and Fuel Loading

1. Open the pellet hopper lid and fill with high-quality wood pellets. Do not overfill.
2. Ensure the ash pan is empty and correctly seated.
3. Close the hopper lid and the combustion chamber door securely.
4. Press the power button to turn on the stove. The ignition sequence will begin automatically.
5. Monitor the flame. If ignition fails, refer to the troubleshooting section.

4.3 Adjusting Settings

Use the control panel to adjust the desired room temperature and fan speed. The stove will automatically modulate its heat output to maintain the set temperature. The Nobis A13 V ROUND features natural ventilation, which means it relies on convection for heat distribution, minimizing fan noise.

4.4 WiFi Connectivity

The stove is equipped with WiFi functionality, allowing remote control and monitoring via a dedicated mobile application. Follow the instructions provided with the stove's WiFi module for pairing and setup. This feature enables convenient management of your stove from anywhere.

4.5 Shutting Down the Stove

To turn off the stove, press and hold the power button. The stove will enter a cool-down cycle, during which the fan may continue to operate to dissipate residual heat. Do not unplug the stove during the cool-down cycle.

5. MAINTENANCE

Regular maintenance is essential for the safe and efficient operation of your pellet stove. Always ensure the stove is cool and unplugged before performing any cleaning or maintenance.

5.1 Daily/Weekly Cleaning

- **Ash Removal:** Empty the ash pan regularly, typically daily or every few days depending on usage. Use a metal container with a tight-fitting lid for ash disposal.
- **Burn Pot Cleaning:** Clean the burn pot (brazier) to remove any clinkers or unburnt pellets. Ensure air holes are clear.
- **Glass Cleaning:** Use a specialized glass cleaner for wood stoves to clean the ceramic glass door. Do not use abrasive cleaners.

5.2 Monthly/Seasonal Cleaning

- **Heat Exchanger Cleaning:** Clean the heat exchanger tubes to maintain efficiency. Refer to your stove's specific instructions for access.
- **Hopper Cleaning:** Periodically vacuum out the pellet hopper to remove any dust or fine particles.

5.3 Annual Service

It is highly recommended to have your pellet stove professionally serviced annually by a qualified technician. This includes thorough cleaning of the flue system, inspection of all components, and verification of proper operation.

6. TROUBLESHOOTING

This section addresses common issues you might encounter with your pellet stove. For problems not listed here, contact customer support.

Problem	Possible Cause	Solution
Stove does not ignite.	No pellets in hopper, clogged burn pot, faulty igniter, power interruption.	Check pellet level, clean burn pot, check power supply, contact service if igniter is suspected.
Low heat output.	Poor quality pellets, dirty heat exchanger, incorrect settings.	Use recommended pellets, clean heat exchanger, adjust temperature settings.
Excessive smoke.	Blocked flue, poor draft, wet pellets.	Inspect and clean flue, ensure proper ventilation, use dry pellets.
Error code displayed.	Specific system malfunction.	Refer to the stove's display manual for specific error code meanings and solutions. Contact support if persistent.

7. TECHNICAL SPECIFICATIONS

Feature	Detail
Model	A13 V ROUND
Brand	Nobis
Product Dimensions	53 x 530 x 125 cm (Depth x Width x Height)
Color	Black
Material	Metal
Drive Type	Corded Electric
Heating Coverage	Suitable for spaces up to 1,200 sq meters <i>(Note: This value is provided by the manufacturer and may refer to a specific calculation method or unit. Actual heated area may vary.)</i>
Plug Profile	Freestanding
Special Features	Natural Ventilation, WiFi Connectivity, 5-Star Certified

8. WARRANTY INFORMATION

Your Nobis A13 V ROUND pellet stove comes with a manufacturer's warranty. Please refer to the separate warranty card included with your product for specific terms, conditions, and duration. Keep your proof of purchase for warranty claims.

9. CUSTOMER SUPPORT

For technical assistance, spare parts, or any questions regarding your Nobis pellet stove, please contact your authorized dealer or Nobis customer service.

Contact Information:

Website: www.nobis.it

Email: support@nobis.com

Phone: +XX XXX XXX XXXX

© 2024 Nobis. All rights reserved. Information in this manual is subject to change without notice.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Email

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Details

Submit question