



Manuals.plus /

- › LEGO /
- › LEGO Super Mario The Mighty Bowser 71411 Instruction Manual

LEGO 71411

LEGO Super Mario The Mighty Bowser 71411 Instruction Manual

Model: 71411 | Brand: LEGO

INTRODUCTION

This manual provides detailed instructions for assembling, operating, and maintaining your LEGO Super Mario The Mighty Bowser 71411 building kit. Designed for adult builders and Super Mario enthusiasts, this set allows you to construct a highly detailed and posable 3D model of Bowser, complete with an interactive battle platform.

The set contains 2,807 pieces and is recommended for ages 18 and up, offering a challenging yet rewarding building experience. Please read through all sections carefully to ensure proper assembly and to fully enjoy all the features of your Mighty Bowser model.

SETUP AND ASSEMBLY

Begin by unpacking all LEGO elements from the box. Organize pieces by color and type to facilitate the building process. The set includes a comprehensive step-by-step instruction booklet. Follow the instructions provided in the physical booklet for the most accurate and efficient assembly.

The construction of The Mighty Bowser is divided into several stages, each focusing on different sections of the model. Pay close attention to the piece count for each step to avoid missing any components.



Image: The Mighty Bowser 71411 box art, showcasing the assembled model on its battle platform.

The assembly process is designed to be engaging and may take several hours to complete due to the high piece count and intricate details. Take your time and enjoy each stage of the build.

OPERATING FEATURES

Once assembled, The Mighty Bowser model offers several interactive features:

- **Posable Figure:** Bowser features articulated arms, hands, legs, and tail, allowing for a variety of dynamic poses. His head and eyes can also rotate, controlled by hidden mechanisms.
- **Fireball Launcher:** Press a button located under Bowser's shell to open his mouth and activate the fireball launcher, sending a small flame element forward.
- **Battle Platform:** Display Bowser on the brick-built battle platform, which includes two towers designed for him to knock over. The platform also features a hidden POW Block and an Action Tag.
- **Interactive Play:** The Action Tag on the battle platform can interact with LEGO Mario, LEGO Luigi, or

LEGO Peach figures (sold separately) from LEGO Super Mario Starter Courses (71360, 71387, or 71403) for enhanced play experiences.



Image: Detailed view of Bowser's head, highlighting the posable jaw and rotating eyes.



Image: Close-up of Bowser's articulated arms, spiked bracelets, and detailed shell construction.

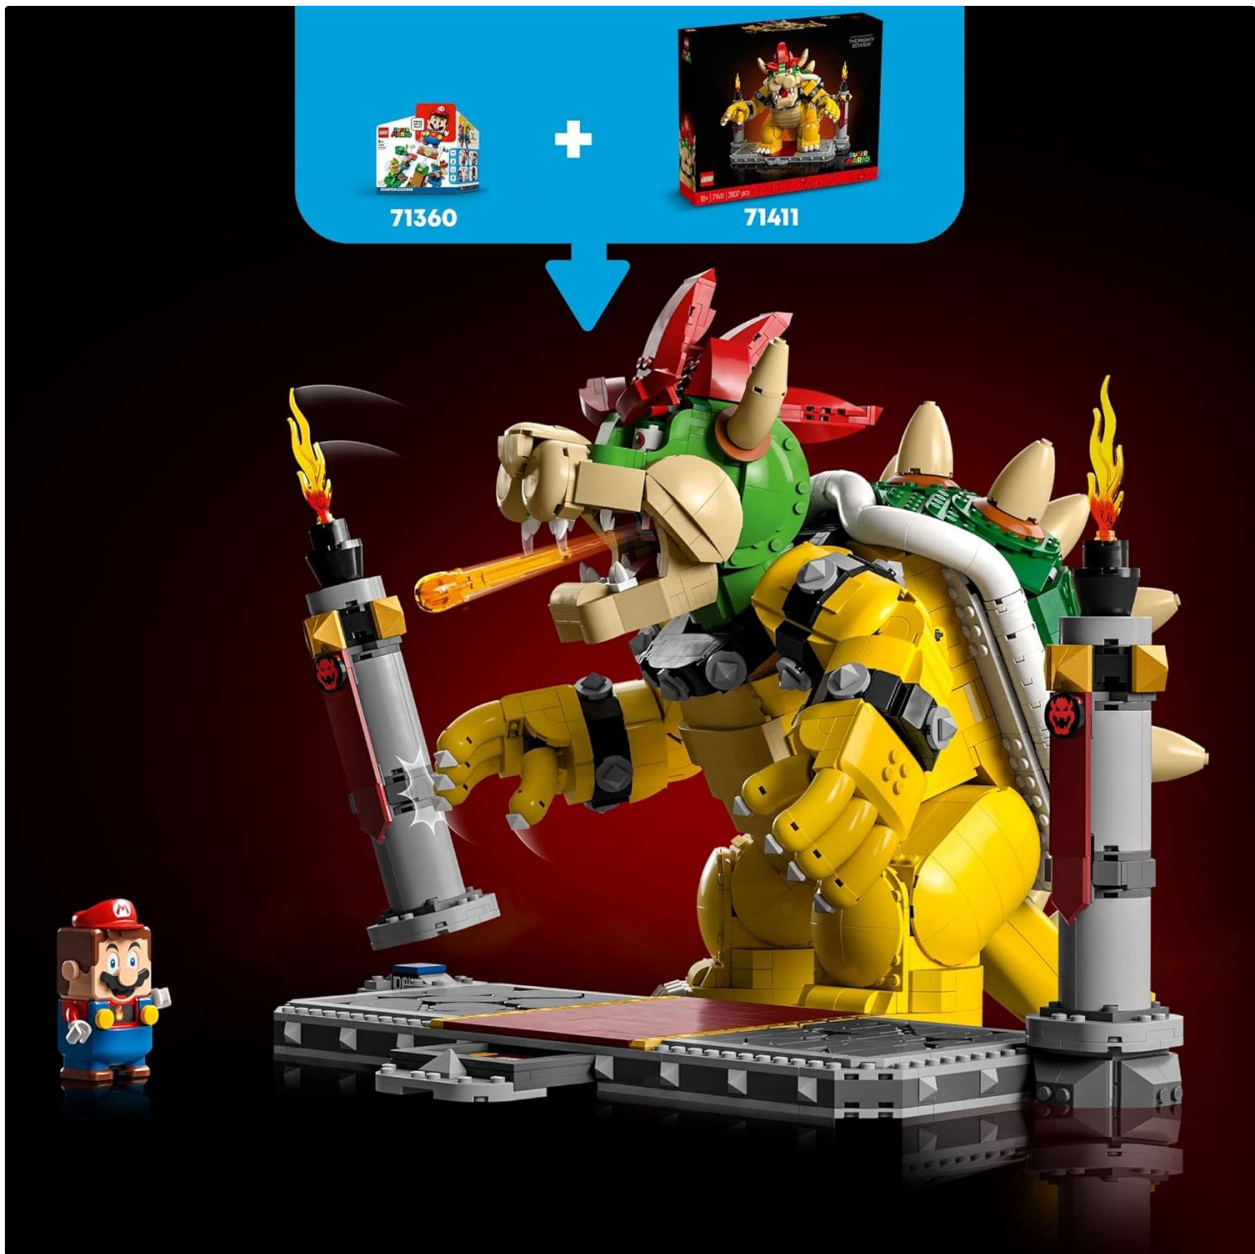


Image: The Mighty Bowser on his battle platform, demonstrating interaction with a LEGO Mario figure.

MAINTENANCE

To keep your LEGO Super Mario The Mighty Bowser set in optimal condition:

- **Cleaning:** Dust the model regularly with a soft, dry cloth or a soft-bristled brush. For deeper cleaning, gently wash individual LEGO bricks with mild soap and lukewarm water (not exceeding 40°C or 104°F). Rinse thoroughly and air dry. Avoid harsh chemicals or abrasive materials.
- **Storage:** Store the model in a cool, dry place away from direct sunlight to prevent discoloration or warping of plastic elements.
- **Handling:** Handle the model with care, especially when adjusting articulated parts, to prevent accidental disassembly.

TROUBLESHOOTING

If you encounter any issues during or after assembly:

- **Missing Pieces:** Double-check all packaging and sorting trays. If a piece is genuinely missing, contact LEGO Customer Service for replacement parts.
- **Assembly Errors:** Refer back to the instruction booklet for the specific step where the issue occurred. Disassemble and reassemble the affected section carefully.
- **Loose Connections:** Ensure all bricks are firmly pressed together. Some connections may require more force than others.
- **Functionality Issues:** If a feature like the fireball launcher or head rotation is not working correctly, inspect the internal mechanisms for any misaligned or incorrectly placed pieces.

SPECIFICATIONS

Feature	Detail
Brand	LEGO
Model Number	71411
Number of Pieces	2,807
Dimensions (H x W x D)	12.5 in. (32 cm) x 16 in. (41 cm) x 11 in. (28 cm)
Material	Plastic
Recommended Age	18+
Interactive Features	Posable limbs, rotating head/eyes, fireball launcher, interactive battle platform

WARRANTY AND SUPPORT

LEGO products are manufactured to high-quality standards. If you experience any issues with your set, such as missing or defective parts, please visit the official LEGO website for support. You can typically find information on replacement parts, building instructions, and frequently asked questions in their customer service section.

For direct assistance, contact LEGO Customer Service through their website or the contact information provided in your product packaging. Please have your model number (71411) and proof of purchase ready when contacting support.

