

[manuals.plus](#) /

› [Autel](#) /

› [Autel MaxiBAS BT506 Car Battery Tester User Manual](#)

Autel BT506

Autel MaxiBAS BT506 Car Battery Tester User Manual

Model: BT506 | Brand: Autel

1. INTRODUCTION

The Autel MaxiBAS BT506 is an advanced battery and electrical system analysis tool designed for comprehensive testing of 6V and 12V vehicle batteries, as well as 12V and 24V cranking/charging systems. Utilizing adaptive conductance technology, it provides accurate and detailed insights into battery health and performance.



Image: The Autel MaxiBAS BT506 unit with its red and black battery clamps, alongside its retail packaging.

2. KEY FEATURES

- Comprehensive Battery Analysis:** Tests 6V/12V batteries (FLOODED, AGM, AGM Spiral, EFB, GEL) with 100-2000 CCA capacity, adhering to CCA, SAE, CA, EN, IEC, DIN, JIS, and MCA standards.
- Cranking and Charging System Tests:** Evaluates starting system condition (voltage, current, run-up time) and charging system performance (current, no-load/load voltage, ripple).
- Advanced Adaptive Conductance:** Provides high-precision results, identifies cold cranking ability, tests low capacity/discharged batteries, and minimizes misjudgment rates.
- Smartphone & Autel Scanner Compatibility:** Operates via a free mobile app (iOS/Android) or integrates with compatible Autel wireless scanners.
- User-Friendly Operation:** Open system for easy connection, on-screen instructions, and clear data display.
- Reporting & Data Management:** Easy viewing, sharing, and printing of test reports; accurate battery location diagrams; record of test records and data logging.

- **Lifetime Free Software Updates:** Ensures the device remains up-to-date with the latest features and vehicle coverage.

3. WHAT'S IN THE BOX

- MaxiBAS BT506 Tester

Note: The BT506 comes with a lithium rechargeable battery. A USB charging cable is required but may not be included.

4. SETUP AND CONNECTION

4.1. App Installation and Account Registration

1. Download and install the MaxiAP200 App (or "Battery Test" app) from the App Store (iOS) or Google Play (Android) on your mobile device.
2. Register and log into your Autel account within the app. If you do not have an account, you can create one directly from the app.

2 TEST METHODS

No matter whether the battery is connected with vehicle or not

◀ Out-of Vehicle Test

In- Vehicle Test ►


Image: A smartphone displaying the steps to download the "Battery Test" app, register, and log in to an Autel account.

4.2. Device Pairing (Smartphone)

1. Scan the QR code located on the back of the BT506 unit using the app to bind the device with your smartphone.
2. Press and hold the power button on the BT506 tester to turn it on.
3. In the app, navigate to the "Me" icon at the bottom of the screen, then select "BAS Manager" to ensure successful connection and firmware updates.

USER-FRIENDLY FEATURES

Quick tests with accurate results

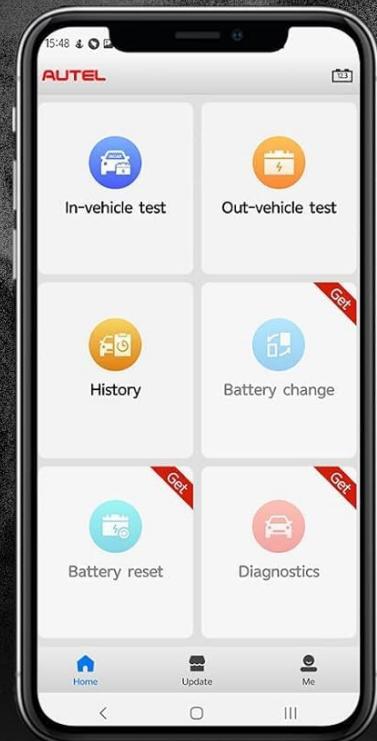

Operations needed before battery test

1. Turn off electrical accessories.

2. Turn off the ignition.

3. Close all the vehicle doors.

On-Screen Instructions

Image: A smartphone scanning the QR code on the back of the BT506 unit for Bluetooth pairing.

4.3. Device Pairing (Autel Scanner)

1. On your Autel scanner, open the "VCI Manager" app.
2. Bind the BT506 with your scanner.
3. Open the "Battery Test" app on the scanner to begin testing.

AUTEL BT506 - CAR BATTERY HEALTH GUARD!

Upgradeable to BT508 with the purchase of the MaxiVCI V200P

* Pls provide the SN to AUTEL for binding.

AUTEL	BT506	BT508
In- Vehicle/ Out-Vehicle Tests	✓	✓
Battery Test	✓	✓
Battery Replace	✗	✓
Battery Reset	✗	✓
Charging Test	✓	✓
Cranking Tests	✓	✓
Read/Clear Codes	✗	✓
Work with Autel Smart Scanners	✓	✗

Image: The Autel BT506 connected to a car battery, with a smartphone showing the app interface and various Autel scanners in the background, illustrating compatibility.

4.4. Connecting to the Battery

Connect the red (positive) clamp to the positive (+) battery terminal and the black (negative) clamp to the negative (-) battery terminal. The clamps are polarity protected, meaning incorrect connection will not damage the device, but the tester will indicate an error.

6V/12V BATTERY TESTER

Wide battery coverage

- Flooded
- AGM
- AGM_Spiral
- EFB
- GEL

CCA, CA, MCA, JIS, DIN, SAE, IEC, EN, EN2, BCI, GB

BATTERY RATINGS

100 - 2000 CCA

Image: The Autel BT506 connected to a car battery, highlighting its compatibility with 6V/12V batteries and 100-2000 CCA range, along with various battery types.

5. OPERATING INSTRUCTIONS

5.1. Out-of-Vehicle Battery Test

1. Connect the BT506 to the battery as described in Section 4.4.
2. In the app, select "Out-of-Vehicle Test".
3. Input the battery voltage (e.g., 12V), type (e.g., FLOODED, AGM), standard (e.g., CCA), and capacity (e.g., 370 CCA).
4. Tap "Start Testing". The app will display the battery's State of Health (SOH), State of Charge (SOC), voltage, measured capacity, and recommendations (e.g., "Good & Recharge").

HOW TO USE?

User-oriented & easy-to-use

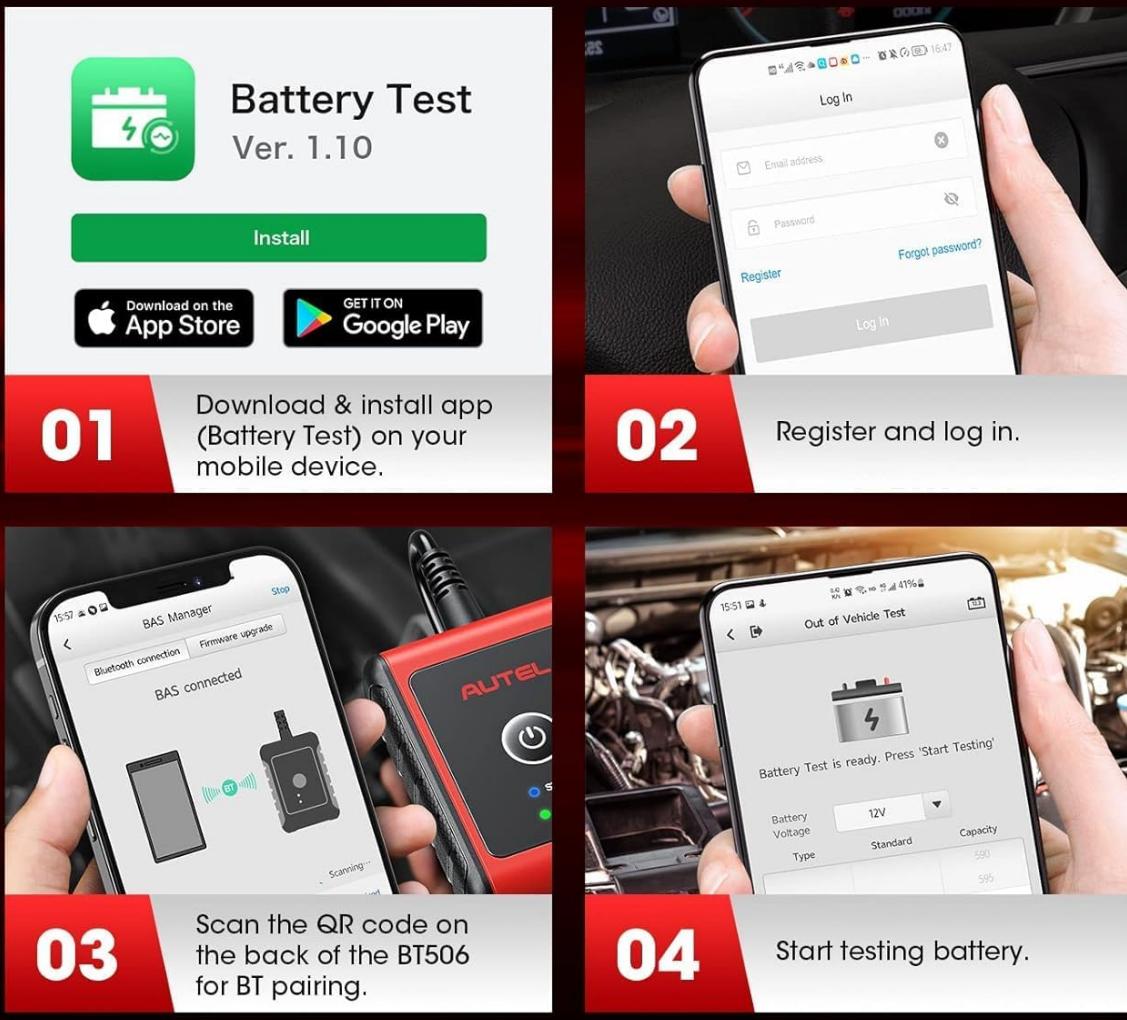


Image: A smartphone screen illustrating the four-step process to use the Autel BT506: download app, register/login, scan QR for pairing, and start battery test.

5.2. In-Vehicle Test (Battery, Cranking, Charging System)

For in-vehicle tests, ensure the BT506 is connected to the battery and the VCI is plugged into the vehicle's OBD2 port (if using a scanner) or the app is connected via Bluetooth.

USE WITH FREE MOBILE APP

Download the free mobile app, available for
iOS & Android devices



Compatible with Autel Smart Scanners

Image: The Autel BT506 connected to a car battery, with a smartphone showing the app's main menu, including options for in-vehicle test, out-vehicle test, history, and reporting features.

5.2.1. Pre-Test Preparations

- Turn off all electrical accessories (headlights, radio, A/C, etc.).
- Ensure the ignition is OFF.
- Close all vehicle doors.

5.2.2. Battery Test (In-Vehicle)

1. In the app, select "In-Vehicle Test".
2. Input vehicle information (VIN, Make, Year, Model) and battery details (Type, Standard, Capacity). The tool may auto-detect VIN.
3. Follow on-screen prompts to confirm pre-test conditions.
4. Tap "Start Testing". The app will display battery SOH, SOC, voltage, measured capacity, and recommendations.

5.2.3. Cranking System Test

1. After the battery test, the app will prompt for the starter test.
2. Ensure the ignition is OFF.
3. Start the vehicle's engine when prompted by the app.
4. The tool will measure starting voltage, current, run-up time, and engine parameters to assess the starter's condition.

5.2.4. Charging System Test (Alternator/Generator)

1. After the cranking test, the app will prompt for the generator test.
2. Follow on-screen instructions to test the alternator at idle (no electrical loads) and at sustained higher RPMs (e.g., 2000-3000 RPM).
3. The test will be repeated with electrical appliances (headlights, A/C) turned on to measure output under load.
4. The app will display ripple, no-load voltage, and load voltage to indicate the charging system's condition.



Image: The Autel BT506 unit with its clamps connected, illustrating its three main testing functions: Battery Test (6V/12V status), Starter Test (starting current/voltage), and Generator Test (charging system status).

5.3. Interpreting Test Results

- **SOH (State of Health):** Indicates the overall health and lifespan of the battery.
- **SOC (State of Charge):** Shows the current charge level of the battery.
- **Voltage:** Measures the battery's electrical potential.
- **Measured Capacity:** The actual CCA measured by the tester, compared to the rated CCA.
- **Recommendations:** The app provides clear recommendations such as "Good & Recharge," "Replace," or "Maintain battery again in 90 days."

5.4. Reporting and Data Logging

All test results are automatically saved in the app's history folder. You can view, print, or share these reports at any time. The BT506 also supports data logging for further analysis.

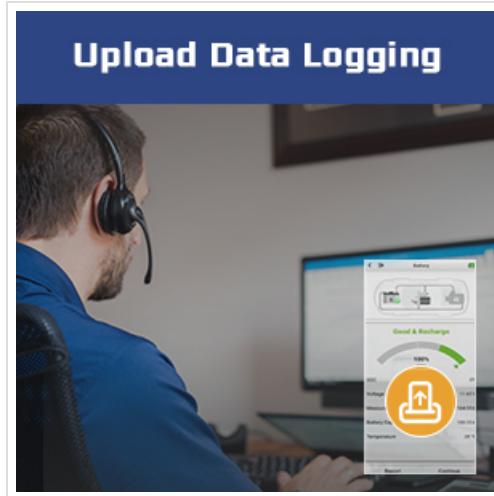



Image: A screenshot from the Autel app highlighting the data logging feature, allowing users to record and review test data.

6. BONUS FEATURES

- **Battery Location Diagrams:** Provides accurate diagrams to locate batteries within vehicles.
- **Upgrade to BT508:** By purchasing an extra V200P, you can upgrade your BT506 to BT508, unlocking additional functions like battery registration, battery replacement, and electrical reset functions.

MULTI-FUNCTIONAL BATTERY CHECKER

Check the health status of the battery/the starter/the generator

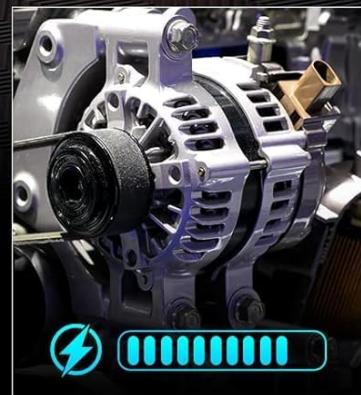

Battery Test

Check & analyze the real-time battery (6V/12V) status

Starter Test

Check & analyze the actual required starting current and voltage

Generator Test

Test & analyze the charging system status

Image: A comparison chart detailing the features of the Autel BT506 versus the upgraded BT508, showing additional capabilities of the latter.

7. SPECIFICATIONS

Specification	Value
Brand	Autel
Model	BT506
Power Source	Battery Powered
Min. Operating Voltage	6 Volts
Upper Temperature Rating	50 Degrees Celsius
Item Weight	1.21 pounds

Product Dimensions (L x W x H)	3.15 x 3.15 x 1.97 inches
Battery Testing Range	100-2000 CCA
Supported Battery Types	FLOODED, AGM, AGM Spiral, EFB, GEL
Supported Battery Standards	CCA, SAE, CA, EN, IEC, DIN, JIS, MCA

8. TROUBLESHOOTING

- Connection Issues:** Ensure clamps are securely attached to battery terminals. Check Bluetooth connection status in the app's BAS Manager.
- Incorrect Polarity:** The device is polarity protected. If clamps are reversed, the tester will indicate an error. Correct the connection.
- App Not Responding:** Close and restart the app. Ensure your mobile device's Bluetooth is enabled.
- Inaccurate Readings:** Verify correct battery type and CCA rating are entered in the app. Ensure all electrical loads are off during initial tests.

9. MAINTENANCE

- Keep the device clean and free from dirt, grease, and moisture.
- Store the device in a dry, cool place when not in use.
- Regularly check for firmware updates through the app to ensure optimal performance and compatibility.
- Ensure the internal rechargeable battery is adequately charged for reliable operation.

10. WARRANTY AND SUPPORT

The Autel MaxiBAS BT506 comes with a 1-year warranty. For any questions or support, please contact Autel customer service.

Lifetime Free Software Updates: This digital battery tester provides lifetime free software updates, ensuring you always have access to the latest features without additional costs.

11. OFFICIAL PRODUCT VIDEOS

Autel MaxiBAS BT506 Battery & Electrical System Analysis Tool Overview

Your browser does not support the video tag.

Video: An official overview of the Autel MaxiBAS BT506, demonstrating its features and capabilities for battery and electrical system analysis.

Autel BT506 Battery Tester Demo Video

Your browser does not support the video tag.

Video: A demonstration of the Autel BT506 Battery Tester in action, showcasing its ease of use and testing procedures.

Autel MaxiBAS BT506 Intelligent Battery Tester Features

Your browser does not support the video tag.

Video: A detailed look at the intelligent features of the Autel MaxiBAS BT506 Battery Tester.

Related Documents - BT506

<p><small>Trademarks</small> Autel®, MaxiCheck®, MaxiTPMS®, MaxiAP™, MaxiCheck™, MaxiTPMS™, and MaxiFender™ are trademarks of Autel Intelligent Technology (China) Co., Ltd., registered in China, the United States, and other countries. All other marks are trademarks or registered trademarks of their respective owners.</p> <p><small>Copyright Information</small> No part of this manual may be reproduced, stored in a retrieval system, or transmitted, in whole or in part, in any form or by any means, electronic, mechanical, photocopying, recording, or otherwise, without the prior written permission of Autel.</p> <p><small>Statement of Warranties and Limitations of Liability</small> Autel warrants that the products will be manufactured, delivered a return system as described in this manual, by any means, electronic, mechanical, photocopying, recording, or otherwise, without the prior written permission of Autel.</p> <p><small>For Services and Support</small> Autel Autel Authorized Service Center 1-800-202-0557 (North America) +86 (0755) 8814-1779 (China) For technical assistance in all other markets, please refer to Technical Support section in this manual.</p>	<p>MaxiBAS BT506 Battery & Electrical System Tester User Manual Autel Comprehensive user manual for the Autel MaxiBAS BT506 Battery & Electrical System Tester. Covers setup, operation, safety, in-vehicle/out-vehicle tests, maintenance, and troubleshooting for automotive diagnostics.</p>
<p><small>Trademarks</small> Autel®, MaxiCheck®, MaxiTPMS®, MaxiAP™, MaxiCheck™, MaxiTPMS™, and MaxiFender™ are trademarks of Autel Intelligent Technology (China) Co., Ltd., registered in China, the United States, and other countries. All other marks are trademarks or registered trademarks of their respective owners.</p> <p><small>Copyright Information</small> No part of this manual may be reproduced, stored in a retrieval system, or transmitted, in whole or in part, in any form or by any means, electronic, mechanical, photocopying, recording, or otherwise, without the prior written permission of Autel.</p> <p><small>Statement of Warranties and Limitations of Liability</small> Autel warrants that the products will be manufactured, delivered a return system as described in this manual, by any means, electronic, mechanical, photocopying, recording, or otherwise, without the prior written permission of Autel.</p> <p><small>For Services and Support</small> Autel Autel Authorized Service Center 1-800-202-0557 (North America) +86 (0755) 8814-1779 (China) For technical assistance in all other markets, please refer to Technical Support section in this manual.</p>	<p>Autel MaxiBAS BT506 Battery & Electrical System Tester User Manual User manual for the Autel MaxiBAS BT506, a battery and electrical system analysis tool. Learn about its functions, setup, in-vehicle and out-vehicle testing, maintenance, and safety precautions for automotive technicians.</p>
<p><small>USER MANUAL</small></p> <p><small>AUTEL</small></p> <p><small>MaxiCOM MK906S PRO & MK906S PRO-TS User Manual</small></p>	<p>Autel MaxiCOM MK906S PRO & MK906S PRO-TS User Manual User manual for the Autel MaxiCOM MK906S PRO and MK906S PRO-TS advanced smart wireless diagnostic devices, covering setup, diagnostics, TPMS, service functions, and battery testing.</p>
<p><small>USER MANUAL</small></p> <p><small>AUTEL</small></p> <p><small>MaxiPRO MP900-TS User Manual</small></p>	<p>Autel MaxiPRO MP900-TS User Manual: Comprehensive Guide to Vehicle Diagnostics Explore the Autel MaxiPRO MP900-TS User Manual for detailed instructions on vehicle diagnostics, TPMS services, battery testing, and more. This guide covers setup, operation, and maintenance of the MaxiPRO MP900-TS diagnostic tool.</p>

 <p>BRUGERMANUAL</p>	<p>MaxiTPMS ITS600 CV</p> <p>Denne omfattende brugervejledning til Autel MaxiTPMS ITS600 CV giver detaljerede instruktioner til brug, diagnostik og service af dæktryksovervågningssystemer (TPMS) på erhvervkøretøjer (CV) og lette erhvervkøretøjer (LCV). Lær om enhedens funktioner, sikkerhedsprocedurer og fejlfinding.</p>
<p>Trademarks</p> <p>Autel®, MaxiCOM®, MaxiTPMS®, MaxiStream®, MaxiTPMS™, MaxiStream™, and MaxiCheck™ are trademarks of Autel Intelligent Technology Co., Ltd. registered in the United States Patent and Trademark Office and/or other countries. All other trademarks are the property of their respective holders.</p> <p>Disclaimer</p> <p>Autel does not warrant that the material in this manual is error-free. Autel reserves the right to make changes at any time without notice. While the information in this manual has been carefully checked for accuracy, no guarantee is given for the correctness of the information. Autel is not responsible for any damages resulting from the use of this manual.</p> <p>Limitation of Liability</p> <p>All information, specifications and illustrations in this manual are based on the latest available data at the time of printing.</p> <p>Autel reserves the right to make changes at any time without notice. While the information in this manual has been carefully checked for accuracy, no guarantee is given for the correctness of the information. Autel is not responsible for any damages resulting from the use of this manual.</p> <p>Warranty</p> <p>Autel will not be liable for any direct, special, indirect, indirect damages or any consequential damages (including loss of profit).</p> <p>Environmental</p> <p>Before recycling or reusing this unit, please read this manual carefully.</p> <p>For Services and Support</p> <p> www.autel.com  1-855-387-8571 (US/Canada)  support@autel.com <p>For technical assistance in all other markets, please contact your local selling agent.</p> </p>	<p>Autel MaxiCOM MK808TS User Manual - Comprehensive Diagnostic Tool Guide</p> <p>Explore the Autel MaxiCOM MK808TS user manual. This guide details its advanced automotive diagnostic features, including OBDII, TPMS services, battery testing, and service functions. Visit Autel.com for more information.</p>