

[Manuals.plus](#) /

> [MONXOOK](#) /

> MONXOOK Electric Panini Press, 750W Sandwich Press, Non-Stick Coated Plates 8.46INx4.92IN, Panini Press Sandwich Maker with Indicator Lights, Cool Touch Handle, Black 750w 2-slice

MONXOOK ABS07A-G

MONXOOK Electric Panini Press User Manual

Model: ABS07A-G | Brand: MONXOOK

INTRODUCTION

The MONXOOK Electric Panini Press is a versatile kitchen appliance designed for quick and efficient cooking. With its 750W power output and dual heating plates, it ensures fast and even cooking for a variety of meals. Its compact design and non-stick surfaces make it a convenient addition to any kitchen.

MONXOOK

750W Panini Press

Allows you to quickly enjoy
a variety of different cuisines!



Image: The MONXOOK 750W Panini Press, highlighting its core function and power.

SAFETY INFORMATION

Please read all instructions carefully before using the appliance. Keep this manual for future reference.

- Always ensure the appliance is unplugged when not in use or before cleaning.
- Do not immerse the appliance, cord, or plug in water or other liquids.
- Use the appliance on a stable, heat-resistant surface.
- The cool-touch handle is designed for safe operation, but exercise caution as cooking surfaces will be hot.
- Keep out of reach of children.
- Do not operate the appliance if the cord or plug is damaged.

SETUP

Before first use, wipe the non-stick cooking plates with a damp cloth and dry thoroughly. Ensure the appliance is placed on a flat, stable surface.



Image: Close-up of the panini press highlighting anti-slip feet, indicator lights, and safety lock for secure operation.



Image: Detail of the anti-slip feet, ensuring stability during use.



Image: Close-up of the cool-touch handle for safe operation.

OPERATING INSTRUCTIONS

1. ****Preheating****: Plug the appliance into a suitable power outlet. The red indicator light will illuminate, signaling that the unit is powered on and beginning to preheat. The green indicator light will turn on when the unit has reached the optimal cooking temperature.
2. ****Temperature Control****: Use the dial on the front panel to adjust the desired temperature, ranging from 'Light' to 'Dark' for varying levels of crispness.
3. ****Cooking****:
 - ****Panini/Sandwich Mode****: Place your sandwich or food item on the bottom cooking plate. Gently lower the top plate until it rests on the food. The floating hinge allows for even pressure on various food thicknesses.
 - ****Open Grill Mode (180-degree)****: The panini press can open 180 degrees to lay flat, providing a larger grilling surface. This is ideal for grilling steaks, burgers, chicken, vegetables, or making pancakes and omelets.
4. ****Grease Collection****: For foods that release grease, ensure the included grease collection cup is placed under the designated hole at the back of the unit to catch excess oils.
5. ****Completion****: Once cooking is complete, carefully remove the food using a heat-resistant utensil. Unplug the appliance.



Image: The panini press in action, showcasing a perfectly grilled panini.



Image: Illustrates the multi-functional use of the appliance for paninis, pancakes, eggs, steak, and grilling.

Perfect For Grilling Steak, Panini Press, Burgers, Chicken and Vegetables.



Image: The panini press used in open grill mode, suitable for grilling meats and vegetables.

MAINTENANCE AND CLEANING

The non-stick coated plates ensure easy food release and quick cleaning.

- Always unplug the appliance and allow it to cool completely before cleaning.
- Wipe the cooking plates with a soft, damp cloth or sponge. Do not use abrasive cleaners or scouring pads, as they may damage the non-stick coating.
- The exterior can be wiped with a damp cloth.
- The grease collection cup should be emptied and washed after each use.



Image: Demonstrates the ease of cleaning the non-stick cooking plates with a soft cloth.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Appliance does not turn on.	Not plugged in; power outlet malfunction.	Ensure plug is securely inserted; try a different outlet.
Food sticks to plates.	Plates not properly cleaned; insufficient preheating.	Clean plates thoroughly; allow unit to fully preheat until green light illuminates.
Uneven cooking.	Food not evenly distributed; unit not fully preheated.	Ensure food is spread evenly; allow unit to fully preheat.

SPECIFICATIONS

Feature	Detail
Brand	MONXOOK
Model Number	ABS07A-G
Wattage	750 watts
Product Dimensions	8.27"D x 8.66"W x 3.23"H
Item Weight	1.98 pounds
Material	Stainless Steel, Aluminum, Plastic
Special Feature	Non-stick coated plate, Manual
Voltage	120V
Material Type Free	BPA Free



All products are ETL certified, ensuring safety and quality.

WARRANTY AND SUPPORT

The MONXOOK Electric Panini Press comes with a Limited Warranty. For any product inquiries or support, please refer to the contact information provided in your product packaging or visit the official MONXOOK store online.

© 2025 MONXOOK. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question