

[Manuals.plus](#) /

› [Homemory](#) /

› Homemory 24-Pack Flameless LED Tea Lights Candles Instruction Manual

Homemory HBKZS

Homemory 24-Pack Flameless LED Tea Lights Candles Instruction Manual

Brand: Homemory

Model: HBKZS

INTRODUCTION

Welcome to your Homemory Flameless LED Tea Lights. These battery-operated tea lights are designed to provide a warm, flickering glow, mimicking traditional candles without the associated risks of open flames, melted wax, or heat. Ideal for various decorative purposes, they offer a safe and convenient lighting solution.



Image: Homemory flameless LED tea lights in decorative votive holders.

IMPORTANT SAFETY INFORMATION

Please read all safety instructions before using the product.

- **INGESTION HAZARD:** This product contains a button cell or coin battery.
- **DEATH or serious injury can occur if ingested.** A swallowed button cell or coin battery can cause internal chemical burns in as little as 2 hours.
- **KEEP new and used batteries OUT OF REACH OF CHILDREN.**

- **SEEK IMMEDIATE MEDICAL ATTENTION** if a battery is suspected to be swallowed or inserted inside any part of the body.
- Non-rechargeable batteries are not to be recharged.
- Do not force discharge, recharge, disassemble, heat above 60°C, or incinerate. Doing so may result in injury due to venting, leakage, or explosion resulting in chemical burns.
- Do not puncture, crush, or disassemble the batteries.
- Ensure the batteries are installed correctly according to polarity (+ and -).
- Do not mix old and new batteries, different brands or types of batteries, such as alkaline, carbon-zinc, or rechargeable batteries.
- Remove and immediately recycle or dispose of used batteries according to local regulations and keep away from children.
- Always completely secure the battery compartment. If the battery compartment does not close securely, stop using the product, remove the batteries, and keep them away from children.

PACKAGE CONTENTS

- 24 x Homemory Flameless LED Tea Lights (Warm White Glow – Ivory Body)
- 24 x CR2032 Batteries (pre-installed)

SETUP INSTRUCTIONS

1. **Unpack:** Carefully remove all tea lights from the packaging.
2. **Activate:** Each tea light has a small black ON/OFF switch located on its underside. Slide the switch to the "ON" position to activate the light.
3. **Placement:** Place the activated tea lights in your desired location. They are suitable for votive holders, wall sconces, or as standalone decorative elements.



Image: A full set of 24 Homemory flameless LED tea lights, ready for activation and placement.

Video: A demonstration of turning the tea lights on and off, and showcasing their use in various settings.

OPERATING INSTRUCTIONS

Operating your Homemory Flameless LED Tea Lights is straightforward:

- **To Turn On:** Locate the black switch on the bottom of each tea light and slide it to the "ON" position. The LED will illuminate with a flickering warm white glow.
- **To Turn Off:** Slide the switch back to the "OFF" position.

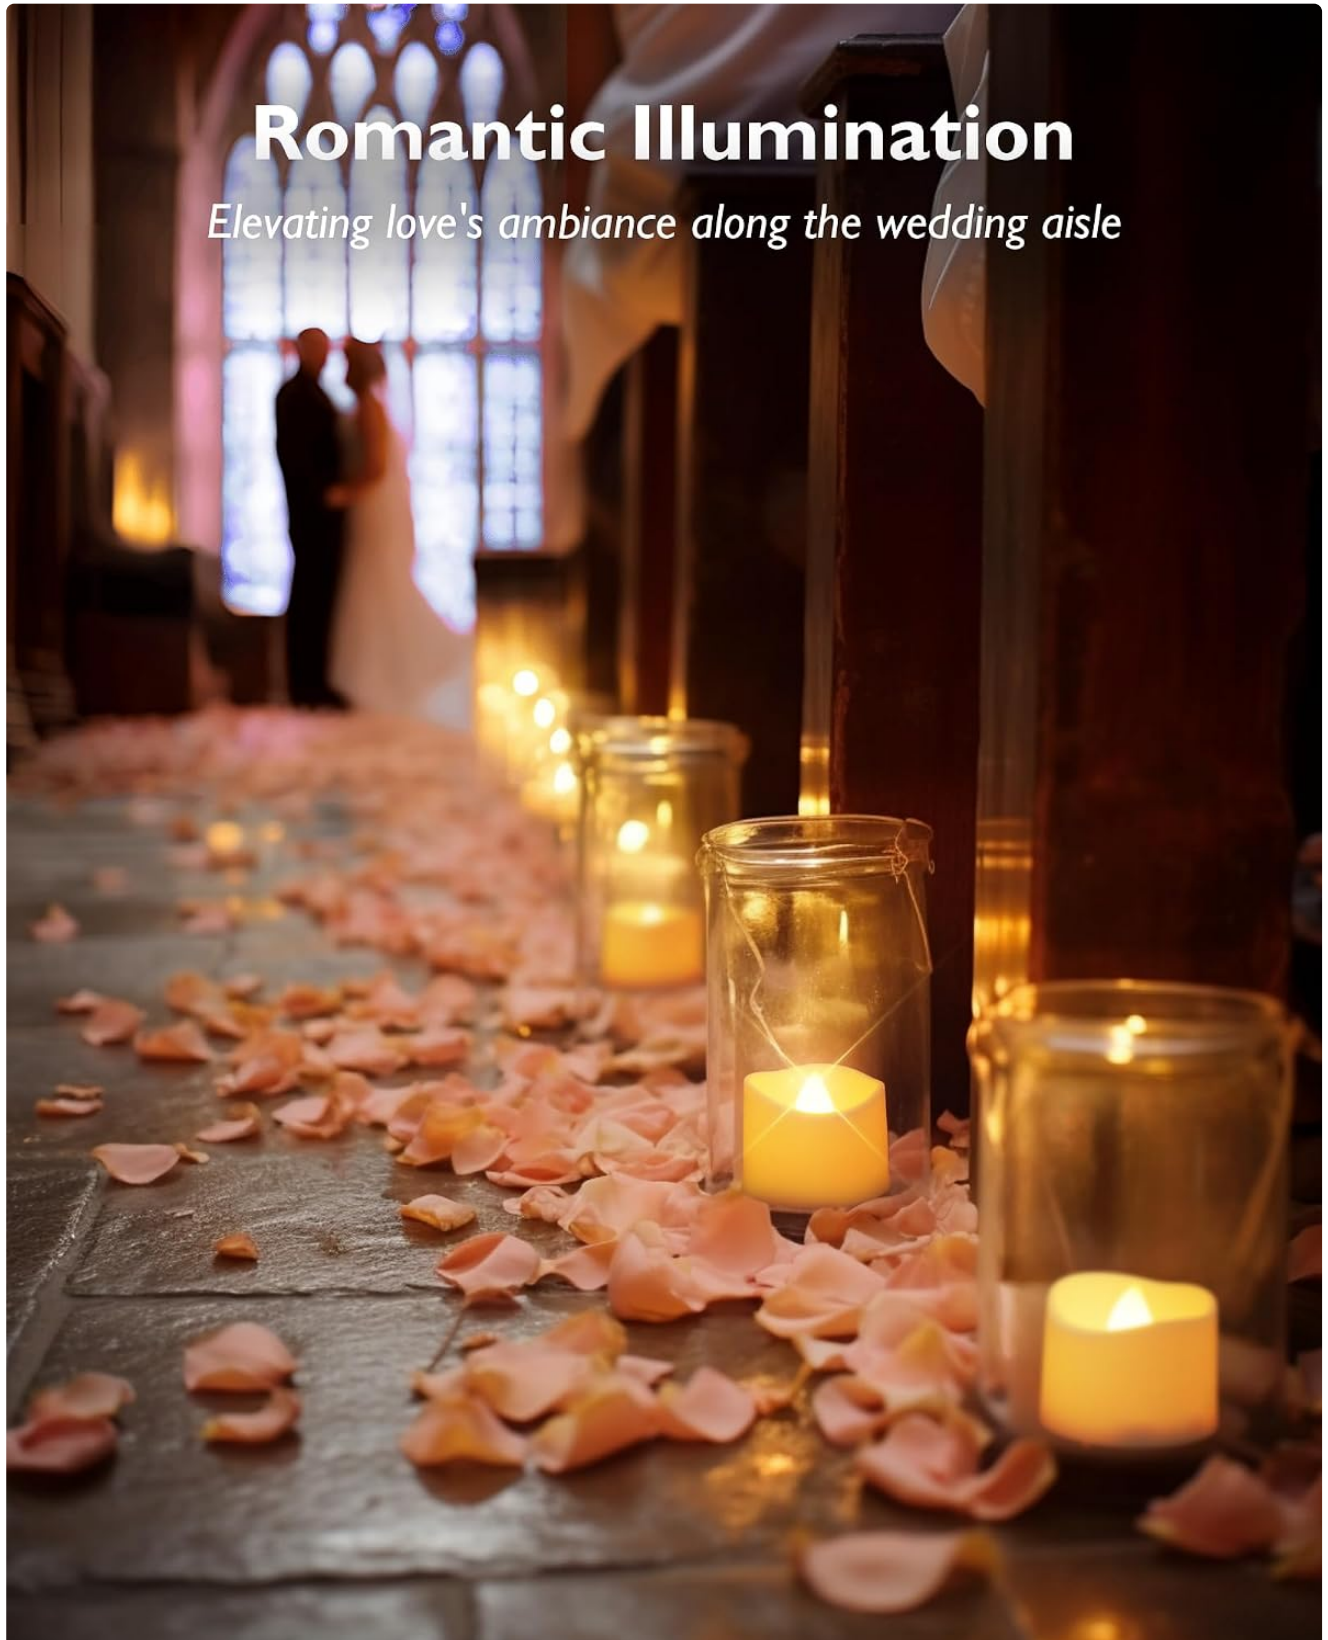


Image: A detailed view of the tea light's base, highlighting the accessible ON/OFF switch and the battery cover for easy operation and maintenance.

MAINTENANCE

Battery Replacement

- The Homemory Flameless LED Tea Lights are powered by CR2032 button cell batteries, which are pre-installed and offer over 200 hours of illumination. When the light dims or stops working, it's time to replace the battery.
- 1. Locate Battery Compartment:** Turn the tea light upside down. The battery compartment cover is located on the bottom.
 - 2. Open Compartment:** Use a small coin or screwdriver to gently twist the battery cover counter-clockwise to the "OPEN" position.
 - 3. Remove Old Battery:** Carefully remove the old CR2032 battery.
 - 4. Insert New Battery:** Insert a new CR2032 battery with the positive (+) side facing upwards.
 - 5. Close Compartment:** Replace the battery cover and twist it clockwise to the "CLOSE" position, ensuring it is securely fastened.

Cleaning

To clean your tea lights, simply wipe them with a soft, dry cloth. Do not use abrasive cleaners or immerse them in water.

Video: A short clip demonstrating the flickering effect and highlighting the long-lasting nature of the tea lights.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Tea light does not turn on.	Switch is in "OFF" position.	Slide the switch to the "ON" position.
Tea light is dim or flickers inconsistently.	Low battery.	Replace the CR2032 battery (refer to "Battery Replacement" section).
Tea light turns off unexpectedly.	Battery compartment not securely closed.	Ensure the battery compartment is securely closed.

PRODUCT SPECIFICATIONS

Feature	Detail
Brand	Homemory
Model Name	HBKZS
Product Dimensions	1.5"D x 1.5"W x 1.3"H
Item Weight	9.9 ounces (for 24-pack)
Light Source Type	LED
Light Color	Warm White
Body Color	Ivory

Feature	Detail
Material	Polypropylene
Power Source	Battery Powered
Battery Type	CR2032 (included)
Battery Life	200+ Hours
Switch Type	Toggle (ON/OFF)
Special Features	Flameless, Flickering, Indoor & Outdoor Use (Not Waterproof), No Timer & Remote
Number of Pieces	24

WARRANTY AND SUPPORT

For any questions, concerns, or support regarding your Homemory Flameless LED Tea Lights, please refer to the retailer's return policy or contact Homemory customer service through their official channels. Specific warranty details may vary by region and retailer.

© 2025 Homemory. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

