

ALLIMITY FSR78 ZV28960

Allimity FSR78 ZV28960 Replacement Remote Control User Manual for Yamaha Soundbars

Comprehensive instructions for setup, operation, and maintenance of your replacement remote control.

1. PRODUCT OVERVIEW

The Allimity FSR78 ZV28960 is a replacement infrared (IR) remote control designed for use with various Yamaha Soundbar models. This remote provides direct functionality without requiring any programming or setup, allowing immediate use upon battery installation.

Compatible Yamaha Soundbar Models:

- ATS-1060, ATS-1070, ATS-2070, ATS-1080, ATS-2090, ATS-4080
- YAS-106, YAS-107, YAS-108, YAS-207, YAS-1080
- NS-WSW42, YAS-CU207
- Musiccast Bar 400





Image 1.1: Front view of the Allimity FSR78 ZV28960 replacement remote control, showing all buttons and their labels. The remote is black with white and gray buttons.

2. SETUP

2.1 Battery Installation

The remote control requires two AAA batteries (not included). Follow these steps to install them:

1. Locate the battery compartment on the back of the remote control.
2. Press down on the latch and slide the battery cover downwards to open it.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery cover back into place until it clicks securely.





Image 2.1: Back view of the remote control, highlighting the battery compartment cover at the bottom.

2.2 Initial Use

This remote control is pre-programmed and does not require any additional setup or coding. Once batteries are installed, it is ready for immediate use with your compatible Yamaha Soundbar.

3. OPERATING INSTRUCTIONS

Point the remote control directly at your Yamaha Soundbar's IR receiver. Ensure there are no obstructions between the remote and the soundbar.

3.1 Button Functions

Button	Function
Power (Orange)	Turns the soundbar on or off.
HDMI	Selects the HDMI input source.
TV	Selects the TV input source.
ANALOG	Selects the analog input source.
BLUETOOTH	Selects Bluetooth input for wireless audio streaming.
SURROUND	Activates or deactivates surround sound mode.
STEREO	Activates or deactivates stereo sound mode.
CLEAR VOICE	Enhances dialogue clarity.
BASS EXTENSION	Boosts low-frequency audio output.
BLUETOOTH STANDBY	Enables or disables Bluetooth standby mode.
DIMMER	Adjusts the brightness of the soundbar's display indicators.
SUBWOOFER (+/-)	Adjusts the subwoofer volume level.

Button	Function
VOLUME (+/-)	Adjusts the main soundbar volume level.
MUTE	Mutes or unmutes the soundbar audio.

4. MAINTENANCE

4.1 Battery Replacement

Replace batteries when the remote's response becomes inconsistent or stops working. Always replace both batteries simultaneously with new AAA batteries. Do not mix old and new batteries, or different types of batteries.

4.2 Cleaning

To clean the remote control, use a soft, dry cloth. Do not use liquid cleaners, sprays, or abrasive materials, as these can damage the remote's surface or internal components.

4.3 Storage

When not in use for extended periods, it is recommended to remove the batteries to prevent leakage, which could damage the remote control. Store the remote in a cool, dry place away from direct sunlight and extreme temperatures.

5. TROUBLESHOOTING

5.1 Remote Not Responding

- **Check Batteries:** Ensure batteries are correctly inserted with the correct polarity (+/-) and are not depleted. Replace with fresh AAA batteries if necessary.
- **Line of Sight:** Verify that there is a clear path between the remote control and the soundbar's IR receiver. Obstructions can block the signal.
- **Distance:** Ensure you are within the effective operating range of the remote control (typically up to 20 feet or 6 meters).
- **Soundbar Power:** Confirm that your Yamaha Soundbar is powered on and functioning correctly.

5.2 Intermittent Operation

- Weak batteries can cause intermittent operation. Replace them.
- Strong light sources (e.g., direct sunlight, fluorescent lights) can interfere with IR signals. Try operating the remote in different lighting conditions.

6. SPECIFICATIONS

Feature	Detail
Model Number	FSR78 ZV28960
Brand	ALLIMITY
Compatibility	Yamaha Soundbars (specific models listed in Section 1)
Special Feature	No Programming Required
Color	Black
Product Dimensions	5 x 2 x 0.5 inches (approximately)
Item Weight	1.48 ounces (without batteries)
Power Source	2 x AAA Batteries (not included)

7. WARRANTY AND SUPPORT

7.1 Warranty Information

This Allimity FSR78 ZV28960 replacement remote control typically comes with a 60-day warranty from the date of purchase. Please refer to your purchase documentation or contact the seller for specific warranty terms and conditions.

7.2 Customer Support

For any issues, questions, or support regarding your remote control, please contact the seller directly through the platform where the purchase was made. Provide your order number and a detailed description of the issue for efficient assistance.