

Tayfun B1ZKI18104/01

Tayfun Bosch B1ZKI18104/01 Air Conditioner Remote Control User Manual

Model: B1ZKI18104/01 | Brand: Tayfun

[Setup](#)

[Operation](#)

[Maintenance](#)

[Troubleshooting](#)

[Specifications](#)

INTRODUCTION

This user manual provides comprehensive instructions for the Tayfun Bosch B1ZKI18104/01 Air Conditioner Remote Control. Please read this manual carefully before using the remote control to ensure proper operation and to maximize its lifespan. This remote is designed to operate Bosch air conditioners with model number B1ZKI18104/01.

SETUP

1. Battery Installation

The remote control requires two AAA batteries (not included). Ensure correct polarity when inserting the batteries.

1. Locate the battery compartment cover on the back of the remote control.
2. Slide the cover downwards to open the compartment.
3. Insert two AAA batteries, matching the (+) and (-) terminals as indicated inside the compartment.
4. Slide the cover back into place until it clicks securely.



Image: Tayfun Bosch B1ZKI18104/01 remote control with its battery compartment open, showing the area where batteries are inserted.

2. Compatibility Check

Before use, verify that your air conditioner's model number matches B1ZKI18104/01. This number is typically found on a label on the right side of the indoor unit.

OPERATING INSTRUCTIONS

This section details the functions of the remote control buttons and display.

Remote Control Layout



Image: Front view of the Tayfun Bosch B1ZKI18104/01 remote control, showing the display and primary buttons.

- **Power Button (●):** Turns the air conditioner ON or OFF.
- **MODE Button:** Cycles through operating modes (e.g., Cool, Heat, Fan, Dry, Auto).
- **TEMP +/- Buttons:** Adjusts the desired temperature.
- **Fan Speed Button (●):** Adjusts the fan speed (e.g., Low, Medium, High, Auto).
- **Swing Button (●):** Controls the louver swing direction.
- **TIMER Button:** Sets the ON/OFF timer.
- **SET Button:** Confirms timer settings or other advanced functions.
- **CLEAR Button:** Cancels timer settings.
- **ROOM Button:** Displays room temperature.
- **I FEEL Button:** Activates the 'I Feel' function, which senses temperature at the remote's location.
- **SLEEP Button:** Activates sleep mode for comfortable night operation.

Display Indicators



Image: Close-up view of the Tayfun Bosch B1ZK118104/01 remote control's LCD screen, showing various icons and temperature settings.

- **Temperature Display:** Shows the set temperature in Celsius or Fahrenheit.
- **Mode Indicator:** Icons representing the current operating mode (e.g., snowflake for Cool, sun for Heat, fan for Fan).
- **Fan Speed Indicator:** Bars or icons indicating the selected fan speed.
- **Timer Indicator:** Appears when a timer is set.
- **Battery Indicator:** Shows battery level.
- **I FEEL Indicator:** Appears when the 'I Feel' function is active.
- **Sleep Mode Indicator:** Appears when sleep mode is active.

Basic Operation

1. **Turning On/Off:** Press the **Power** button once to turn the unit on, and again to turn it off.
2. **Selecting Mode:** Press the **MODE** button repeatedly until the desired operating mode (Cool, Heat, Fan, Dry, Auto) is displayed.
3. **Adjusting Temperature:** Use the **TEMP +** or **TEMP -** buttons to set your preferred temperature.
4. **Adjusting Fan Speed:** Press the **Fan Speed** button to cycle through available fan speeds.

MAINTENANCE

Cleaning the Remote Control

- Wipe the remote control with a soft, dry cloth.

- Do not use liquid cleaners, abrasive cleaners, or chemical sprays, as these may damage the remote's surface or internal components.

Battery Replacement

Replace batteries when the display becomes dim or the remote control's range decreases. Always replace both batteries at the same time with new AAA batteries. Remove batteries if the remote will not be used for an extended period to prevent leakage.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Remote control does not operate the air conditioner.	Batteries are dead or inserted incorrectly. Remote control is too far from the air conditioner. Obstruction between remote and air conditioner. Air conditioner is not powered on. Remote control is incompatible with the air conditioner.	Replace batteries, ensuring correct polarity. Move closer to the air conditioner (within 8 meters). Remove any objects blocking the signal path. Ensure the air conditioner is plugged in and powered on. Verify air conditioner model number (B1ZKI18104/01).
Display is dim or blank.	Batteries are low or dead.	Replace both AAA batteries.
Air conditioner does not respond to specific functions.	Function may not be supported by your air conditioner model.	Refer to your air conditioner's user manual for supported functions.

SPECIFICATIONS

- **Brand:** Tayfun
- **Model Number:** B1ZKI18104/01
- **Compatible Devices:** Bosch Air Conditioners (Model B1ZKI18104/01)
- **Connectivity Technology:** Infrared (IR)
- **Power Source:** 2 x AAA Batteries (not included)
- **Material:** High-quality ABS Plastic
- **Features:** Fast sensor, soft keypad

WARRANTY AND SUPPORT

For warranty information or technical support, please contact your retailer or the manufacturer directly. Keep your purchase receipt as proof of purchase.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question